## Installation instructions

Instructions de montage Montageanleitung Montage instruktie Istruzioni di montaggio Instrucciones de montaje Instruções de montagem Monteringsinstruktioner Monteringsvejledning Kokoonpano- ja kiinnitysohjeet Montaj yönergesi Οδηγίες συναρμολόγησης Instrukcja montazu Szerelési utasítások Návod k montázi ИНСТРУКЦИЯ ПО МОНТАЖУ Návod k montáži





IP 65








max 40°C

Description	ССТ	Optics	Weight	Wattage
BY121P LED207/740 PSU WB GR	4000K	WB	10 kg	197 W
BYI20P LEDI03/740 PSU WB GR	HOUOK	WB	5.7 kg	108 W


Accessories for optional installation I. BY120Z MB 2. BY121Z MB

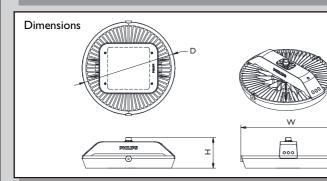


Туре	Dimension (mm)			
Туре	D	W	Н	
BY121P	457	466	150	
BYI20P	366	374	135	

	MCB (MAX)	No. of 197 W	No. of 108 W
1	I6A-C	5	6
4	I6A-B	3	4
	I0A-C	3	4

Inrush current peak	22 A (max)	
Mains current pulse time half peak	I ms	

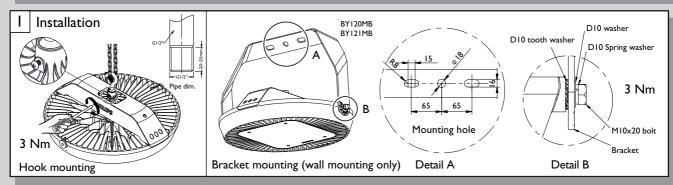

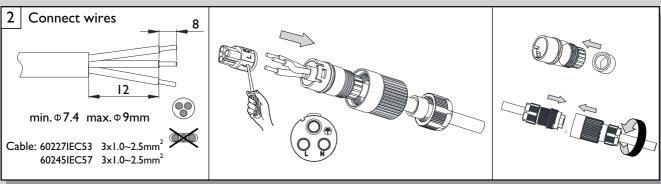



- 1. The luminaire shall be installed or maintained by a qualified electrician and wired in accordance with the latest IEE electrical regulations or the national requirements.
- 2. If the exteral flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid hazard.
- 3. Indoor use only.

