
 



**TECHNOTREND**

## Countdown Switch TCS 40

### OPERATING INSTRUCTIONS

Thank you for purchasing a Technotrend Countdown Switch.. Please read these instructions carefully and keep them for future reference.

- Connect the appliance to the outlet socket on the front of the Countdown Switch and then plug it in and switch on the power socket.
- Press the **ON** button. This will switch the appliance on and start the 40 minute countdown. The red indicator shows the time remaining.
- To reduce the time on press the  button. Each press will reduce the time on by 5 minutes. Any period between 5 and 40 minutes can be selected. If extra time is required, press the **ON** button again - this will give you another 40 minutes.
- The appliance can be switched off using the switch on the power socket or by pressing the  button repeatedly until the red indicator light goes out.

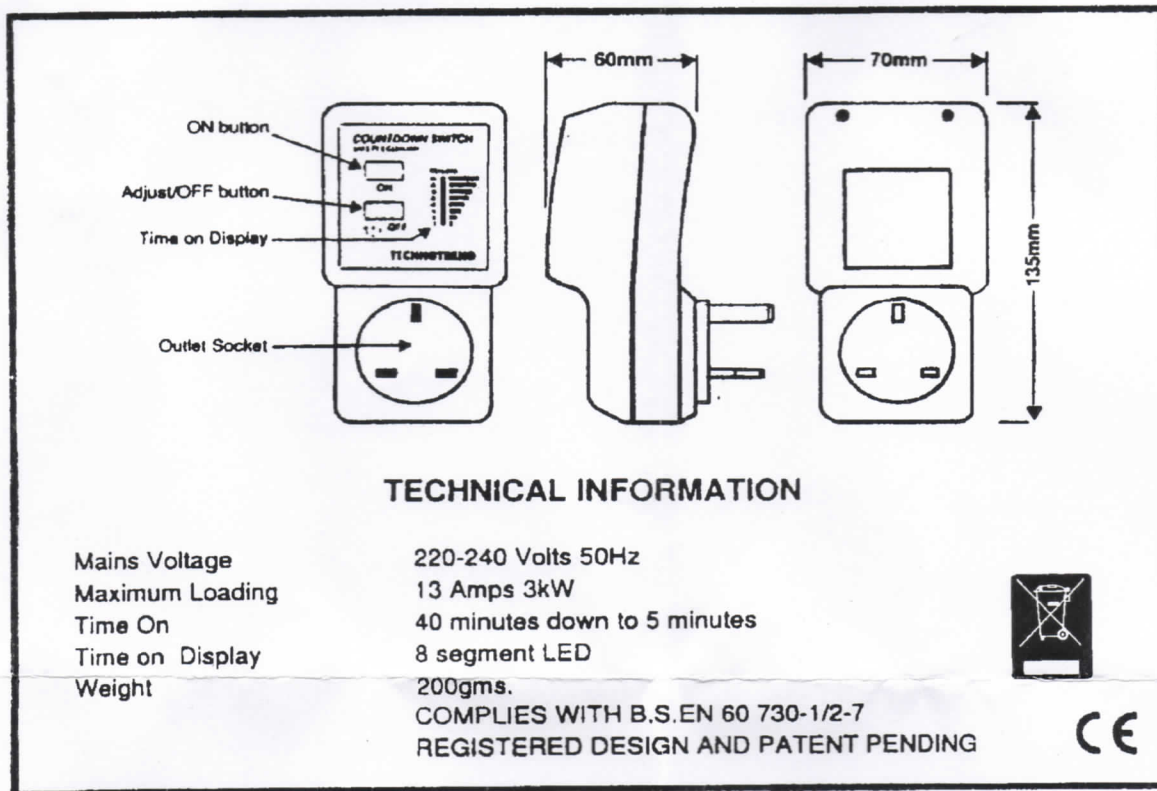

### Safety Precautions

**Connection to mains electricity should be made safely. If in any doubt consult a qualified electrician. This device is for indoor use only. It must not be used in bathrooms. Do not expose to water. Do not open case. Do not leave any appliance which requires supervision unattended.**

If the **ON** button does not operate immediately, leave the Countdown Switch plugged in for one or two minutes to top up the small charge stored within the unit. For Customer care, please ring 01252 513346

### Technotrend Ltd.

Unit B5, Armstrong Mall, Southwood Summit Centre, Farnborough, Hampshire. GU14 0NR. England

Tel: 01252 513346 Fax: 01252 547498

e-mail: david.roberts@technotrend.co.uk www.technotrend.co.uk