



WEAR TESTER FOR BRAKE PADS

FD-J1

SAM Outillage

10 rue Camille de RochetaillÃ©e
42000 Saint-Etienne - France

RCS Saint-Etienne B 338 002 231 | SAS au capital de 8 189 583 â,-

<https://www.sam-outillage.com/>

Photos and texts not contractually binding. Do not litter. Document generated on 2025-07-18 08:54:11





DESCRIPTION

WEAR TESTER FOR BRAKE PADS

The brake pad wear tester is an ingenious tool allowing you to save time when measuring the brake pad lining on vehicles without having to remove the wheel.

Can be used on internal and external brake pads.

Its slender shape allows you to place it easily behind the brake pad's backing plate and measure the distance between the underneath of the backing plate and the brake disk.

Scale calibrated for a normal backing plate with a thickness of 6 mm.

SAM Outillage

10 rue Camille de RochetaillÃ©e
42000 Saint-Etienne - France

RCS Saint-Etienne B 338 002 231 | SAS au capital de 8 189 583 â,-

<https://www.sam-outillage.com/>

Photos and texts not contractually binding. Do not litter. Document generated on 2025-07-18 08:54:11



SPECIFIC DATA

Designation	WEAR TESTER FOR BRAKE PADS
Sales reference	FD-J1
Weight (kg)	0.05
Width (mm)	50
Length (mm)	210
Height (mm)	15
Guarantee	C Consumable

Guarantee applied**C | Consumable**

The products in this category will not be replaced and are subject to normal wear phenomena.

>> [Find out more](#)

SAM Outillage

10 rue Camille de RochetaillÃ©e
42000 Saint-Etienne - France

RCS Saint-Etienne B 338 002 231 | SAS au capital de 8 189 583 Å,-

<https://www.sam-outillage.com/>

Photos and texts not contractually binding. Do not litter. Document generated on 2025-07-18 08:54:11

