

SIMATIC NET

Industrial Ethernet / PROFIBUS IE/PB LINK

Operating Instructions

IE/PB LINK PN IO
IE/PB LINK HA

Preface

Application and properties

1

LEDs, connectors, buttons

2

Installation, wiring,
commissioning, removal

3

Configuration and
operation

4

Diagnostics and
maintenance

5

Technical data

6

Approvals

7

Accessories

A

Documentation references

B

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions.

Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

Validity of this manual

This document contains information on the following products:

IE/PB LINK PN IO

Article number 6GK1 411-5AB10


Hardware product version 2

Firmware version V4.0.2

Link between Industrial Ethernet and PROFIBUS with PROFINET IO functionality



IE/PB LINK PN IO without BusAdapter

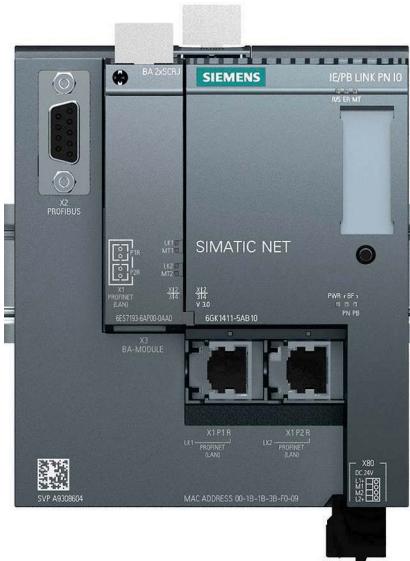

IE/PB LINK PN IO with BusAdapter

IE/PB LINK HA

Article number 6GK1 411-5BB00

Hardware product version 2

Firmware version V4.0.2

Gateway between Industrial Ethernet and PROFIBUS with PROFINET IO functionality, system redundancy S2 and configuration changes in redundant mode. Printed circuit board protected against dust and moisture by additional coating (conformal coating).



Figure 1 IE/PB-LINK HA without BA module connector

On the front of the housing, you will see the firmware version and the hardware product version printed as a placeholder "X". If the printed text is, for example, "X12", X is the placeholder for hardware product version 1.

Product names and abbreviations

- **LINK**

In this document, the name "LINK" is used in place of the full product name "IE/PB LINK PN IO" and "IE/PB LINK HA".

- **STEP 7**

The short form of the configuration tool is used for the following products:

- STEP 7 V5.x
- STEP 7 Professional

The short form "STEP 7" is used only when the product is self explanatory in the context.

- **PST**

Primary Setup Tool

As an alternative to STEP 7, you can use the PST to configure the address and PROFINET parameters.

- **SINEC PNI**

SINEC Primary Network Initialization

As an alternative to STEP 7, you can use SINEC PNI to configure the address and PROFINET parameters.

Purpose of the manual

This manual describes the properties of this module and supports you when installing and commissioning it.

The required configuration steps are described as an overview and there are explanations of the relationship between firmware functions and configuration.

You will also find information about the diagnostics options of the device.

Cross references

In this manual there are often cross references to other sections.

To be able to return to the initial page after jumping to a cross reference, some PDF readers support the command **<Alt>+<Left arrow>**.

New in this release

- Adaptations Safety instructions and approvals

Replaced edition

Edition 08/2020

Current manual release on the Internet

You will also find the current version of this manual on the following Internet page of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15406/man>)

Requirements for use of the module

You will find the requirements for using the module in the section Requirements for use (Page 24).

Innovations and compatibility with the previous version (6GK1 411-5AB00)

You will find the functions of the module in the section Communication services and other properties (Page 19).

Note

Make sure that you read the information relating to enhanced functions and restrictions in the section Replacing a module (Page 83).

Required experience

To install, commission and operate the LINK, you require experience in the following areas:

- Automation engineering
- STEP 7 V5.x / STEP 7 Professional

Sources of information and other documentation

You will find an overview of further reading and references in the Appendix Documentation references (Page 101).

License conditions

Note

Open source software

The product contains open source software. Read the license conditions for open source software carefully before using the product.

You will find license conditions in the following document on the supplied data medium:

- OSS_IEPB-LINK_99.pdf

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

<https://www.siemens.com/industrialsecurity> (<http://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

<https://www.siemens.com/cert> (<https://www.siemens.com/cert>).

Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

Note on firmware/software support

Check regularly for new firmware/software versions or security updates and apply them. After the release of a new version, previous versions are no longer supported and are not maintained.

SIMATIC NET glossary

The SIMATIC NET glossary describes terms that may be used in this document.

You will find the SIMATIC NET glossary in the Siemens Industry Online Support at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/50305045>)

Table of contents

Preface	3
1 Application and properties	13
1.1 Application, modes and operating modes.....	13
1.2 Function overview	17
1.3 Communication services and other properties	19
1.4 Performance data	22
1.4.1 Characteristics of S7 communication.....	22
1.4.2 Characteristics of data record routing.....	22
1.4.3 Total number of connections	22
1.4.4 Characteristic data for PROFINET IO	23
1.4.5 Characteristic data of the C-PLUG	23
1.4.6 Update time for parallel operation of PROFINET IO with other services	23
1.5 Requirements for use	24
2 LEDs, connectors, buttons	27
2.1 LED displays of the LINK.....	27
2.2 LED displays of the bus adapter.....	31
2.3 Interfaces, bus adapters, buttons	32
2.4 X80: External power supply.....	33
2.5 Maintenance mode.....	34
3 Installation, wiring, commissioning, removal	35
3.1 Important notes on using the device	35
3.1.1 Notices on use in hazardous areas.....	35
3.1.2 Notices for use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex	37
3.1.3 Notices regarding use in hazardous areas according to UL HazLoc	37
3.1.4 Notes on use in hazardous areas according to FM.....	38
3.2 Installation, removal and repairs in hazardous areas	38
3.3 Overview: Installation, configuration, commissioning.....	41
3.4 Installing and connecting.....	42
3.4.1 Installing and connecting up the LINK	42
3.4.2 PG/PC connector	43
3.4.3 C-PLUG	44
3.5 Commissioning and startup of the LINK.....	48
3.6 Changing from RUN to STOP	49

4	Configuration and operation	51
4.1	Security recommendations	51
4.2	IP configuration	53
4.2.1	Configuring the IP address	53
4.2.2	Restart after detection of a duplicate IP address in the network	54
4.2.3	Remove retentive storage of the IP address if there are duplicate addresses	54
4.3	IO cycle	54
4.4	Assign the address and network parameters with the Primary Setup Tool (PST)	55
4.5	Assigning the address and network parameters with SINEC PNI	58
4.5.1	Assigning IP parameters and PROFIBUS parameters and network settings	58
4.6	Configuration with STEP 7 V5.6	59
4.6.1	Supported SIMATIC S7 controllers	59
4.6.2	Configuring the LINK	59
4.6.3	Setting object properties on the LINK	61
4.6.4	Configuring the Ethernet interface	61
4.6.5	Configuring the PROFIBUS interface	62
4.6.6	Configuring bus adapters	62
4.6.7	Use as PROFINET IO device and as gateway	63
4.6.7.1	Commissioning the LINK as a PROFINET IO device	64
4.6.8	IE/PB LINK HA: Use in the H system	64
4.6.8.1	Use as S2 device	64
4.6.9	Use only as a gateway in standard operation	66
4.6.9.1	Creating a station and networking the LINK	66
4.6.9.2	Commissioning the LINK as a gateway	67
4.7	Configuration with STEP 7 Basic / Professional	67
4.7.1	Configuring the LINK	67
4.7.2	Use as a PROFINET IO device	68
4.7.3	Use only as a gateway in standard operation	70
4.7.4	Configuring bus adapters	70
4.7.5	Commissioning the LINK as a PROFINET IO device	71
4.7.6	Commissioning the LINK in standard mode	72
4.8	Identification and maintenance data	72
4.8.1	Reading out and entering I&M data	72
4.8.2	Data record structure for I&M data	75
4.9	Time-of-day synchronization	77
4.10	Overview: Access to the LINK as proxy	78
5	Diagnostics and maintenance	79
5.1	Diagnostics options	79
5.2	Diagnostic information	80
5.3	Clearing and for resetting to factory settings	80
5.4	Loading firmware	81
5.5	Upload tp PG/Upload from device	83
5.6	Replacing a module	83
5.6.1	Resetting address data	83

5.6.2	Replacing older modules	84
5.6.3	Replacing a module without PG/PC	84
5.7	SNMP	85
6	Technical data.....	87
6.1	Technical specifications of the LINK.....	87
6.2	Pinout of the Ethernet interface	88
6.3	Pin assignment of the PROFIBUS interface	89
7	Approvals.....	91
A	Accessories	97
A.1	BusAdapter.....	97
A.2	C-PLUGs.....	100
B	Documentation references.....	101
B.1	/1/	101
B.2	/2/	102
B.3	/3/	102
B.4	/4/	102
B.5	/5/	102
B.6	/6/	102
Index.....		103

Application and properties

1.1 Application, modes and operating modes

Basic function

The LINK is a gateway that connects the two network types Industrial Ethernet and PROFIBUS.

The LINK allows access to all PROFIBUS nodes connected to the underlying PROFIBUS network.

The LINK has the design of the SIMATIC ET 200SP device family.

Modes

You can use the LINK in the following modes:

- PROFINET IO proxy on single system (both LINKS)
- PROFINET IO proxy on the H-system (only with IE/PB LINK HA)
- Standard mode (gateway)

You specify the mode in the configuration. For the "PROFINET IO proxy" mode, you need to configure the LINK as a PROFINET IO device. This procedure is described in the section Configuration and operation (Page 51).

Note

Changing the mode with Clear/Reset

If you want to change the configured mode of the LINK, you need to clear/reset the LINK.

Note that this deletes the configuration data, see also the section Clearing and for resetting to factory settings (Page 80).

Gateway as PROFINET IO proxy

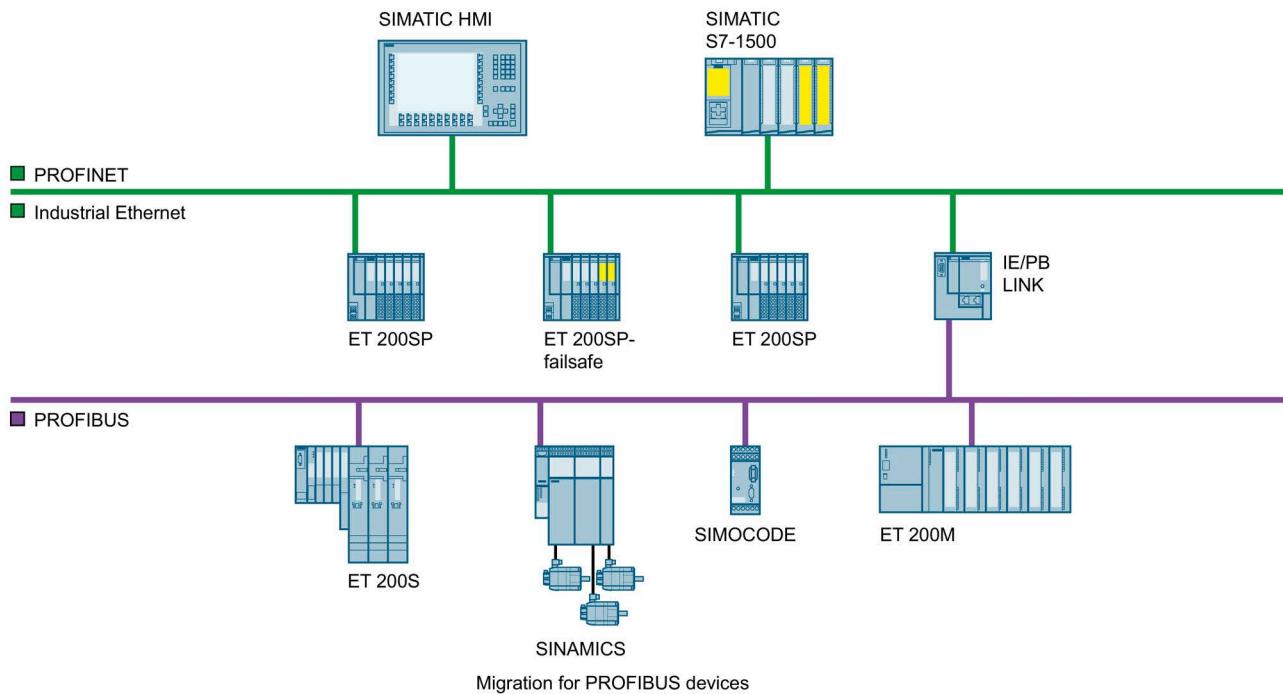


Figure 1-1 IE/PB LINK as PROFINET IO proxy

The LINK provides the connection between a PROFINET IO controller on Industrial Ethernet and PROFIBUS slaves visible as PROFINET IO devices via the LINK.

From the perspective of the PROFINET IO controller there is no difference between accessing PROFINET IO devices on Industrial Ethernet and DP slaves on PROFIBUS.

The LINK adopts the role of a proxy for the DP slaves connected to PROFIBUS.

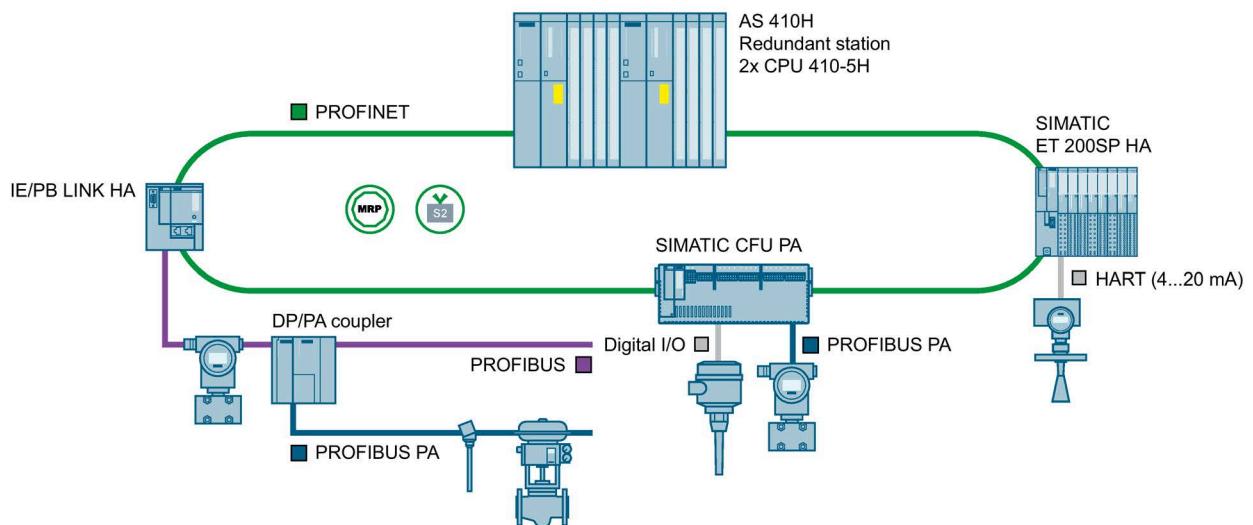


Figure 1-2 IE/PB LINK as PROFINET IO proxy on the H-system

As PROFINET IO proxy on the H-system (only IE/PB LINK HA), the LINK supports functions including:

- PG/OP communication, e.g. for loading programs and configuration data.
- Data record routing, among other things, for configuring field devices, for example with SIMATIC PDM.
- Gateway to a DP master system
- S7 routing with configured S7 connections between:
 - S7-1500 stations on both ends
 - A SIMATIC PC station at least on one end and an S7-300/S7-400 station, for example, on the other end

Gateway in standard operation

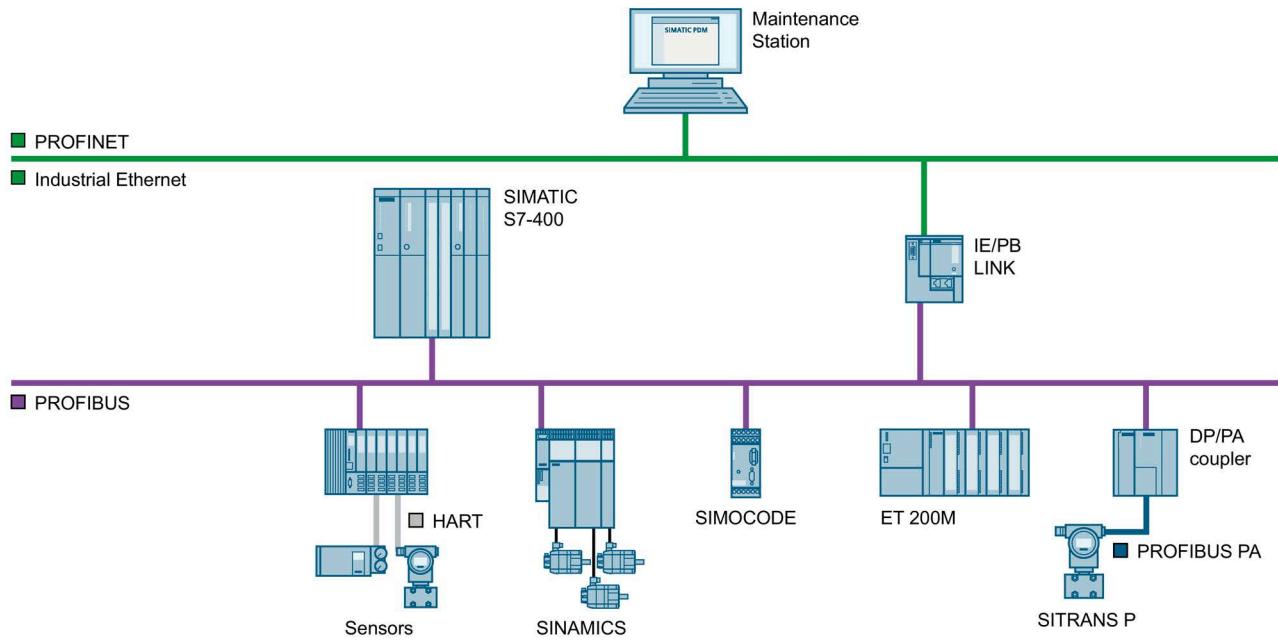


Figure 1-3 IE/PB LINK as gateway in standard operation

In standard operation, the LINK supports the following functions:

- PG/OP communication, e.g. for loading programs and configuration data.
- Data record routing, among other things, for configuring field devices, for example with SIMATIC PDM.
- Gateway to a DP master system
- S7 routing with configured S7 connections between:
 - S7-1500 stations on both ends
 - A SIMATIC PC station at least on one end and an S7-300/S7-400 station, for example, on the other end

You will find further details about the functions in the below.

Operating modes

The LINK has two operating modes:

- **Normal mode**

This is the mode that the LINK adopts during normal operation both in PROFINET IO proxy and in standard mode.

- **Maintenance mode**

Functions that can only be executed in maintenance mode:

- Loading firmware via PROFIBUS (SIMATIC NET Firmware Loader)
- Restart
- Resetting to factory settings

Maintenance mode

Access to the three functions of the maintenance mode depends on how the LINK is set to the maintenance mode.

- **Maintenance mode after startup**

After startup the LINK is in maintenance mode for 10 seconds and then changes automatically to normal mode. In this status only the following function can be executed:

- Loading firmware via PROFIBUS (SIMATIC NET Firmware Loader)

- **Maintenance mode by pressing the button**

After pressing the button the LINK is in maintenance mode for 5 minutes. The following functions are possible:

- Restart
- Resetting to factory settings

To change from normal mode to maintenance mode using the button, refer to the section Maintenance mode (Page 34).

1.2 Function overview

Overview of functions IE/PB LINK PN IO and IE/PB LINK HA

The individual LINK supports the following functions:

Function	IE/PB LINK PN IO V4	IE/PB LINK HA V4
PROFINET IO proxy	x	x
PROFINET IO proxy on H-system (system redundancy as S2 device)	-	x
Time synchronization via SIMATIC method	x	x
Time-of-day synchronization via NTP method	x	x
Data record routing	x	x

Function	IE/PB LINK PN IO V4	IE/PB LINK HA V4
S7 routing	x	x
Data query using SNMPv1	x	x
LLDP	x	x
Media redundancy MRP	x	x
Supported slaves: S7 / DP V0 / DP V1	x	x
Maximum number of DP slaves	64	125 As S2 device: 64
Support of DP/PA LINK as slave	x	x As S2 device: -
Maximum number of DP inputs/DP outputs	2048 bytes	4096 bytes As S2 device: 2048 bytes
Firmware download via STEP 7	x	x
PROFINET CiR/HCiR of the LINK	-	x
PROFINET CiR/HCiR for lower-level PROFIBUS slaves	-	x
PA-Ready *	-	-
Temperature range	0 °C to +60 °C	-40 °C to +70 °C
NAMUR NE21-compliant	-	x

* MRP, S2 redundancy, PROFINET CiR/H-CiR; you will find additional information on the Internet pages of Siemens Industry Online Support in the document: "PROFINET in SIMATIC PCS 7 - Guidelines and Blueprints".

Link: (<https://support.industry.siemens.com/cs/de/en/view/72887082>)

IE/PB LINK HA operation as S2 device on S7-400 H-system (S7-410 CPU) and PROFINET-CiR

With PROFINET-CiR in the H-system (IE/PB LINK HA operation as S2 device), the following changes are possible:

Function		
SNMP		
	Enable/disable SNMP	x
IO cycle		
Update time	Mode	x
	Update time	x
	Factor	x
Watchdog time	Number of accepted cycles with missing IO data	x
IO cycle DP slave	Mode (can only be changed on PROFINET line)	x
	Update time/factor/send clock (can only be changed on PROFINET line)	x
	Number of accepted cycles with missing IO data	x

Function		
Port 1/Port 2		
Topology	Partner port	x
Options	Transmission medium/disable	x
	Monitor	x
	Enable/disable autonegotiation	x
	End of detection of accessible nodes	x
	End of topology discovery	x

1.3 Communication services and other properties

Communication services

Industrial Ethernet

- **PROFINET IO**

The LINK can be configured as an IO device.

- **IP configuration - IPv4**

The essential features of IP configuration for the LINK:

- The LINK supports IP addresses according to IPv4.
- Address assignment:

The IP address, the subnet mask and the address of a gateway can be set manually in the configuration.

As an alternative, the IP address can be obtained from a DHCP server or by other means outside the configuration.

- **Media redundancy (MRP)**

Within an Ethernet network with a ring topology, the LINK supports the media redundancy protocol MRP. You can assign the role of "Client" to the LINK.

For more detailed information, refer to section IO cycle (Page 54) under "Minimum watchdog time".

- **SNMP**

As an SNMP agent, the LINK supports data queries using SNMP (Simple Network Management Protocol).

For more detailed information, refer to section SNMP (Page 85).

- **LLDP**

The LINK supports the Link Layer Discovery Protocol.

Only IE/PB LINK HA

- **PROFINET IO on the H-system**

The LINK can be configured as an IO device within an H-system.

- **System redundancy (S2)**

Within an Ethernet network, the LINK supports system redundancy S2. You will find information on the different system redundancies in the STEP 7 online help.

- **H-CiR**

If the link is located in an H-system as S2 device and if the link is connected redundantly, slaves can be added and removed during operation.

PROFIBUS

- **Supported slaves:**

- Slaves according to DP V0/DP V1
- Slaves according to S7 V0/S7 V1
- DP/PA LINK behind the IE/PB LINK PN IO or IE/PB LINK HA (not in the H-system)
- DP/FF LINK behind the IE/PB LINK PN IO or IE/PB LINK HA (not in the H-system)

- **Direct data exchange**

The LINK supports direct data exchange in its own DP Master system and in multimaster systems.

- **PROFISAFE**

The LINK supports applications with PROFISAFE.

- **Gateway to a DP master system**

The LINK serves as a gateway between Ethernet and PROFIBUS. The LINK is operated as an active node on a PROFIBUS network.

- **Data record gateway**

Field device parameter assignment (data record routing)

You can use the LINK as a router for data records intended for PROFIBUS nodes (including lower-level PA and HART devices), for example via SIMATIC PDM (Process Device Manager).

Other services and properties

- **MPI networking (only in standard operation)**

The LINK can be selected as a gateway in standard operation between an MPI subnet and an Ethernet subnet.

To do this, you need to network the PROFIBUS interface of the LINK with the MPI subnet.

- **PG/OP communication**

- Loading programs and configuration data
- Running test and diagnostics functions
- Operator control and monitoring (HMI systems) of a system.

- **S7 routing**

Cross-subnet S7 connections, for example for HMI operation.

The LINK forwards communication via S7 connections. This service is used, for example, by HMI applications (PC stations).

- **Time synchronization**

The LINK supports time synchronization using the following methods:

- SIMATIC mode
- NTP

The LINK uses the synchronized time-of-day, for example for forwarding and time stamping diagnostics buffer entries.

- **Firmware update**

The LINK supports firmware updates using the firmware loader or STEP 7; see section Loading firmware (Page 81).

- **C-PLUG as exchangeable storage medium for configuration data**

The LINK supports storage of configuration data on the optional exchangeable storage medium C-PLUG. This simplifies replacement of a defective module by simply inserting the C-PLUG in the new module.

- **Independent of media**

The LINK supports the connection of BusAdapter modules of the ET 200SP and ET200SP HA device family, for example for connecting to optical networks.

- **Redundant power supply**

The LINK can be connected to a redundant power supply.

1.4 Performance data

1.4.1 Characteristics of S7 communication

Table 1- 1 Number of connections for S7 communication

Characteristic	Explanation / values
Maximum number of S7 connections / HMI connections	32 For the S7 communication both configured and unconfigured S7 connections are used.

1.4.2 Characteristics of data record routing

Field device parameter assignment (data record routing)

You can use the LINK as a router for data records intended for field devices (PROFIBUS nodes): Devices that are not connected directly to PROFIBUS and therefore have no direct access to the field devices can send data records to the field devices for example via the LINK using the SIMATIC PDM (Process Device Manager).

The function is enabled as default.

Characteristic	Explanation / values
Maximum number of connections to the PROFIBUS nodes	32
Maximum data record size for parameters sent to PROFIBUS nodes via a connection	240 bytes

1.4.3 Total number of connections

Characteristic	Explanation / values
Maximum number of: <ul style="list-style-type: none"> • S7 connections • HMI connections • Data record routing connections 	In total 48 in any combination

Note

Note that for every S7 connection used a TCP/IP connection is occupied on industrial Ethernet.

1.4.4 Characteristic data for PROFINET IO

IE/PB LINK PN IO or IE/PB LINK HA in operation as S2 device

Characteristic	Explanation / values
Maximum number of DP slaves assigned to the LINK (DP Master). (PROFINET IO devices)	64
Maximum number of DP inputs	2048 bytes
Maximum number of DP outputs	2048 bytes

Table 1- 2 IE/PB LINK HA, when not operated as S2 device

Characteristic	Explanation / values
Maximum number of DP slaves assigned to the LINK HA (DP master). (PROFINET IO devices)	125
Maximum number of DP inputs	4096 bytes
Maximum number of DP outputs	4096 bytes

1.4.5 Characteristic data of the C-PLUG

Usable C-PLUGs

The LINK can be operated with the following C-PLUGs:

- **C-PLUG 32**

Memory:

– Total capacity: 32 MB

- **C-PLUG 256**

Memory:

– Total capacity: 256 MB

Recommendation: Avoid writing data cyclically. The flash area allows a limited number of write cycles.

You will find details in the section C-PLUGs (Page 100).

1.4.6 Update time for parallel operation of PROFINET IO with other services

Dependent on the number of PROFINET IO devices operated in the same Ethernet subnet:
STEP 7 automatically sets the lowest possible value for the update time for the IO devices.

When necessary, configure the update time for the IO devices via the properties of the PROFINET interface in STEP 7:

- STEP 7 V5.x
"IO Cycle"
- STEP 7 Basic / Professional
"Advanced options" > "Real time settings"

Configuring a higher update time

In the following cases, configure a higher update time:

- Alongside the cyclic communication via PROFINET IO, you use non-cyclic communications services, e.g. S7 connections, data record routing, HMI connections.
- Diagnostics or alarm frames occur often in the DP Master system.

Note

Do not set the shortest possible update time

In parallel operation do not set the shortest possible update time but select the next higher value proposed by STEP 7.

1.5 Requirements for use

Configuration and downloading

You can configure the LINK for all modes via Industrial Ethernet. If you use the device as a gateway in standard operation, it is also possible to download the configuration data via PROFIBUS.

STEP 7 versions

Below you will find the STEP 7 products required to configure the LINK. If both STEP 7 V5.x as well as STEP 7 Basic / Professional are named, one of the two products can be used as an alternative.

STEP 7 versions	Function
STEP 7 V5.3 SP1	IE/PB LINK PN IO with article number 6GK1 411-5AB00: The functionality of firmware version V1.0 can be used.
<ul style="list-style-type: none">• STEP 7 V5.3 + SP2 + Hotfix 1 + HSP 1007• STEP 7 Basic / Professional V11	IE/PB LINK PN IO with article number 6GK1 411-5AB00: The functionality of firmware version V2.x can be used.

STEP 7 versions	Function
<ul style="list-style-type: none"> STEP 7 V5.5 + SP4 + Hotfix 11 + HSP 1101 STEP 7 Basic / Professional V14 + Update 1 + Support package 0192 	IE/PB LINK PN IO with article number 6GK1 411-5AB10: The functionality of firmware version V3.0 can be used.
<ul style="list-style-type: none"> STEP 7 V5.6 + SP1 + HSP 1107 STEP 7 Basic / Professional V15.1 	IE/PB LINK PN IO with article number 6GK1 411-5AB10: The functionality of firmware version V3.1 can be used.
<ul style="list-style-type: none"> STEP7 V5.6 + SP2 + HF3 + HSP 1111 STEP 7 Basic / Professional V15.1 	IE/PB LINK HA with article number 6GK1 411-5BB00: <ul style="list-style-type: none"> STEP 7 V5.6: The functionality of firmware version V4.0 can be used. STEP 7 Professional as of V15.1: IE/PB LINK HA can be used as IE/PB LINK PN IO with the functions of IE/PB LINK PN IO firmware version V3.1.
<ul style="list-style-type: none"> STEP7 V5.6 + SP2 + HF4 + HSP 1113 STEP 7 Basic / Professional V16 	IE/PB LINK PN IO with article number 6GK1 411-5AB10: <ul style="list-style-type: none"> STEP 7 V5.6: The functionality of firmware version V4.0 can be used. STEP 7 Professional as of V16: The functionality of firmware version V3.1 can be used. IE/PB LINK HA with article number 6GK1 411-5BB00: <ul style="list-style-type: none"> STEP 7 Professional as of V16: The IE/PB LINK HA can be used as IE/PB LINK PN IO with the functions of the IE/PB LINK PN IO of firmware version V3.1.

Downloading the support package / HSP from the Internet

You will find the HSP or support package on the following Internet pages of Siemens Industry Support.

- STEP 7 V5.x

Link: (<https://support.industry.siemens.com/cs/ww/en/view/23183356>)

- STEP 7 Basic / Professional

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/14667/dl>)

Installation of Hardware Support Packages

- STEP 7 V5.x

Install the HSP in STEP 7 / HW Config with the "Options" > "Install Hardware Updates" menu command.

You will find information in the online help: Keyword "HSP" or "Hardware update".

After installing an HSP, you need to close and restart STEP 7.

- STEP 7 Basic / Professional

Install the support package in STEP 7 from the file system of the engineering station using the menu command "Options" > "Support packages".

The information system of STEP 7 will provide you with information: Keyword "Support packages".

Primary Setup Tool (PST)

Version V4.2.1 is required for configuration with the PST.

You can download the current version from the pages of Siemens Industry Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/19440762>)

STEP 7 Professional Trial

The IP and PROFIBUS parameters as well as the network settings can be assigned with STEP 7 Professional Trial as of V14 Update 1.

SINEC PNI

The IP and PROFIBUS parameters as well as the network settings can be assigned with SINEC PNI as of V1.0.

You can download the current version from the pages of Siemens Industry Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/26672/dl>)

LEDs, connectors, buttons

2.1 LED displays of the LINK

LEDs of the module

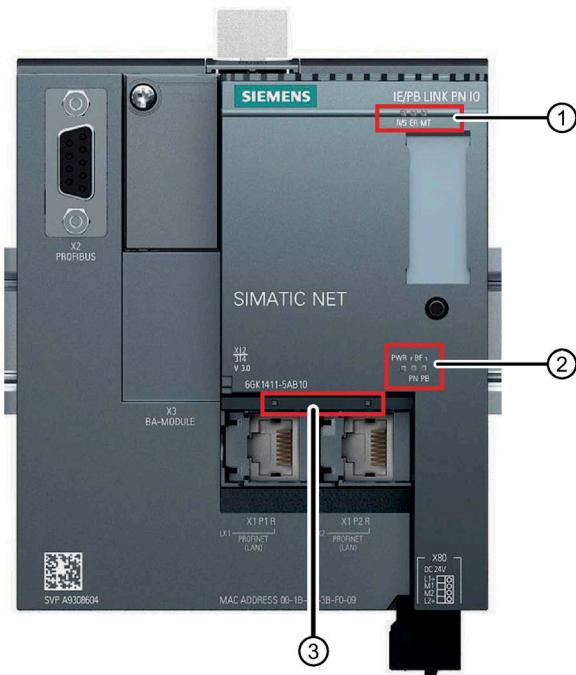


Figure 2-1 LEDs of the IE/PB Link

The module has the following LED groups for displaying the status:

No.	LED	Meaning
①	Top LED strip	The LEDs show the basic statuses, see table below,
②	Lower LED strip	
③	Connection status LEDs (LK1 / LK2)	Status of the connection to Ethernet / PROFINET The LEDs of the Ethernet ports are lit only when no BusAdapter is plugged in.

Table 2- 1 Top LED strip ① - basic statuses

LEDs / colors	Name	Meaning
	R/S	Operating status of the LINK (RUN/STOP)
	ER	Error
	MT	Maintenance

Table 2- 2 LED strip ② - basic statuses

LEDs / colors	Name	Meaning
	PWR	Power supply
	BF PN	PROFINET bus error
	BF PB	PROFIBUS bus error

Table 2- 3 LEDs of the Ethernet ports ③

LED / color	Name	Meaning
	LK1 / LK2	Status of the connection to Ethernet/PROFINET (When using a TS bus adapter "LK1 / LK2" are disabled.)

Display of the operating and communications statuses

The LED symbols in the following tables have the following significance:

Table 2- 4 Meaning of the LED symbols

Symbol				-
LED status	OFF	ON (steady light)	Flashing	LED status not relevant

The LEDs indicate the operating and communications status of the module according to the following scheme:

Table 2- 5 Display schemes for detailed module statuses

R/S (yellow / green)	ER (red)	MT (yellow)	PWR (green)	BF PN (red)	BF PB (red)	LK1/LK2 * (green)	Meaning
Startup, operating statuses, errors							
						-	Turn on (lamp test)
	-	-		-	-	-	Starting up (STOP → RUN)

R/S (yellow / green)	ER (red)	MT (yellow)	PWR (green)	BF PN (red)	BF PB (red)	LK1/LK2 * (green)	Meaning
-	-			-	-		Finding modules on Ethernet (LK1/LK2 flashes slowly, only during startup)
		-				-	<ul style="list-style-type: none"> • Distribution of the PROFINET configuration data during startup • BusAdapter configured but not plugged in. • BusAdapter plugged in but not configured.
		-				-	<ul style="list-style-type: none"> • Reset to factory settings • Status following a memory reset • Device new and started up
		-				-	Running (RUN) without error
	-	-		-	-	-	Stopping (RUN → STOP)
		-				-	Stopped (STOP)
		-		-	-	-	Stopped (STOP) with error
						-	Module fault / system error

Operating statuses, error (PROFIBUS and Ethernet)

		-					Running (RUN), Ethernet connection at port, no data traffic
		-				-	Running (RUN), problem with a module (DP slave)
		-				-	Running (RUN), module missing on PROFIBUS or is incorrectly configured (does not apply to PROFINET IO).
		-				-	<p>Running (RUN) with error:</p> <ul style="list-style-type: none"> • Error on PROFIBUS that also affects PROFINET IO (e.g. IO device). • Error on PROFINET IO that also affects PROFIBUS (e.g. proxy not put into operation).
		-			-	-	<p>Running (RUN) with error.</p> <ul style="list-style-type: none"> • Error on PROFINET IO No logical or physical connection to the PROFINET IO controller.
		-			-	-	<p>Running (RUN)</p> <ul style="list-style-type: none"> • No module on PROFIBUS.

2.1 LED displays of the LINK

R/S (yellow / green)	ER (red)	MT (yellow)	PWR (green)	BF PN (red)	BF PB (red)	LK1/LK2 * (green)	Meaning
		-		-		-	Running (RUN) <ul style="list-style-type: none"> Problems on PROFIBUS No PROFIBUS configuration to match system
Maintenance mode Firmware download, Reset							
	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Maintenance mode (after startup) Ready to load a firmware file via PROFIBUS. See section Loading firmware (Page 81).
				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Error loading firmware Status after failed firmware update
	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	When downloading firmware via PROFIBUS: Firmware is loaded after the restart.
	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Loaded firmware not activated.
-	-			-	-	-	Maintenance mode (after pressing the button)
-	-			-	-	-	Maintenance demanded: <ul style="list-style-type: none"> Problem with redundant power supply C-PLUG not detected or incorrectly formatted Program is adopted after restart, (Note: After plugging in a C-PLUG after a memory reset a second restart is necessary.) Duplicate database (internal memory and C-PLUG)

* The LEDs LK1/LK2 flash very quickly when there is data traffic. When there is a high load. It may not be possible to distinguish the flashing from steady light.

The LEDs LK1/LK2 are also used for the node flash test.

Note
LEDs LK1/LK2 turned off when BusAdapters are connected

If BusAdapters are connected to the LINK for the Ethernet connection, the LEDs LK1/LK2 of the LINK are turned off.

In this case, the LEDs of the BusAdapter need to be evaluated, see section LED displays of the bus adapter (Page 31).

2.2 LED displays of the bus adapter

Table 2- 6 Display scheme of the bus adapter "BA 2xRJ45"

LK1	LK2	Meaning
	-	Ethernet connection at port 1, no data traffic
	-	Data traffic at port 1
	-	No Ethernet connection at port 1
-		Ethernet connection at port 2, no data traffic
-		Data traffic at port 2
-		No Ethernet connection at port 2

Table 2- 7 Display scheme of the optical bus adapter "BA 2xSCRJ"

LK1	LK2	MT1	MT2	Meaning
	-	-	-	Ethernet connection at port 1, no data traffic
	-	-	-	Data traffic at port 1
	-	-	-	No Ethernet connection at port 1
-		-	-	Ethernet connection at port 2, no data traffic
-		-	-	Data traffic at port 2
-		-	-	No Ethernet connection at port 2
-	-		-	Maintenance demanded port 1
-	-		-	Port 1 without maintenance demand
-	-	-		Maintenance demanded port 2
-	-	-		Port 2 without maintenance demand

2.3 Interfaces, bus adapters, buttons

Interfaces X1 and X2

You will find the technical specifications and assignment of the Ethernet interface X1 and the PROFIBUS interface X2 in the section Technical data (Page 87).

Interface X3 for BusAdapter

At the top right beside the PROFIBUS interface, there is the interface X3 for BusAdapters of the ET 200SP/ET 200SP HA device family.

As an alternative, you can use this interface for connection to Ethernet if, for example, you require an optical connection to the LINK.

The interface is constructed in the ET 200SP design and pin assignment.

You will find further information in the catalog, in Siemens Industry Mall and in the system manual of the ET 200SP, see *4/1* (Page 102) and in the appendix BusAdapter (Page 97).

For information on configuring the BusAdapters in STEP 7 V5 refer to the section Configuring bus adapters (Page 62).

For information on configuring the BusAdapters in STEP 7 Professional refer to the section Configuring bus adapters (Page 70).

Note

Deactivated Ethernet interface

When you plug in a BusAdapter, the ports X1P1R / X1P2R of the integrated Ethernet interface of the LINK are deactivated.

Button

**EXPLOSION HAZARD**

Do not press the button if there is a potentially explosive atmosphere.

The button serves the following purposes:

- Changeover to maintenance mode
- Restart

After the restart a new firmware file can be loaded, see section Loading firmware (Page 81).

- Resetting to factory settings

For information on using the button and changing to the maintenance mode see the section Maintenance mode (Page 34).

2.4 X80: External power supply

External power supply

The connector X80 (socket) for the external 24 VDC power supply is located on the bottom of the LINK. The external power supply is redundant (optional use).

The power supply is connected to the LINK with the supplied 4-pin plug-in terminal block. The plug-in terminal block is designed so that it can only be inserted in one position in the X80 socket of the LINK.

The connector X80 has electronic reverse polarity protection.

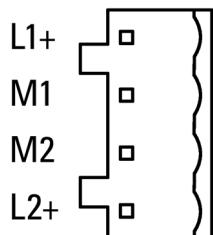


Figure 2-2 Redundant power supply

Table 2- 8 Pin assignment of the socket for the power supply

Labeling	Function
L1+	24 V DC
M1	Reference ground
M2	Reference ground
L2+	24 VDC

For information on the connector, refer to the section "AUTOHOTSPOT".

You will find further data on the power supply in section Technical data (Page 87).

2.5 Maintenance mode

Changing to the maintenance mode using the button

The functions of the maintenance mode are obtained as follows:

Table 2- 9 Functions of the maintenance mode

Operating mode before pressing the button	Pressing the button	Effect
Normal mode	Press the button for 3 seconds	The LINK changes to maintenance mode. You can use the following functions: <ul style="list-style-type: none"> • Restart • Resetting to factory settings Without any further actions, the LINK returns to the normal mode after 5 minutes.
Maintenance mode	Press the button for 1 second	The maintenance mode is extended by 5 minutes.
Maintenance mode	Press the button twice briefly within 5 seconds	The LINK restarts. Following this the LINK remains ready for new firmware for 10 seconds, see also section Loading firmware (Page 81).
Maintenance mode	Press the button for at least 10 seconds	The LINK is reset to the factory settings. Note that configuration data is deleted when you reset, refer to the section Clearing and for resetting to factory settings (Page 80).

Installation, wiring, commissioning, removal

Safety notices on the use of the device

Note the following safety notices when setting up and operating the device and during all associated work such as installation, connecting up or replacing the device.

3.1 Important notes on using the device

Overvoltage protection

NOTICE
<p>Protection of the external power supply</p> <p>If power is supplied to the module or station over longer power cables or networks, the coupling in of strong electromagnetic pulses onto the power supply cables is possible. This can be caused, for example by lightning strikes or switching of higher loads.</p> <p>The connector of the external power supply is not protected from strong electromagnetic pulses. To protect it, an external overvoltage protection module is necessary. The requirements of EN61000-4-5, surge immunity tests on power supply lines, are met only when a suitable protective element is used. A suitable device is, for example, the Dehn Blitzduktor BVT AVD 24, article number 918 422 or a comparable protective element.</p> <p>Manufacturer: DEHN+SOEHNE GmbH+Co.KG Hans Dehn Str.1 Postfach 1640 D-92306 Neumarkt, Germany</p>

3.1.1 Notices on use in hazardous areas

 WARNING
The device may only be operated in an environment with pollution degree 1 or 2 as described in EN/IEC 60664-1, GB/T 16935.1.



WARNING

EXPLOSION HAZARD

Do not press the button if there is a potentially explosive atmosphere.



WARNING

EXPLOSION HAZARD

DO NOT OPEN WHEN ENERGIZED.



WARNING

The equipment is designed for operation with Safety Extra-Low Voltage (SELV) by a Limited Power Source (LPS).

This means that only SELV / LPS complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 must be connected to the power supply terminals. The power supply unit for the equipment power supply must comply with NEC Class 2, as described by the National Electrical Code (r) (ANSI / NFPA 70).


If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.



WARNING

EXPLOSION HAZARD

DO NOT CONNECT OR DISCONNECT EQUIPMENT WHEN A FLAMMABLE OR COMBUSTIBLE ATMOSPHERE IS PRESENT.

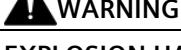

WARNING

EXPLOSION HAZARD

SUBSTITUTION OF COMPONENTS MAY IMPAIR SUITABILITY FOR CLASS I, DIVISION 2 OR ZONE 2.



WARNING

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

3.1.2 Notices for use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex



WARNING

Requirements for the cabinet

To comply with EU Directive 2014/34 EU (ATEX 114), UK Regulation SI 2016/1107 or the conditions of IECEx or CCC-Ex, the housing or cabinet must meet the requirements of at least IP54 (according to EN/IEC 60529, GB/T 4208) in compliance with EN IEC/IEC 60079-7, GB 3836.8.



WARNING

Suitable cables at high ambient temperatures in hazardous area

Use heat-resistant cables with an ambient temperature $\geq 60^{\circ}\text{C}$; these cables must be rated for an ambient temperature that is at least 20°C higher. The cable entries used on the housing must comply with the IP degree of protection required by EN IEC 60079-0 / GB 3836.1.



WARNING

Transient overvoltages

Take measures to prevent transient overvoltages of more than 40% of the rated voltage (or more than 119 V). This is guaranteed if you only operate the devices with SELV (safety extra-low voltage) or PELV (protective extra low voltage).

3.1.3 Notices regarding use in hazardous areas according to UL HazLoc



WARNING

EXPLOSION HAZARD

DO NOT DISCONNECT WHILE CIRCUIT IS LIVE UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.

3.1.4 Notes on use in hazardous areas according to FM



WARNING

EXPLOSION HAZARD

You may only connect or disconnect cables carrying electricity when the power supply is switched off or when the device is in an area without inflammable gas concentrations.

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.



WARNING

EXPLOSION HAZARD

For operation the device is intended to be installed within an enclosure/control cabinet. The inner temperature of the enclosure/control cabinet corresponds to the ambient temperature of the device. Use installation wiring connections with admitted maximum operating temperature of at least 30 °C higher than maximum ambient temperature.

3.2 Installation, removal and repairs in hazardous areas



WARNING

Unauthorized repair of devices in explosion-proof design

Risk of explosion in hazardous areas

- Repair work may only be performed by personnel authorized by Siemens.



CAUTION

Hot surfaces

Risk of burns during maintenance work on parts with a surface temperature above 70 °C (158 °F).

- Take appropriate protective measures, for example, wear protective gloves.
- Once maintenance work is complete, restore the touch protection measures.

⚠ WARNING**Impermissible accessories and spare parts**

Risk of explosion in hazardous areas

- Only use original accessories and original spare parts.
- Observe all relevant installation and safety instructions described in the manuals for the device or supplied with the accessories or spare parts.

⚠ WARNING**Cleaning the housing****• In hazardous areas**

Only clean the outer parts of the housing with a damp, but not wet, cloth.

• In non-hazardous areas

Only clean the outer parts of the housing with a dry cloth.

Do not use any liquids or solvents.

⚠ WARNING**Lack of equipotential bonding**

If there is no equipotential bonding in hazardous areas, there is a risk of explosion due to equalizing current or ignition sparks.

- Ensure that equipotential bonding is available for the device.

⚠ WARNING**Unprotected cable ends**

There is a risk of explosion due to unprotected cable ends in hazardous areas.

- Protect unused cable ends according to IEC/EN 60079-14.

⚠ WARNING**Improper installation of shielded cables**

There is a risk of explosion due to equalizing currents between the hazardous area and the non-hazardous area.

- Ground shielded cables that cross hazardous areas at one end only.
- Lay a potential equalization conductor when grounding at both ends.

⚠ WARNING

Insufficient isolation of intrinsically safe and non-intrinsically safe circuits

Risk of explosion in hazardous areas

- When connecting intrinsically safe and non-intrinsically safe circuits, ensure that the galvanic isolation is performed properly in compliance with local regulations (e.g. IEC 60079-14).
- Observe the device approvals applicable for your country.

⚠ WARNING

Unsuitable cables or connectors

Risk of explosion in hazardous areas

- Only use connectors that meet the requirements of the relevant type of protection.
- If necessary, tighten the connector screw connections, device fastening screws, grounding screws, etc. according to the specified torques.
- Close unused cable openings for electrical connections.
- Check the cables for a tight fit after installation.

⚠ WARNING

Improper disassembly

Improper disassembly may result in a risk of explosion in hazardous areas.

For proper disassembly, observe the following:

- Before starting work, ensure that the electricity is switched off.
- Secure remaining connections so that no damage can occur as a result of disassembly if the system is accidentally started up.

3.3 Overview: Installation, configuration, commissioning

Follow the steps as shown below. Installation and configuration can be performed independently of each other.

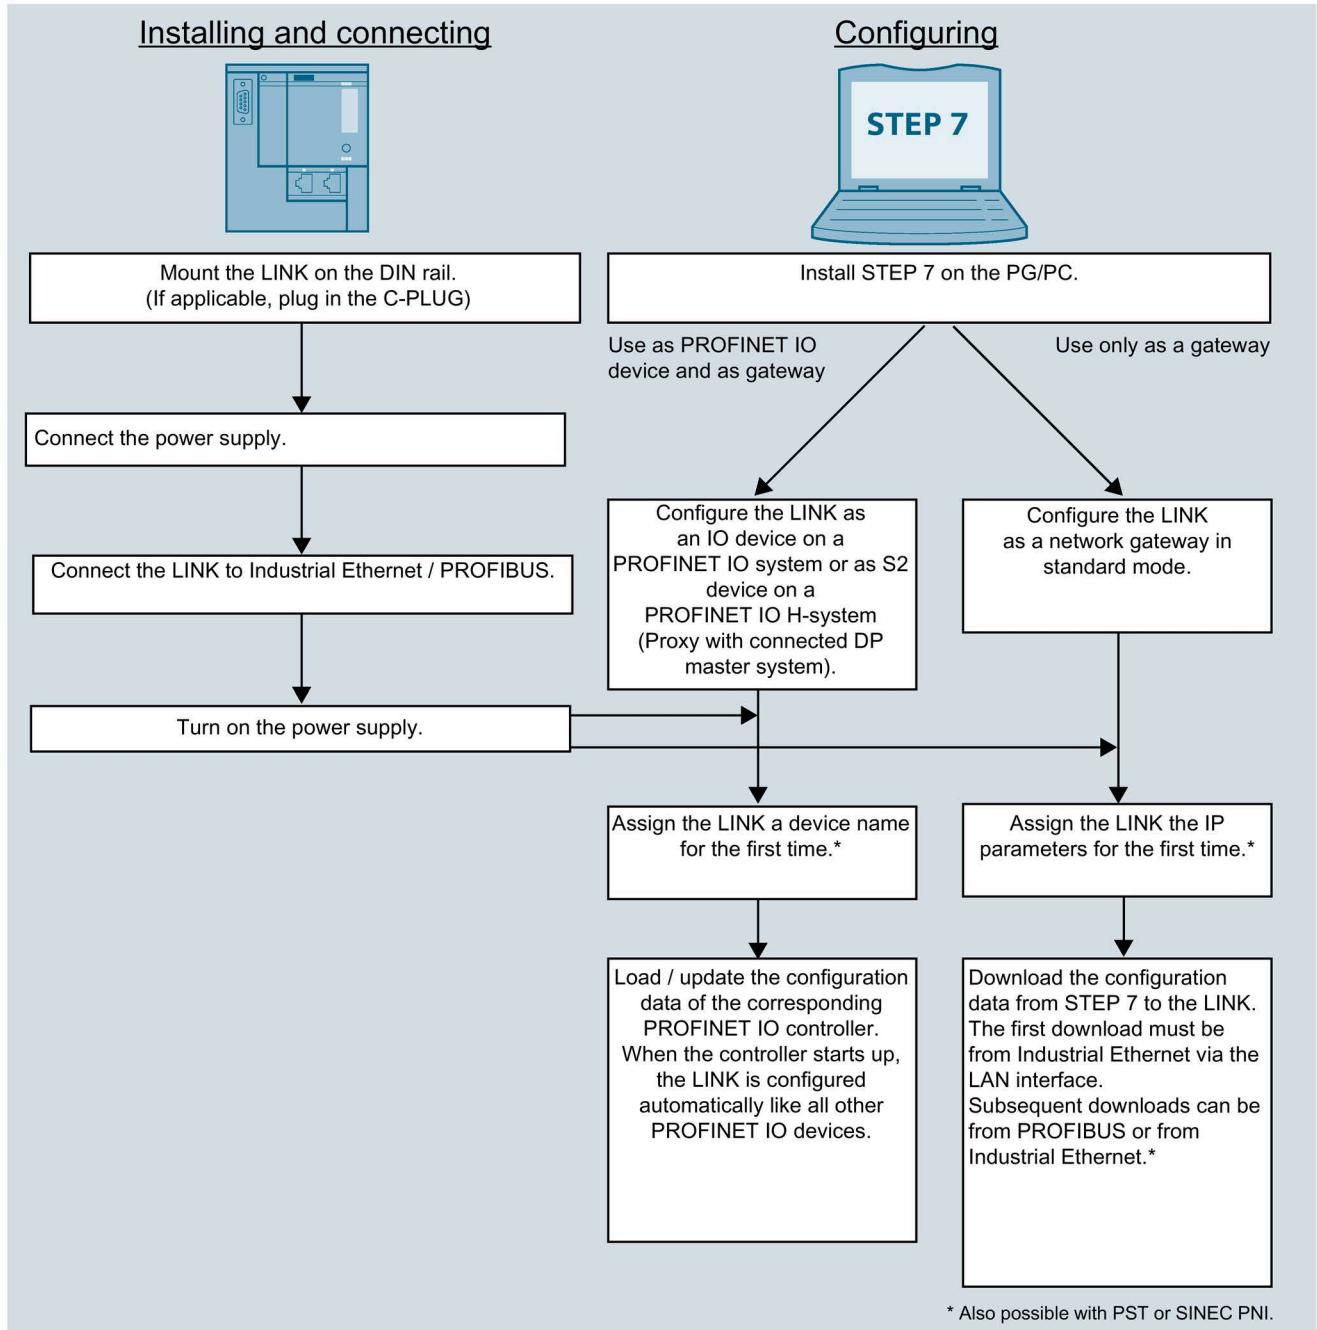


Figure 3-1 Installing, connecting up and configuring the LINK

3.4 Installing and connecting


NOTICE

Improper mounting

Improper mounting may damage the device or impair its operation.

- Before mounting the device, always ensure that there is no visible damage to the device.
- Mount the device using suitable tools. Observe the information in the respective section about mounting.

3.4.1 Installing and connecting up the LINK

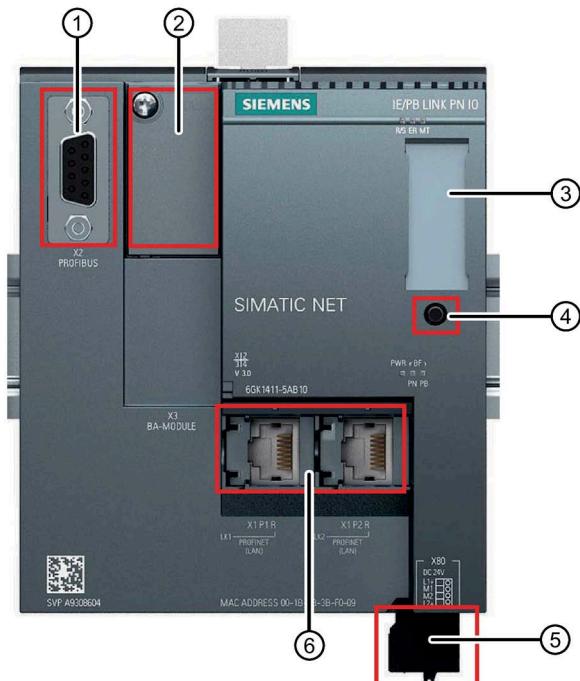

- ① X2: PROFIBUS interface: 1 x 9-pin D-sub female connector
- ② X3: Interface for ET 200SP/ET 200SP HA BusAdapter (behind the labeling plate)
- ③ X50: Receptacle for C-PLUG (behind the labeling plate);
- ④ Button. For information on the functions, refer to the section Interfaces, bus adapters, buttons (Page 32).
- ⑤ X80: Connector for the redundant power supply
- ⑥ X1: PROFINET interface, 2 x RJ-45 jacks with ring ports X1P1R / X1P2R

Figure 3-2 Connectors of the LINK

Installing and connecting up the LINK

Note

Only wire up the LINK with the power switched off.

Mount the LINK as follows:

1. Mount the LINK on the 35 mm DIN rail.
2. Connect the turned off power supply to the LINK. See section X80: External power supply (Page 33).
3. Connect the LINK to Industrial Ethernet via one of the RJ-45 jacks (X1).

As an alternative you can use BusAdapters at X3, that must be plugged in with the power turned off. When using BusAdapters, the Ethernet interface X1 is inactive.

4. When necessary, connect another component to the remaining free RJ-45 jack.
5. Connect the LINK CM to PROFIBUS.
6. Initially leave the power supply turned off.

Note

Using BusAdapters

If you use BusAdapters instead of the Ethernet interface of the LINK, do not initially plug in the BusAdapters. The procedure is described with the commissioning.

For information on further commissioning, refer to section Commissioning and startup of the LINK (Page 48).

3.4.2 PG/PC connector

To download the STEP 7 configuration data, you can connect the PG or the engineering station as follows:

- Via Ethernet (recommended)
 - To load the LINK in standard mode, you must first supply the LINK with an IP address, refer to the section Configuring the IP address (Page 53).
 - To download the configuration data of the LINK as a PROFINET IO proxy, you must first assign the LINK its PROFINET device name.
- Via PROFIBUS
 - To download via PROFIBUS, you must first supply the LINK with the PROFIBUS address.

For information on downloading see section Commissioning and startup of the LINK (Page 48).

3.4.3 C-PLUG

Exchangeable storage medium C-PLUG

For configuration data, the LINK has an internal memory. As an option, the device can be operated with a C-PLUG (Configuration Plug). You will find the memory capacity in the section Characteristic data of the C-PLUG (Page 23).

Area of application

The C-PLUG is an exchangeable medium for storage of the configuration data of the LINK. This means that the configuration data remains available if the device is replaced. It is possible to replace the module without a PG/PC.

The retentive parameters include the entire configuration data and the relevant mode:

How it works

Power is supplied by the LINK. The C-PLUG retains all data permanently when the power is turned off.

Flash components are used in the C-PLUG. Note the limited number of times you can write to the C-PLUG, see section Characteristic data of the C-PLUG (Page 23).

Inserting and removing the C-PLUG

Note

Insert and remove only when power is off

The C-PLUG must be inserted or removed only when the power is off!



Figure 3-3 Left: IE/PB-LINK PN IO without C-PLUG / Right: IE/PB-LINK PN IO with C-PLUG

The slot for the C-PLUG is located on the front: Insert the C-PLUG in the intended receptacle.

Remove the C-PLUG only if there is a fault on the basic device. Remove the C-PLUG from the receptacle using a screwdriver.

Operating response with the C-PLUG inserted

Status / procedure	Response when adopting data / actions	Result after startup
Operation without C-PLUG		
<ul style="list-style-type: none"> Internal memory empty No C-PLUG inserted 	<p>Configuration data is adopted from the STEP 7 project, Method of adoption dependent on the mode:</p> <ul style="list-style-type: none"> Use as a gateway: Configuration data is transferred using the download function of STEP 7. Use as PROFINET IO device: Configuration data is transferred from the PROFINET IO controller. 	The LINK runs with the configuration data transferred to the internal memory. ¹⁾
Operation with C-PLUG		
<ul style="list-style-type: none"> Internal memory empty Empty C-PLUG is plugged in 	<p>Configuration data is adopted from the STEP 7 project, Method of adoption dependent on the mode:</p> <ul style="list-style-type: none"> Use as a gateway: Configuration data is transferred using the download function of STEP 7. Use as PROFINET IO device: Configuration data is transferred from the PROFINET IO controller. 	The LINK runs with the configuration data transferred to the C-PLUG. ¹⁾
<ul style="list-style-type: none"> Internal memory empty C-PLUG with valid configuration data is plugged in.²⁾ 	Result after startup; The LINK runs with the configuration data stored on the C-PLUG.	The LINK runs with the configuration data existing on the C-PLUG. ¹⁾
LINK has a C-PLUG inserted after operating without a C-PLUG		
<ul style="list-style-type: none"> Internal memory with configuration data C-PLUG with different but valid configuration data is plugged in.²⁾ LINK is to run with data from the C-PLUG instead of with the internal data. 	<p>The power for the LINK must be turned off and on again.</p> <p>The LINK starts up with the configuration data on the C-PLUG.</p> <p>The configuration data in the internal memory is deleted.</p>	The LINK runs with the configuration data adopted from the C-PLUG. ¹⁾

3.4 Installing and connecting

Status / procedure	Response when adopting data / actions	Result after startup
<ul style="list-style-type: none"> Internal memory with configuration data C-PLUG is plugged in. Configuration data is to be adopted on the C-PLUG from internal memory. 	<p>The following situations are possible:</p> <ul style="list-style-type: none"> The C-PLUG has data written to it: Format the C-PLUG using special diagnostics. The data on the C-PLUG is deleted. The LINK then restarts. The C-PLUG is brand new (without device ID): Turn the power supply for the LINK off and on again. <p>When the LINK starts up, the configuration data is loaded on the C-PLUG from the internal memory. The configuration data in the internal memory is deleted.</p>	<p>The LINK runs with the configuration data transferred to the C-PLUG from the internal memory.¹⁾</p>
<ul style="list-style-type: none"> Internal memory with configuration data C-PLUG with valid but incorrect configuration data is plugged in accidentally. Both sets of configuration data (internal memory and C-PLUG) should be retained, LINK should continue to run with internal configuration data. 	<p>Back up the configuration data of the internal memory with STEP 7 (with "Upload from device").³⁾</p> <p>Turn off the power to the LINK and remove the incorrectly inserted C-PLUG.</p> <p>Turn on the power to the LINK and download the configuration data backed up in STEP 7 to the LINK.</p>	<p>The LINK continues to run with the internal configuration data.</p>
<ul style="list-style-type: none"> Internal memory with configuration data C-PLUG with valid but incorrect configuration data is plugged in accidentally. Both sets of configuration data (internal memory and C-PLUG) should be retained, LINK should continue to run with internal configuration data. 	<p>The power to the LINK must be switched off.</p> <p>Remove the incorrectly inserted C-PLUG.</p> <p>Insert a C-PLUG without a device ID (e.g. brand new).</p> <p>Switch on the power of the LINK.</p> <p>The data previously stored in the internal memory is transferred to the new C-PLUG.</p>	<p>The LINK continues to run with the original internal configuration data, which is now located on the new C-PLUG.</p> <p>The incorrectly inserted C-PLUG still has its original data.</p>

¹⁾ When used as a PROFINET IO device: Only the PROFINET device name and the I&M data are stored retentively on the C-PLUG. Configuration data is transferred from the PROFINET IO controller at each new startup and entered in the temporary memory.

²⁾ If the C-PLUG for the LINK does not contain valid configuration data, the device does not start up. In this case, use the diagnostics of STEP 7 for further clarification and possibly to format the C-PLUG.

³⁾ Only possible when using as "Gateway in standard mode".

Backing up configuration data of the LINK

If the C-PLUG has not been written to (factory status), when the device starts up all configuration data of the LINK is automatically backed up.

Changes to the configuration during operation are also backed up on the C-PLUG.

A basic device with an inserted C-PLUG uses the configuration data of the inserted C-PLUG when it starts up unless the internal memory is full. This is, however, only possible when the data from a compatible device type was written to the C-PLUG.

Replacing scenario

Saving the configuration data on the C-PLUG makes it simple to replace the LINK. If a LINK needs to be replaced, the C-PLUG is simply taken from the replaced LINK and inserted in the replacement device. After it starts up the first time, the replacement automatically has the same configuration data as the replaced device.

C-PLUG formatting

Note

Using the C-PLUG of a LINK with firmware version < V3.0

If you use a C-PLUG that has already been used in a LINK with firmware version < V3.0, the C-PLUG can only be read. To have configuration data transferred to it, this C-PLUG must be reformatted.

Use only a C-PLUG that is formatted for the IE/PB LINK PN IO or IE/PB LINK HA.

A C-PLUG that has already been used in a different device type and that was formatted for this device type must first be formatted for the LINK. After formatting, all data areas are deleted on the C-PLUG and the LINK restarts.

The configuration data is adopted only after reloading or after turning on the power supply again.

To format use STEP 7 special diagnostics > Operating mode > C-PLUG. For more detailed information, refer to the online help in the topic "General Diagnostics Functions - C-PLUG Diagnostics Object".

Diagnostics

Malfunctions are signaled using diagnostics mechanisms of the device (LEDs "ER" and "MT"):

- Inserting a C-PLUG that contains the configuration data of an incompatible device type.
- General malfunctions of the C-PLUG
- Duplicate database

3.5 Commissioning and startup of the LINK

Requirements for commissioning

Prior to commissioning the LINK, make sure that the following conditions are met:

- The system is completely installed.
- The communications partners are reachable.
- The STEP 7 configuration data is complete.
- When using a C-PLUG: The C-PLUG is plugged in.
- The PG or engineering station with the STEP 7 configuration data is connected to the LINK.

See section PG/PC connector (Page 43) for information on this.

Startup behavior of the LINK

Commission the LINK by first turning on the power supply. During startup the LINK behaves as follows:

- When starting up the first time (brand new) the LINK searches for the configuration data in the internal memory.

The LINK changes to STOP and shows the LED pattern "Reset to factory settings", see also section LED displays of the LINK (Page 27).

- When starting up after a phase of operation the LINK searches for the configuration data either on the C-PLUG (if plugged in) or in the internal memory.

For information on the startup with C-PLUG refer to the section C-PLUG (Page 44).

After startup the subsequent procedure depends on the required mode.

Commissioning the LINK

After startup - depending on the mode of the LINK - follow the steps below:

LINK in standard mode

You have the following options:

- Optional: Assign or change the IP address
- Download the configuration data

LINK as PROFINET IO proxy

In this mode, the following first step is necessary:

- Assign the LINK the PROFINET device name

Information on commissioning

Depending on the configuration tool you are using, you will find information on commissioning in the following sections:

- STEP 7 V5
 - LINK as PROFINET S2 device on the H-system
See section IE/PB LINK HA: Use in the H system (Page 64).
 - LINK as PROFINET IO device
See section Commissioning the LINK as a PROFINET IO device (Page 64).
 - LINK as gateway in standard mode
See section Commissioning the LINK as a gateway (Page 67).
- STEP 7 Professional
 - LINK as PROFINET IO device
See section Commissioning the LINK as a PROFINET IO device (Page 71).
 - LINK as gateway in standard mode
See section Commissioning the LINK in standard mode (Page 72).

For information on saving the configuration data when turning off the power supply and when changing from RUN to STOP, see section Changing from RUN to STOP (Page 49).

Commissioning when using BusAdapters

If you use BusAdapters instead of the Ethernet interface, follow the steps below during commissioning:

1. First download the configuration data.
2. Then turn off the power.
3. Now plug in the BusAdapter connected to the network.
4. Turn on the power.

Only now is the interface X3 of the BusAdapter active and the ports X1P1R / X1P2R of the integrated Ethernet interface are deactivated.

3.6 Changing from RUN to STOP

In the standard mode of the LINK you can change the operating mode of the LINK between RUN and STOP with STEP 7.

STOP → RUN

The LINK loads configured and/or downloaded data into the work memory and then changes to RUN mode.

RUN → STOP

With a transition phase (LED pattern "Stopping (RUN → STOP)"), the LINK changes to STOP mode. See section LED displays of the LINK (Page 27).

- Established routed S7 connections are not terminated.
- The following functions are disabled:
 - PROFINET IO
 - Time-of-day synchronization
- The following functions remain enabled:
 - Downloading the configuration data and diagnostics of the LINK
System connections for configuration, diagnostics and PG channel routing still exist.
 - Routing function

Power ON → OFF → ON

Note

Configuration data when turning off the power

- **LINK as PROFINET IO device**

Configuration data loaded during startup is not stored retentively.

The configuration data downloaded from the PROFINET IO controller is not stored retentively by the LINK. After switching the voltage of the LINK off and on, all the configuration data except for the device name and I&M data is deleted.

During startup the configuration data is once again downloaded from the PROFINET IO controller.

- **LINK in standard mode**

All stored data is retained after turning off the power and when the power is turned on the LINK starts up as configured.

Configuration and operation

4.1 Security recommendations

Keep to the following security recommendations to prevent unauthorized access to the system.

General

- You should make regular checks to make sure that the device meets these recommendations and other internal security guidelines if applicable.
- Evaluate your plant as a whole in terms of security. Use a cell protection concept with suitable products.
- Do not connect the device directly to the Internet. Operate the device within a protected network area.
- Keep the firmware up to date. Check regularly for security updates of the firmware and use them.
- Check regularly for new features on the Siemens Internet pages.
 - Here you will find information on network security:
Link: (<http://www.siemens.com/industrialsecurity>)
 - Here you will find information on Industrial Ethernet security:
Link: (<http://w3.siemens.com/mcms/industrial-communication/en/ie/industrial-ethernet-security/Seiten/industrial-security.aspx>)
 - You will find an introduction to the topic of industrial security in the following publication:
Link:
(http://w3app.siemens.com/mcms/infocenter/dokumentencenter/sc/ic/InfocenterLanguagePacks/Netzwerksicherheit/6ZB5530-1AP01-0BA4_BR_Netzwerksicherheit_en_112015.pdf)

Physical access

Restrict physical access to the device to qualified personnel.

Network attachment

Do not connect the LINK directly to the Internet. If a connection from the LINK to the Internet is required, arrange for suitable protection before the LINK, for example a SCALANCE S with firewall.

Protocols

Secure and non-secure protocols

- Only activate protocols that you require to use the system.
- For security-relevant applications, disable SNMP.
- Use secure protocols when access to the device is not prevented by physical protection measures.

List of available protocols

The following is a list of all available protocols and their ports through which the LINK can be accessed.

Table 4- 1 List of available protocols

Service/ Protocol	Protocol/ port number	Configurable port	Default port status	Authentication	Encryption
DHCP-Client	UDP/68	✓	Open	No	No
NTP-Client	UDP/123	✓	Closed	No	No
S7 communication	TCP/102	-	Open	No	No
SNMP	UDP/161	✓	Open	No	No
PROFINET CM	UDP/34964	✓	Open	No	No
PROFINET RPC	UDP/49152 to 65535	✓	Open	No	No

Explanation for table:

Service/Protocol

Protocols that the device supports.

Protocol/port number

Port number assigned to the protocol.

Default port status

- Open

The port is open at the start of the configuration.

- Closed

The port is closed at the start of the configuration.

Configurable port

- ✓

The port status can be changed.

- --

The port status cannot be changed.

Authentication

Specifies whether the communication partner is authenticated.

Encryption

Specifies whether the transfer is encrypted.

4.2 IP configuration

4.2.1 Configuring the IP address

Alternative ways of assigning the address parameters

You can decide the route and the method with which the IP address of the local interface is obtained and assigned.

- Set IP address in the project

This is the default setting. You specify the IP address when the device is networked. The IP address CP is therefore fixed. With this option, you need to configure the communication connections.

The configuration can be achieved in the following ways:

- PST, see section Assign the address and network parameters with the Primary Setup Tool (PST) (Page 55).

As an alternative to STEP 7, you can use the PST to assign the address and PROFINET parameters.

- SINEC PNI, see section Assigning the address and network parameters with SINEC PNI (Page 58).

As an alternative to STEP 7, you can use the SINEC PNI to assign the address and PROFINET parameters.

- STEP 7 V5, see section Configuration with STEP 7 V5.6 (Page 59).

- STEP 7 Basic / Professional, see section Configuration with STEP 7 Basic / Professional (Page 67).

- Obtain IP address from a DHCP server

This is an alternative method if the LINK is operated in standard mode as a gateway.

With this, you specify that the IP address is obtained from a DHCP server when the device starts up. To do this, the MAC address of the interface or the client ID that can be entered in the configuration or the PROFINET device name is transferred to the DHCP server.

You will find further information in the configuration manual for S7 CPs /3/ (Page 102).

4.2.2 **Restart after detection of a duplicate IP address in the network**

Behavior when the LINK starts up

To save you time-consuming troubleshooting in the network, during startup the LINK detects double addressing in the network.

If the LINK recognizes double addressing during startup, it changes to the RUN status and can no longer be reached via the IP parameters. The LEDs "ER" and "R/S" are lit and the LED "BF PN" flashes.

4.2.3 **Remove retentive storage of the IP address if there are duplicate addresses**

The IP address and the PROFINET device name of the LINK remain stored retentively:

If, for example during startup, the LINK detects a duplicate address in another network, the LINK is not connected to the network. The LEDs "ER" and "R/S" are lit and the LED "BF PN" flashes. The LINK is not reachable via the IP parameters.

To connect the LINK to the network, remove the retentively stored IP address as follows:

Using DCP with PST or SINEC PNI, set the IP address of the LINK to 0.0.0.0 without configuration or set a new address.

This removes the retentively stored IP address of the LINK. The LINK can be connected into the network.

4.3 IO cycle

Settings for IO cycle and IO cycle DP slaves

Make the settings for the IO cycle in the following two tabs of the PN IO properties:

- For the LINK in the "IO cycle" tab.
- For the DP slaves (representative of all DP slaves on the PROFIBUS line) in the "IO cycle DP slaves" tab.

Watchdog time

Number of accepted update cycles with missing IO data

To adapt to problem situations, you can change the default number of accepted update cycles with missing IO data (for example during commissioning). The watchdog time is indirectly changed by this setting. In much the same way as with a PROFIBUS system, violation of the watchdog time causes an error reaction (IO device switches the outputs to a safe state).

Watchdog time [ms]

Product of "update time" x "number of accepted update cycles with missing IO data". Maximum watchdog time: 1.92 seconds.

Minimum watchdog time

With ring interconnection of the PROFINET IO devices (MRP), watchdog time must be significantly more than 200 ms, because reconfiguration of the ring takes 200 ms on failure of a device.

4.4 Assign the address and network parameters with the Primary Setup Tool (PST)

With PST you assign the IP parameters and the PROFIBUS parameters to the LINK for the first time.

You then download the configuration data to the LINK.

Note the required version of the PST, see section Requirements for use (Page 24).

Starting PST and setting the PC access

1. Connect the PC to the LINK.
2. Start the PST using the start menu:
Siemens Automation > SIMATIC > Primary Setup Tool > Primary Setup Tool
3. First set the access point of the PC with:
"Settings" > "Set PG/PC Interface"
4. Select the interface to be used and confirm the dialog.

Configuring and loading the LINK

1. Search the network for the LINK: "Network" > "Browse"
2. In the left-hand window, double-click on the displayed LINK.
The PROFIBUS and Ethernet interface of the LINK are displayed.
3. Select the Ethernet interface.
In the right-hand part of the dialog, the properties of the Ethernet interface are displayed.

4.4 Assign the address and network parameters with the Primary Setup Tool (PST)

4. Enter the values for the IP address and the subnet mask.

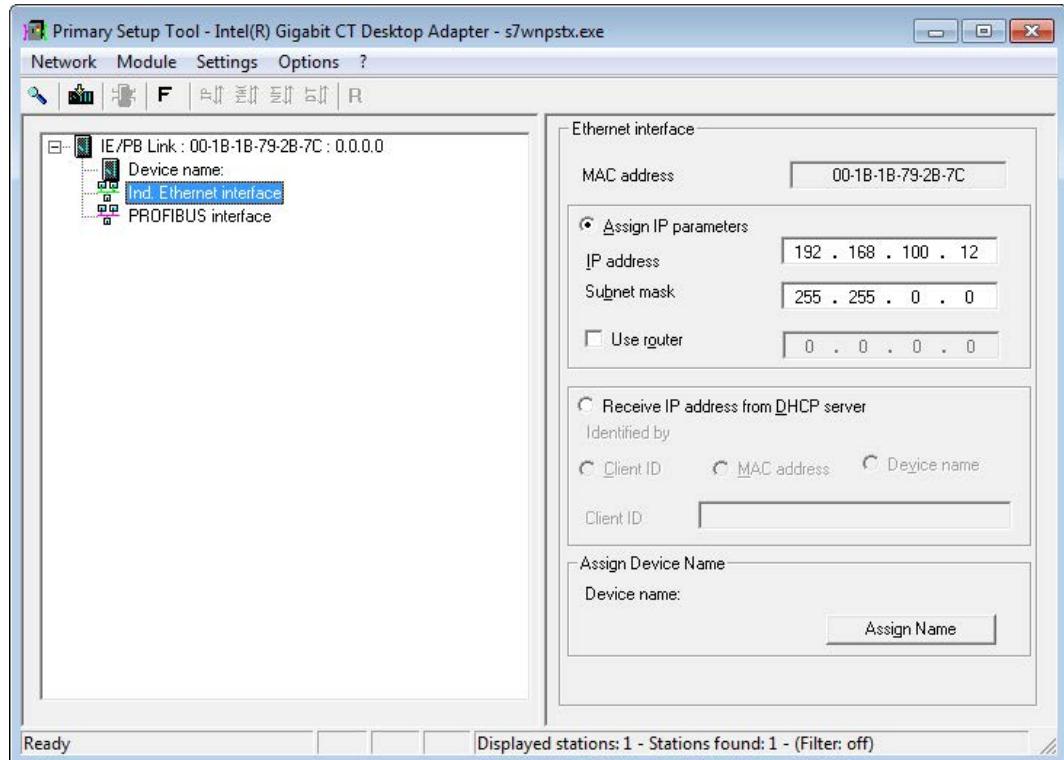


Figure 4-1 Ethernet interface: Entering the IP address and subnet mask

5. Select the PROFIBUS interface.

In the right-hand part of the window, the network settings of the PROFIBUS interface are displayed.

4.4 Assign the address and network parameters with the Primary Setup Tool (PST)

6. From the drop-down lists, select the required values for the network settings.

If you set a user-defined profile of the bus parameters:

- Click the "Bus Parameters" button.
- Enter the required bus parameters.
- Apply the data by clicking the button.

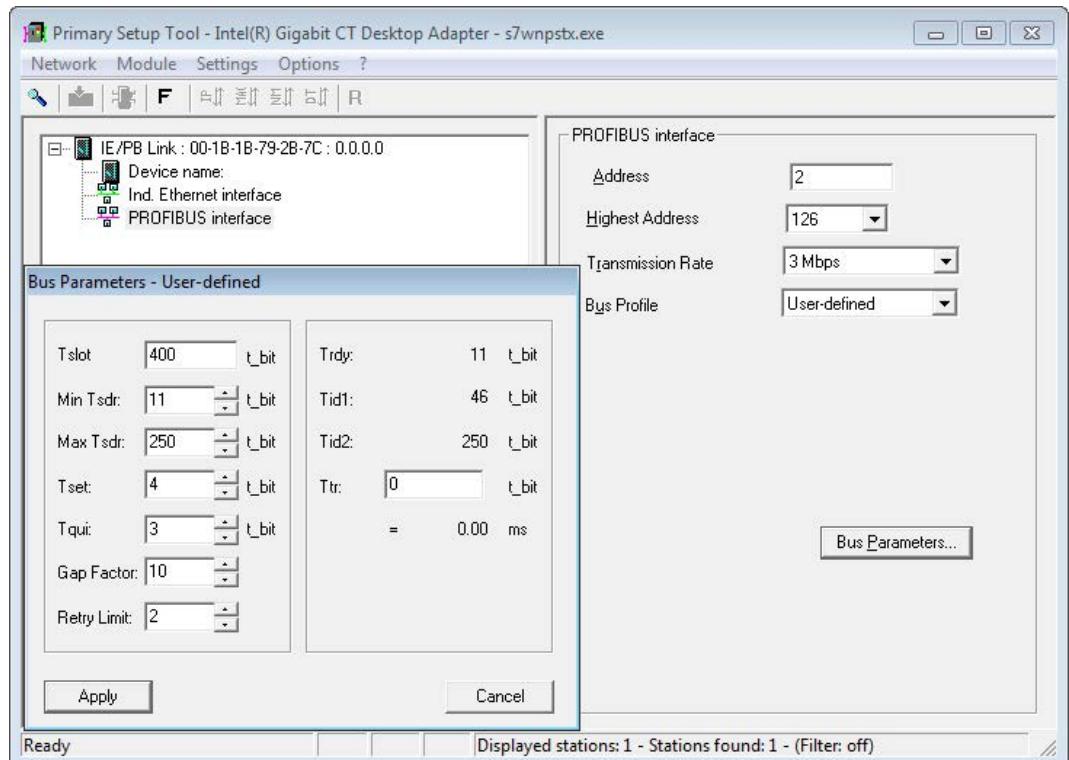


Figure 4-2 PROFINET interface: Selecting network settings and bus parameters

7. In the left-hand part of the window, select the displayed LINK.

8. Click the download icon: .

The download of the Ethernet and PROFINET parameters to the LINK begins.

During the download you receive to queries.

9. Firm these queries with "Yes" if you want to transfer the configured parameters.

Result: The parameters are downloaded to the LINK.

4.5 Assigning the address and network parameters with SINEC PNI

4.5.1 Assigning IP parameters and PROFIBUS parameters and network settings

You assign the IP parameters and the PROFIBUS parameters to the LINK for the first time with SINEC PNI.

You then download the configuration data to the LINK.

Note the required version of SINEC PNI; see section Requirements for use (Page 24).

Starting SINEC PNI and setting the PC access

1. Connect the PC to the LINK.
2. Start SINEC PNI on the PC.

The "Settings" page is displayed after SINEC PNI is started for the first time. On this page, you make the settings that are used for the network scan. Before configuring these settings, make sure that the following requirements have been met:

- The network adapter to be used is active.
- An IP address is assigned to the network adapter to be used.

Run the network scan after configuring the settings.

Run network scan

1. In the "Device list" tab, click the "Start network scan" button.
2. The LINKs found in the network are displayed with properties such as device status and IP address.
3. Select a LINK or several LINKs in the device list and click the "Configure device" button.
The "Device configuration" window opens.
4. Enter the values for the IP address and subnet mask in the "IP configuration" tab.
5. Set the PROFIBUS parameters in the "PROFIBUS" tab:
 - PROFIBUS address
 - Highest PROFIBUS address
 - PROFIBUS bus parameters
 - Bus profile
6. If necessary, set bus parameters; you can open the dialog with the "Bus parameters..." button.

7. Click the "Load" button.

The download of the Ethernet and PROFIBUS parameters to the LINK begins.

During the download you receive to queries.

8. Confirm these queries with "Yes" if you want to transfer the configured parameters.

Result: The parameters are downloaded to the LINK.

4.6 Configuration with STEP 7 V5.6

4.6.1 Supported SIMATIC S7 controllers

Supported SIMATIC S7 controllers

To use the IE/PB LINK HA as S2 device, the upstream redundant PROFINET IO controller pair must support connection of the IE/PB LINK HA as S2 device.

The following controllers support the function:

SIMATIC S7 controllers	MLFB
CPU412-5H PN/DP	6ES7 412-5HK06-0AB0
CPU414-5H PN/DP	6ES7 414-5HM06-0AB0
CPU416-5H PN/DP	6ES7 416-5HS06-0AB0
CPU417-5H PN/DP	6ES7 417-5HT06-0AB0
CPU 410SIS*	6ES7410-5FM08-0AB0
CPU 410E*	6ES7410-5HM08-0AB0
CPU 410-5H*	6ES7410-5HX08-0AB0
CPU 410 SMART*	6ES7410-5HN08-0AB0

* Only available in SIMATIC PCS 7

4.6.2 Configuring the LINK

Overview of configuration

Note the required version of the STEP 7 V5, see section Requirements for use (Page 24).

NCM S7 is integrated in STEP 7 V5. With NCM S7 you additionally obtain direct access to NCM diagnostics via the Start menu and the firmware loader, see section Loading firmware (Page 81).

Note

Operation as LINK with settings compatible with the previous version

You can operate the LINK with a setting compatible with the previous versions (6GK1 411-5AB00 and 6GK1 411-5AB10).

For information on the previous versions, refer to the manual *2/ (Page 102)*.

Depending on the area of application of the LINK, configuration involves the following steps:

- Use as PROFINET IO device and as gateway
 - Assign the LINK the PROFINET device name the first time.
 - Configure the LINK as a PROFINET IO device. During this, a DP master system is assigned to the LINK.
During startup the configuration data is automatically downloaded from the PROFINET IO controller.
- Use only as a gateway
 - Assign the IP parameters the first time.
 - Configure the LINK as an S7-300 station and download the configuration data to the LINK.
- Only IE/PB LINK HA: Use as PROFINET IO device and as gateway to a redundant PROFINET IO system (as S2 device)
 - Create an H-system.
 - Configure the LINK as a PROFINET IO device and connect it with both controllers (redundantly connected). During this, a DP master system is assigned to the LINK.
The LINK can also be used on one side in an H-station, but not in S2 device mode.
 - Assign DP slaves to the DP master system.

For information on further configuration, refer to section **Use only as a gateway in standard operation (Page 66)**.

For information on further configuration, refer to section **IE/PB LINK HA: Use in the H system (Page 64)**.

Note

Support when configuring: Online help

You will find detailed information on the procedure in the online help of STEP 7 V5.x.

4.6.3 Setting object properties on the LINK

Configuring object properties

You can set the further properties of the LINK in HW Config or using the component view in NetPro.

Open the properties dialog of the LINK by double-clicking or using the shortcut menu.

You can make the following settings:

- "General" tab

Here, you can enter the PROFINET device name, the device number and a comment as well as select the Ethernet address.

- "Time-of-Day Synchronization" tab

Here, you can activate time-of-day synchronization, set the time forwarding by the LINK and the direction. As default, this time-of-day synchronization is disabled.

You will find details in the section Time-of-day synchronization (Page 77).

- "Identification" tab

Here you configure I&M data of the LINK.

- "Diagnostics" tab

With a connected LINK, you can call up NCM special diagnostics and make the alarm settings for the C-PLUG and a redundant power supply.

- "SNMP" tab

Here you can set whether communication via SNMPv1 is enabled or not.

Only available as IO device:

- "Device Numbers" tab

Here, you can change the device numbers of the connected DP slaves.

- "Redundancy" tab

Here you set the IO systems to which a redundancy-capable IO device is assigned.

4.6.4 Configuring the Ethernet interface

You can configure the properties of the Ethernet interface of the LINK in HW Config.

1. Open the properties dialog of the LINK by double-clicking or using the shortcut menu.
2. In the "General" tab ("Ethernet" button) open the properties dialog of the Ethernet interface.
 - In the "General" tab, the general properties of the network connection are displayed.
 - In the "Parameters" tab you configure IP parameters of the LINK.

4.6.5 Configuring the PROFIBUS interface

You can set the properties of the PROFIBUS interface of the LINK in HW Config.

1. Open the properties dialog of the PROFIBUS interface of the LINK by double-clicking on the slot "2/X2 (PROFIBUS DP)" or slot "1 (PROFIBUS DP)" as IO device.
 - In the "General" tab, the general properties of the interface are displayed.
Here, you can change the name of the interface.
 - In the "Addresses" tab you can change the start address of the interface.
 - In the "Operating Mode" tab, you can set the DP delay time.
2. In the "General" tab, open the properties dialog of the PROFIBUS interface with the "Properties" button.
 - Here, you network the PROFIBUS interface.
 - You can change the PROFIBUS address of the LINK.

4.6.6 Configuring bus adapters

Configuring BusAdapters

If you want to use the Ethernet interface of the LINK, configure the interface as described above.

If, instead of direct connection of the Ethernet interface you want to use a BusAdapter, follow the steps below:

1. Find the required bus module in the catalog of HW Config:

PROFINET IO > Gateway > IE/PB Link PN IO > 6GK1 411-5AB10 > V4.0 > "BusAdapter"

PROFINET IO > Gateway > IE/PB Link HA > 6GK1 411-5BB00 > V4.0 > "BusAdapter"

2. Insert the BusAdapter.

If you have already configured a BusAdapter but instead want to connect the Ethernet interface directly select the entry "onboard" from the catalog of the BusAdapters.

Replacing BusAdapters

If you want to replace a BusAdapter already being used in the LINK in your STEP 7 project, select the BusAdapter being used and open the shortcut menu "Replace Object...". In the window that then opens you can replace the previous module with a new one.

As an alternative you can drag the required BusAdapter from the hardware catalog to the slot for bus modules and confirm the replacement with "OK".

4.6.7 Use as PROFINET IO device and as gateway

Configuring the LINK as a PROFINET IO device

1. Create a STEP 7 project with a PROFINET IO controller, e.g., an S7-300 station.
2. Open HW Config by double-clicking on the created station.
3. Create a PROFINET IO system by inserting and networking a PROFINET IO system using the shortcut menu (right mouse button) of the PROFINET interface of the controller.
4. From the hardware catalog (PROFINET IO > Gateway) insert the LINK as an IO device on the PROFINET IO system.

An IP address is assigned automatically for the interface in the PROFINET IO system and the LINK is assigned a device number. The highest free device number in the current PROFINET IO system is selected.

When you take the LINK from the hardware catalog, you will be requested to network the LINK on the PROFIBUS interface.

5. Network the LINK on the PROFIBUS interface.

If you have not previously created a subnet, you can do this later by selecting the PROFIBUS interface of the LINK and inserting the DP Master system using the shortcut menu.

Result: The LINK has been created in HW Config as a PROFINET IO device with a connected DP Master system.

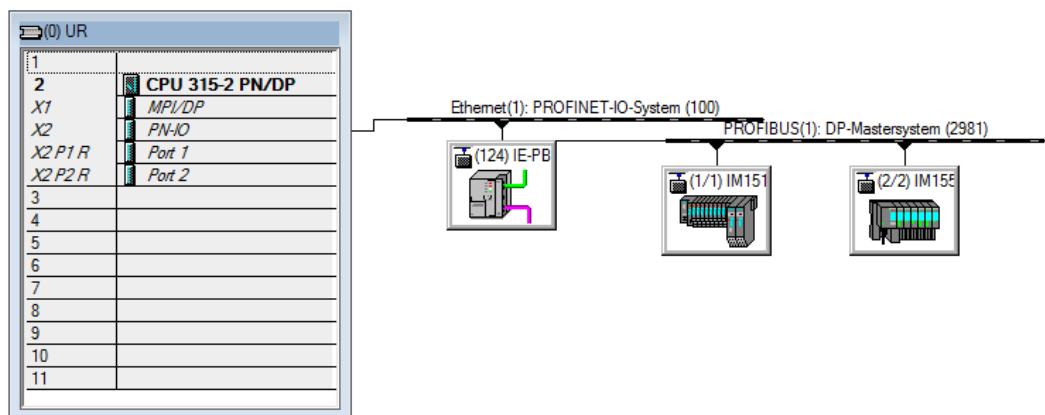


Figure 4-3 LINK as a PROFINET IO device with a DP master system

Note

Creating a new DP master system

The DP Master system at the LINK is assigned to the PROFIBUS submodule. When you create a new DP Master system, you must therefore first select the PROFIBUS submodule.

6. As far as necessary, set further properties of the LINK.
7. Configure the DP master system with its PROFIBUS nodes:

4.6.7.1 Commissioning the LINK as a PROFINET IO device

1. Assign the LINK a device name the first time.

The LINK ships with a fixed MAC address. Without further configuration, the device can only be reached via the Ethernet connection using this MAC address.

During configuration, an IP address is assigned automatically. This IP address is later transferred to the LINK (IO device) when the IO controller starts up.

To allow the IO controller to identify the IO device during this procedure, first assign the LINK a PROFINET device name - like every other IO device.

See section Overview: Installation, configuration, commissioning (Page 41) for information on this.

To do this in the SIMATIC Manager or in HW Config use the menu command "PLC" > "Ethernet" > "Edit Ethernet Node" > "Assign device name".

As an alternative, you can also use the PST or SINEC PNI to assign the PROFINET device name.

Make sure that the assigned device name and the device name specified in the configuration match. If they do not match, the controller cannot find the device and the configured IP address is not assigned.

2. Download the configuration data to the PROFINET IO controller.

With this action, the IO controller receives the configuration data of the LINK.

When the IO controller starts up, the LINK is configured automatically like all other PROFINET IO devices.

Configuration data loaded during start-up is not stored retentively. See also section Changing from RUN to STOP (Page 49).

4.6.8 IE/PB LINK HA: Use in the H system

4.6.8.1 Use as S2 device

Configure in mode as PN IO proxy on the H-system

1. Create a STEP 7 project.
2. Right-click the project and select "Insert new object" > "SIMATIC H-Station".
3. Open HW Config by double-clicking on the created station.
4. Configure the redundant system. To do this, select the SIMATIC S7 controller to which the link can be connected as S2 device. You can find a list in the section Supported SIMATIC S7 controllers (Page 59).

5. From the hardware catalog under PROFINET IO > Gateway > IE/PB Link HA, insert the LINK as an IO device on the corresponding PROFINET IO system.

An IP address is assigned automatically for the interfaces in the PROFINET IO systems and the LINK is assigned a device number. The highest free device number in the current PROFINET IO system is selected.

When you take the LINK from the hardware catalog, you will be requested to network the LINK on the PROFIBUS interface.

6. Network the LINK on the PROFIBUS interface.

Result: The LINK is automatically connected to both PROFINET IO systems and is in S2 mode. In addition, the LINK is created with a connected DP master system with CiR object. The orange background shows that the device is CiR/H-CiR capable or was added using CiR/H-CiR.

7. As far as necessary, set further properties of the LINK.

8. Create the corresponding DP slaves on the DP master system.

Configure the DP master system with its PROFIBUS nodes as CiR

CiR (Configuration in RUN) is a procedure with which you can make changes during operation of your plant.

1. Using drag-and-drop, place the desired slave from the hardware catalog onto the CiR object in the station window.

Result: The name of the added slave is displayed on an orange background.

2. Click on the relevant CiR object and select the entry "Object properties" in the shortcut menu. If necessary, adjust default settings such as number of DP slaves or sum of address ranges. The CiR synchronization time cannot be changed.

3. Click the "Load to H-station" button. For the first load, the LINK must be in STOP mode. Enable the "Forward automatically" option to load in RUN mode. You will find more information on loading in the STEP 7 online help.

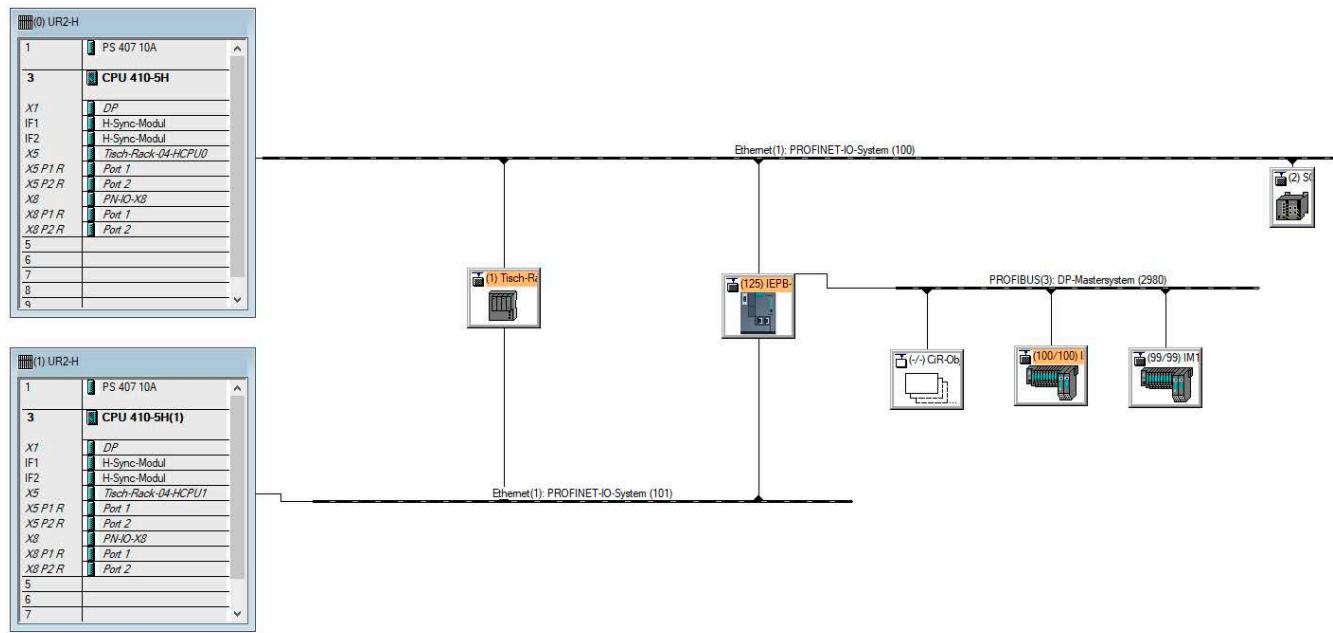


Figure 4-4 IE/PB Link HA in the H-system

4.6.9 Use only as a gateway in standard operation

4.6.9.1 Creating a station and networking the LINK

Configuring the LINK as an S7-300 station and connecting it to Ethernet and PROFIBUS

1. Create a STEP 7 project with an S7-300 station.
2. Open the hardware configuration HW Config by double-clicking on the created station.
3. Insert the LINK from the hardware catalog under "SIMATIC 300" > "Gateway" > "IE/PB LINK PN IO" or "IE/PB LINK HA".

When you take the LINK from the hardware catalog, you will be requested to network the LINK on the Ethernet and PROFIBUS interface.

4. Network the LINK on the Ethernet and PROFIBUS interface.

If you have not previously created a suitable subnet, you can do this later by selecting the relevant interface using the shortcut menu.

Result: The LINK has been created in HW Config within the S7-300 station with a basic module and the two submodules Ethernet and PROFIBUS.

Note

LINK as gateway between an MPI and Ethernet subnet

The LINK can also be selected as a gateway between an MPI subnet and an Ethernet subnet. To do this, you need to network the PROFIBUS interface of the LINK with the MPI subnet.

5. Configure the other properties of the LINK, see sections Setting object properties on the LINK (Page 61) and Configuring the PROFIBUS interface (Page 62).

4.6.9.2 Commissioning the LINK as a gateway

Commissioning the LINK

1. Assign an IP address to the LINK.

To do this, select the menu command "PLC" > "Ethernet" > "Edit Ethernet Node" in HW Config.

2. Download the configuration data to the LINK.

The first download must be from industrial Ethernet via the Ethernet interface. Depending on the PG/PC connection subsequent downloads can be from PROFIBUS or from Industrial Ethernet via the Ethernet interface.

4.7 Configuration with STEP 7 Basic / Professional

4.7.1 Configuring the LINK

Creating the LINK and assigning the mode

For addressing the LINK the first time and configuring it you require STEP 7 Basic / STEP 7 Professional.

For the version and required support package, refer to the section Requirements for use (Page 24).

Note

Operation in compatibility mode

You can operate the LINK with a compatible setting to the previous version (6GK1 411-5AB00).

For operating the LINK in the compatibility mode, refer to the manual *I2I* (Page 102) of the previous version 6GK1 411-5AB00.

For the configuration, follow the steps below:

1. Create a STEP 7 project.
2. Insert a LINK from the catalog:

"Network components" > "Gateways" > IE/PB Link PN IO > 6GK1 411-5AB10

For the further configuration as a PROFINET I/O proxy, refer to the section Use as a PROFINET IO device (Page 68).

For the further configuration as a gateway, refer to the section Use only as a gateway in standard operation (Page 70).

Note

Support during configuration: Online help

The information system of STEP 7 will provide you with detailed information on the procedure.


4.7.2 Use as a PROFINET IO device

Configuring the LINK as a PROFINET IO device.

The following is required for further configuration: You have created a project with the LINK, see section Configuring the LINK (Page 67).


For further configuration follow the steps below:

1. Specify the mode of the LINK in the "Gateway" parameter group:
"Network gateway as PROFINET IO proxy"
2. Connect the PROFIBUS interface of the LINK to the PROFIBUS interface of the slave by dragging the PROFIBUS interface of the LINK onto the slave with the mouse pointer.
The interface is connected and the slave assigned to the LINK.
The LINK is assigned an automatically generated PROFIBUS address.

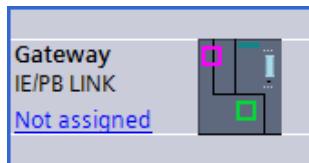

3. Connect the PROFINET interface of the LINK to the PROFINET interface of the IO controller by dragging the Ethernet / PROFINET interface of the LINK onto the PROFINET interface of the IO controller with the mouse.
The interface is connected and an automatically generated IP address is assigned to the LINK, however the LINK is not yet assigned to an IO controller.
4. If the LINK was not assigned to an IO controller, click on the text "Not assigned".
A window with all IO controllers in the project is opened.
5. Click on the IO controller to which the LINK will be assigned.

As soon as the LINK is assigned to an IO controller, the controller name is shown in the station icon of the LINK.

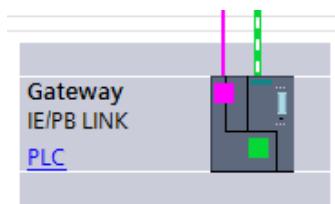

When it is assigned to an IO controller, the LINK is assigned an automatically generated PROFINET device name that cannot be changed later.

During startup the configuration data is automatically downloaded from the PROFINET IO controller.

You configure the remaining parameters in the parameter groups of the LINK. Here, you can also change the PROFINET device name.

For information on downloading and further commissioning, refer to section Commissioning the LINK as a PROFINET IO device (Page 71).

4.7.3 Use only as a gateway in standard operation

Configuring the LINK

The following is required for further configuration: You have created a project with the LINK, see section Configuring the LINK (Page 67).

For further configuration follow the steps below:

1. Specify the mode of the LINK in the "Gateway" parameter group:

"Gateway in standard mode"

2. Network the LINK on the Ethernet interface.

The LINK is assigned an automatically generated IP address and a PROFINET device name.

3. Network the LINK on the PROFIBUS interface.

The LINK is assigned an automatically generated PROFIBUS address.

Note

The LINK can also be selected as a gateway between an MPI subnet and an Ethernet subnet. To do this, you need to network the PROFIBUS interface of the LINK with the MPI subnet.

4. As far as necessary, set further properties of the LINK.

For information on downloading and further commissioning, refer to section Commissioning the LINK in standard mode (Page 72).

4.7.4 Configuring bus adapters

Configuring BusAdapters

If, instead of using the Ethernet interface of the LINK you want to use a BusAdapter, follow the steps below:

1. Select the LINK in the network view of STEP 7.
2. Disable the filter in the catalog.

You will find the available BusAdapters here: Network components > Gateways > BusAdapter

3. Change to the device view.
4. Browse for the required BusAdapter and drag it to a free slot for bus modules on the LINK.
5. Configure the port properties of the BusAdapter.

Note the information on downloading and further commissioning in the following sections.

Note

Ethernet interface disabled

Note that after configuring a BusAdapter, the Ethernet interface of the LINK and therefore also the LEDs "LK1 / LK2" are deactivated.

Replacement of a BusAdapter

If you want to replace a BusAdapter used in the LINK in your STEP 7 project, select the BusAdapter being used in the device view of the LINK and select the shortcut menu command "Change device..." In the window that then opens you can replace the previous module with a new one.

As an alternative you can drag the required BusAdapter from the catalog to the slot for bus modules. A replacement icon appears and the window for changing the device opens.

4.7.5 Commissioning the LINK as a PROFINET IO device

Commissioning the LINK as a PROFINET IO device

1. If necessary change the PROFINET device name before loading.

The IP address is assigned by the controller.

Via the shortcut menu of the LINK open the online and diagnostics view ("Online & Diagnostics" > "Functions" > "Assign PROFINET device name").

Make sure that the device name is consistent in the LINK and in the STEP 7 configuration.

2. Download the configuration data to the PROFINET IO controller.

With this action, the IO controller receives the configuration data of the LINK. When the IO controller starts up the LINK is configured like all other PROFINET IO devices.

Note

Restart when using BusAdapters

If you use a BusAdapter, you need to restart the LINK after downloading so that the BusAdapter is recognized. Follow the steps outlined below:

1. Download the configuration data as described above.
2. Turn off the power.
3. Plug in the BusAdapter and connect it to the network.
4. Turn on the power.

The ports of interface X1 are then disabled.

4.7.6 Commissioning the LINK in standard mode

Commissioning the LINK in standard mode

1. If necessary change the IP address before loading.

Via the shortcut menu of the LINK open the online and diagnostics view ("Online & Diagnostics" > "Functions" > "Assign IP address").

Make sure that the address data on the LINK and in the STEP 7 configuration are consistent.

2. Download the configuration data to the LINK.

When downloading the first time download via Ethernet. Depending on the PG/PC connection, later downloads can be via PROFIBUS or Ethernet.

Note

Restart when using bus adapters

If you use a bus adapter, you need to restart the LINK after downloading so that the bus adapter is recognized. Follow the steps outlined below:

1. Download the configuration data as described above.
2. Turn off the power.
3. Plug in the bus adapter and connect it to the network.
4. Turn on the power.

The ports of interface X1 are then disabled.

4.8 Identification and maintenance data

4.8.1 Reading out and entering I&M data

I&M data

Identification & Maintenance data (I&M data) is stored on the module.

- **Identification data (I&M0)**

I data is manufacturers information about the module that you only have read access to. Some of it is printed on the housing, e.g., article number and serial number.

- **Maintenance data (I&M1, 2, 3)**

M data is plant-dependent information, e.g. the plant designation and the location designation. Maintenance data is created during the configuration and written to the module.

M data can be read and written.

All modules of the LINK support identification data (I&M0 to I&M3). The I&M identification data supports you in the following activities:

- Assignment of plant-related identification characteristics
- Checking the plant configuration
- Locating hardware changes in a plant
- Correcting errors in a plant

Modules can be clearly identified online using the I&M identification data.

With STEP 7 you can read out the I&M data. See the online help of STEP 7.

Configuring, reading and writing I&M data

You have the following options, for reading or writing I&M data:

- Configuring
 - With STEP 7
- Reading / writing
 - With read / write data record
 - (only in the "PROFINET IO proxy" mode, e.g. via the user program)

Display of the I&M data in STEP 7 V5

You can display the maintenance data I&M1, 2, 3 as follows when there is an online connection to the LINK:

- Object properties of the LINK > tab "Diagnostics" > Start of special diagnostics > Run
- With the "PLC" > "Download Module Identification" menu command

You can display the I&M0 identification data as follows:

- In the "Gateway" mode With the "PLC" > "Module Information" menu command.

You can load all of the I&M data in the "PROFINET IO proxy" mode as follows:

- Upload to PG
 - With the "PLC" > "Upload Module Identification to PG" menu command
- Downloading to the module
 - With the "PLC" > "Download Module Identification" menu command

Reading the I&M data using STEP 7 Professional

Gateway in standard operation

Requirement: There must be an online connection to the LINK.

1. Select the LINK in the project tree.
2. Select "Online & diagnostics" > "Identification & Maintenance".

Gateway as PROFINET IO proxy

Requirements: There must be an online connection to the relevant PROFINET IO controller.

1. Select the LINK in the project tree.
2. Select "Online & diagnostics" > "Identification & Maintenance".

Writing the I&M data using STEP 7

1. Select the LINK in the device view of the hardware and network editor.
2. Enter the required data in the properties in "General" > "Identification & Maintenance".

You can enter the following data:

- Plant designation (I&M1)
- Location identifier (I&M1)
- Installation date (I&M2)
- Additional information (I&M3)

Gateway in standard operation

When loading the hardware configuration, the I&M data is adopted directly.

Gateway as PROFINET IO proxy

When loading the hardware configuration, the I&M data is not adopted directly. The values must be written to the device using suitable PROFINET mechanisms. STEP 7 provides suitable functions for this.

- **STEP 7 V5.x**
 - Select the LINK.
 - Select the menu command "PLC" > "Download Module Identification".
- **STEP 7 Professional**
 - Select the LINK in the project tree.
 - Select the menu command "Options > Hardware Configuration > Compile and Download > Download I&M Data".
 - Compile the configuration data (shortcut menu)
 - Download the configuration data (shortcut menu) "Download to device" > "Hardware configuration"
 - In the column "Data for Identification & Maintenance (I&M)" select the tab "Download data" or "Download selected".

Reading/writing I&M data with the user program

- To read I&M data in the user program, use the block SFB52 "RDREC".
- To write I&M data in the user program, use the block SFB53 "WRREC".

You will find the data records structure for distributed modules reachable via PROFINET IO / PROFIBUS DP below.

4.8.2 Data record structure for I&M data

Reading I&M data records

You can have read access to the identification data in the "PROFINET IO proxy" mode using the block "RDREC". You obtain the corresponding part of the identification data under the relevant data record index.

The data records are structured as follows:

Table 4- 2 Structure of the data records with identification data I&M

Content	Length (+ length header) [bytes]	Coding (hex)
Header information		
BlockType	2	I&M0: 0020 _H I&M1: 0021 _H I&M2: 0022 _H I&M3: 0023 _H
BlockLength	2	I&M0: 0038 _H I&M1: 0038 _H I&M2: 0012 _H I&M3: 0038 _H
BlockVersionHigh	1	01
BlockVersionLow	1	00
Identification data		
Identification data (see table below)	I&M0 / Index AFF0 _H : 54 (+6) I&M1 / Index AFF1 _H : 54 (+6) I&M2 / Index AFF2 _H : 16 (+6) I&M3 / Index AFF3 _H : 54 (+6)	

Table 4- 3 Data record structure for I&M identification data

Identification data	Access	Default	Explanation
Identification data 0: (data record index AFF0 hex)			
VendorIDHigh	Read (1 byte)	00 _H	Name of the manufacturer (2A _H = SIEMENS AG).
VendorIDLow	Read (1 byte)	2A _H	
Order_ID	Read (20 bytes)	-	MLFB of the IE/PB LINK PN IO or IE/PB LINK HA or an inserted BusAdapter
IM_SERIAL_NUMBER	Read (16 bytes)	-	Serial number (device-specific)
IM_HARDWARE_REVISION	Read (2 bytes)	1...x	Hardware product version

Identification data	Access	Default	Explanation
IM_SOFTWARE_REVISION	Read	Firmware version	Firmware version of the module
• SWRevisionPrefix	(1 byte)	V	
• IM_SWRevision_Functional_Enhancement	(1 byte)	00 - FF _H	
• IM_SWRevision_Bug_Fix	(1 byte)	00 - FF _H	
• IM_SWRevision_Internal_Change	(1 byte)	00 - FF _H	
IM_REVISION_COUNTER	Read (2 bytes)	0000 _H	Selected changes on the module (not used)
IM_PROFILE_ID	Read (2 bytes)	0000 _H	Generic Device
IM_PROFILE_SPECIFIC_TYPE	Read (2 bytes)	0001 _H	CPU
		0003 _H	I/O module
		0005 _H	Interface module / BusAdapter
		0006 _H	Active network infrastructure component
IM_VERSION	Read	0101 _H	Version of the identification data (0101 _H = Version 1.1)
• IM_Version_Major	(1 byte)		
• IM_Version_Minor	(1 byte)		
IM_SUPPORTED	Read (2 bytes)	000E _H	Existing identification data (I&M1 to I&M3)
Maintenance data 1: (data record index AFF1 hex)			
IM_TAG_FUNCTION	Read / write (32 bytes)	-	Plant-wide unique identification of the module
IM_TAG_LOCATION	Read / write (22 bytes)	-	Installation location of the module
Maintenance data 2: (data record index AFF2 hex)			
IM_DATE	Read / write (16 bytes)	YYYY-MM-DD HH:MM	Installation date of the module
Maintenance data 3: (data record index AFF3 hex)			
IM_DESCRIPTOR	Read / write (54 bytes)	-	Additional information

Reading I&M data records with data record 255 (distributed via PROFIBUS DP)

The modules support standardized access to identification data via DS 255 (index 65000 to 65003). You will find more information on the data structure of DS 255 in the specifications of Profile Guidelines Part 1: Identification & Maintenance Functions - Order No. 3.502, version 1.2 from October 2009.

4.9 Time-of-day synchronization

Synchronization method

The LINK supports time-of-day synchronization methods listed below.

Both in NTP and in the SIMATIC mode, the time-of-day is transferred as UTC (Universal Time Coordinated).

With the SIMATIC mode you require a time master in a network.

If time-of-day synchronization is enabled in the configuration, you can set whether the LINK simply adopts the time-of-day or adopts it and forwards it. The following options are available:

- **NTP**
 - Adopt the time of day
 - Adopt the time of day and forward it to PROFIBUS
- **SIMATIC mode**
 - Adopt the time of day from Ethernet (no forwarding to PROFIBUS)
 - Adopt the time of day from PROFIBUS (no forwarding to Ethernet)
 - Adopt the time of day from Ethernet and forward it to PROFIBUS
 - Adopt the time of day from PROFIBUS and forward it to Ethernet

NTP mode

With the NTP method, the LINK sends time-of-day queries at regular intervals to one to four NTP servers in the subnet (LAN).

- The update interval (synchronization cycle) specifies the interval between the time queries.
- "Accept time from non-synchronized NTP servers" option

If the option is enabled, the LINK also accepts the time-of-day from non-synchronized NTP servers with stratum 16.

If the option is disabled, the response is as follows: If the LINK receives a time-of-day frame from an unsynchronized NTP server with stratum 16, the time of day is not set according to the frame. In this case, none of the NTP servers is displayed as "NTP master" in the diagnostics; but rather only as being "reachable".

4.10 Overview: Access to the LINK as proxy

Overview of the options for accessing the LINK in the "PROFINET IO proxy" mode

If there is a connection established to the PROFINET IO controller you have the following options for accessing the LINK.

Note: Stopping the IO controller CPU does not lead to connection termination with the LINK.

Access to LINK via	Access path	STOP ⇄ START	Memory reset	Resetting to factory settings		Initialization		Restart
				With C-PLUG from LINK V2	Without or with C-PLUG (formatted for LINK V3)	PROFINET device name	IP parameters	
Taster	-	- 1	- 1	+	+	- 1	- 1	+
PST / PRONETA	IE	- 1	- 1	- 4	+	+	- 3	- 1
PST	PB	- 1	- 1	- 1	- 1	- 1	- 1	- 1
Special diagnostics	IE	- 2	- 2	- 2	- 2	+	- 3	- 1
Special diagnostics	PB	- 2	- 2	- 2	- 2	- 1	- 1	- 1
STEP 7	IE	- 2	- 2	- 4	+	+	- 3	- 1
STEP 7	PB	- 2	- 2	- 1	- 1	- 1	- 1	- 1

¹: Is not supported.

²: Is not allowed because an IP service is used here. Permitted with DCP-based services, since only possible locally.

³: According to IEC 61158-x-10 changing the IP parameters of an IO device when a connection is established is not permitted.

⁴: Not supported for reasons of compatibility. Reformatting the C-PLUG for IE/PB LINK PN IO V3 is permitted.

There are restrictions in the following situations:

- The LINK in "Proxy" mode is in the STOP status.
- The LINK in "Proxy" mode has no connection to the IO controller.
- The LINK is in "Standard mode" and was configured only via PST (DCP).

Diagnostics and maintenance

5.1 Diagnostics options

The following diagnostics options are available:

LEDs of the module

For information on the LED displays, refer to the section LEDs, connectors, buttons (Page 27).

STEP 7 Professional: The "Diagnostics" tab in the Inspector window

If you access the LINK via Ethernet, you obtain the following information on the selected module:

- Entries in the diagnostics buffer
- Information on the online status of the module

STEP 7 Professional: Diagnostics functions via the "Online > Online and diagnostics" menu

Using the online functions, you can read diagnostics information from the LINK from an engineering station on which the project with the LINK is stored. You obtain, for example; the following static information:

- General information on the module
- Information on the diagnostics status
- Diagnostics buffer entries
- Information on the PROFINET interface
- Information on the DP interface

You will find further information on the diagnostics functions of STEP 7 in the STEP 7 information system.

STEP 7 V5

The known diagnostics tools are available to you here:

- HW Config
- NCM diagnostics
- Diagnostics buffer of the module and the controller
- PST/SINEC PNI

SNMP

You will find detailed information about the supported functions in the section SNMP (Page 85).

Monitoring the C-PLUG and the redundant power supply

In the configuration you can activate monitoring of the C-PLUG and the redundant power supply. When the monitoring is activated, when certain errors occur a diagnostics entry is made in the diagnostics buffer. For details, refer to the STEP 7 online help.

5.2 Diagnostic information

User program

For the lower-level PROFIBUS DP slaves, the full PROFIBUS DP standard diagnostics (244 bytes) can be read out by means of "Read data record" (data record number 256, logical address of the DP slave).

5.3 Clearing and for resetting to factory settings

The CP has a two-level function available for resetting memory:

- **Memory reset**

Following the memory reset, the LINK retains the retentive parameters. The LINK is therefore immediately ready for downloads using the IP address.

The retentive parameters include:

- IP address, subnet mask and, if applicable, router address, PROFINET device name
- LAN settings
- I&M data

- **Reset to factory settings**

Note

LINK no longer reachable after reset

After resetting to factory settings the LINK is no longer reachable with its previous IP parameters.

For information on the restrictions in the "PROFINET IO proxy" mode, refer to the section Overview: Access to the LINK as proxy (Page 78),

After resetting, the LINK only contains the MAC address (as shipped). The content of the C-PLUG is completely deleted, the formatting is retained.

The LINK restarts.

How to use the function

- **Memory reset**
 - In STEP 7 V5 / special diagnostics with the "Operating Mode" > "Clear/Reset Module" menu command
 - In STEP 7 Basic/Professional via "Online & diagnostics" > "Go online" > "Online tools" > open input box > button "MRES"
- **Reset to factory settings**
 - In STEP 7 V5.x with the menu command "PLC" > "Ethernet" > "Edit Ethernet Node" > "Reset to Factory Settings"
 - In STEP 7 / special diagnostics with the menu command "Operating Mode" > "Reset to Factory Defaults"
 - In STEP 7 Professional with "Online" > "Online & Diagnostics" > "Functions" > "Reset to Factory Settings"
 - In SINEC PNI via the menu command "Device list" > "Reset device" > "Reset to factory settings"
 - In PST with the menu command "Module" > "Reset".
 - By pressing the button
Press the button initially for 3 seconds to change from normal mode to the maintenance mode.
After this, press the button again for 10 seconds to reset the LINK.
For information on changing to the maintenance mode using the button, see section Maintenance mode (Page 34).

5.4 Loading firmware

The LINK supports the loading of new firmware files via STEP 7 in the following ways:

- Via Ethernet (*.upd file)
- Via PROFIBUS with the firmware loader (*.fwl firmware file)

If a new firmware version is available for the module, you will find this on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15406/dl>)

Loading firmware via PROFIBUS

Requirements

Note

The new firmware can only be downloaded if the PROFIBUS interface parameter assignment "FWL_FAST_LOAD" of the PG/PC CP is enabled.

The PG/PC must be connected to the LINK via a direct point-to-point connection via PROFIBUS. There must be no other node on the bus.

Procedure

The firmware is downloaded from the PC/PG via PROFIBUS.

A new firmware file can only be loaded in maintenance mode after a restart. You effect a restart using the button (see below) or by turning the power supply off and on. After the restart you can start to load a new firmware file within the first 10 seconds.

To change to the maintenance mode using the button, follow the steps below:

1. Press the button initially for 3 seconds to change from normal mode to the maintenance mode.

The LEDs signal the maintenance mode, see section LED displays of the LINK (Page 27).

2. Then press the button twice briefly within 5 seconds.

The LINK restarts.

After the restart the LINK remains ready for new firmware for 10 seconds.

For information on switching over see also section Maintenance mode (Page 34).

3. On the PG/PC start the load procedure within the first 10 seconds after changing to maintenance mode.

The firmware update is completed when the LED pattern "Loaded firmware being activated" goes off, see also section LED displays of the LINK (Page 27).

You will find more information on loading the firmware in the online help of STEP 7 or in the online help of the firmware loader.

Loading firmware using the STEP 7 NCM firmware loader

The firmware loader is installed, along with STEP 7 V5.

Open the firmware loader from the Windows Start menu:

"Siemens Automation > SIMATIC > STEP 7 > NCM S7 > Firmware Loader"

You will find more information in the online help of the firmware loader.

Loading firmware files (> V4.0) in STEP 7 Basic / Professional

1. Select the LINK.
2. Open the "Online" > "Online & diagnostics" menu.
3. In the online view, open the parameter group. "Functions" > "Firmware-Update" and start the firmware update using the button "Start updating the firmware".

The window. "SIMATIC NET Firmware - Loader" opens and guides you through the installation process.

Loading firmware files (> V4.0) in STEP 7 V5.x

Possible as of version:

- IE/PB LINK HA: STEP 7 V5.6 + SP2 + HF3 + HSP 1111
- IE/PB LINK PN IO: STEP 7 V5.6 + SP2 + HF3 + HSP 113
- Via Ethernet: V5.6 SP2 HF3 (independent of HSP), if a LINK V4.0 is configured in each case

You can simply load the firmware and activate it later or enable the "Activate firmware after loading" option.

You will find more information on loading the firmware in the STEP 7 online help (section "Updating Firmware in Modules and Submodules Online").

Behavior after loading a firmware file

Once loading the firmware is completed, the LINK restarts and automatically returns to productive operation.

Check, for example with the special diagnostics of STEP 7 whether the new firmware is enabled after loading.

5.5 Upload tp PG/Upload from device

Uploading from the device (STEP 7)

If you want to upload the configuration data from the device to the PG or engineering station, in the selection dialog you need to set the rack to 0 and the slot to 0 or 2.

5.6 Replacing a module

5.6.1 Resetting address data

Note

Resetting address data if the use of the LINK is changed

If the LINK has already been operated in your plant and you want to use it at a different location in the plant, it starts up with the configured parameters.

If the LINK has been used previously in your plant or has been repaired, delete all stored data by resetting to the factory settings.

The MAC address is stored permanently on the LINK and is not deleted when you reset to the factory settings.

5.6.2 Replacing older modules

Replacing scenario

The LINKs 6GK1 411-5AB10 and 6GK1 411-5BB00 can be used as a replacement for the following predecessor product:

- 6GK1 411-5AB00

Replacement variants

When replacing a predecessor module (6GK1 411-5AB00) with the LINK (6GK1 411-5AB10) . The following variants can be distinguished:

- **Replacement with unchanged configuration (module replacement)**

An existing module is replaced by a new module without changing the configuration.

To load the unchanged configuration on the new module, two methods are possible:

- Load the existing configuration data on the new module.
- Insert the C-PLUG of the predecessor module in the new module.

Note

Older C-PLUG cannot be overridden with data of the new LINK

A C-PLUG of the predecessor module cannot be overridden with data of the new LINK.

If you want to load the configuration data of the link 6GK1 411-5AB00 on the C-PLUG of the predecessor module, you must first reformat the C-PLUG. See section C-PLUG (Page 44) for information on this.

- **Replacement with new configuration**

An existing module is replaced by a new module with a new configuration.

If adaptations are made to the configuration, the IE/PB LINK PN IO can be used instead of a module with firmware version V2.x or V1.0. The LINK used previously is replaced by the new LINK in the configuration:

Load the new configuration on the new module.

Unless otherwise specified, in both cases, the range of functions of the previous module continues to be supported.

5.6.3 Replacing a module without PG/PC

An existing module can be replaced by a new module without changing the configuration.

To load the unchanged configuration on the new module, insert the C-PLUG of the removed module in the new module.

For information on replacing with previous modules, refer to the information in section Replacing older modules (Page 84).

Obtain IP address from a DHCP server (only with network gateway in standard mode)

When configuring in STEP 7, you can specify the IP configuration for the LINK. One option here is that the LINK obtains the IP address from a DHCP server with configured topology through neighborhood discovery (LLDP).

The DHCP server can assign the IP address based on the client ID, the MAC address or the host name.

If after a replacement, the LINK should always receive the same IP address from the DHCP server, always configure a client ID or a host name.

5.7 SNMP

SNMP (Simple Network Management Protocol)

SNMP is a protocol for diagnostics and managing networks and nodes in the network. To transmit data, SNMP uses the connectionless UDP protocol.

The information on the properties of SNMP-compliant devices is entered in MIB files (MIB = Management Information Base).

You will find detailed information on SNMP and the Siemens Automation MIB in the manual /5/ (Page 102).

For more detailed information on using MIB files, refer to the documentation of the SNMP client you are using (example of an SNMP client: SNMP OPC server from SIMATIC NET).

Range of performance of the LINK

The LINK supports data queries using SNMP in version V1 (standard). The LINK returns the content of certain MIB objects according to the MIB II standard and the part of the Siemens Automation MIB relevant for the LINK.

Traps are not supported.

Supported MIBs in SNMPv1

The LINK supports the following MIBs and groups of MIB objects:

- **MIB II (acc. to RFC1213)**

- System
- Interfaces
- IP
- ICMP
- TCP
- UDP
- SNMP

The following groups of the standard MIB II are not supported:

- AT
- EGP
- Transmission

- **LLDP MIB**

- **MRP Monitoring**

- **Siemens Automation MIB**

Note that write access is permitted only for the following MIB objects of the "System" group:

- sysContact
- sysLocation
- sysName

A set sysName is sent as the host name using DHCP option 12 to the DHCP server to register with a DNS server.

For all other MIB objects and groups, only read access is possible for security reasons.

Access permissions using community name

The LINK uses the following community names to control the access rights in the SNMP agent:

Table 5- 1 Access rights in the SNMP agent

Type of access	Community name *)
Read access	public
Read and write access	private

*) Note the use of lowercase letters!

Technical data

6.1 Technical specifications of the LINK

Table 6- 1 Technical specifications

Technical specifications		
Attachment to Industrial Ethernet		
Article numbers	• IE/PB LINK PN IO	• 6GK1 411-5AB10
	• IE/PB LINK HA (conformal coating)	• 6GK1 411-5BB00
Amount	1 x PROFIBUS interface 1 x PROFINET interface with 2port switch	
Design of the PROFIBUS interface	Connector	9-pin D-sub female connector
	Transmission rate	9.6 / 19.2 / 45.45 / 93.75 / 187.5 / 500 Kbps 1.5 / 3 / 6 / 12 Mbps
Design of PROFINET interface (2port switch)	Connector	2 x RJ-45 jacks
	Transmission rate	10 / 100 Mbps
	Aging time	5 minutes
	Special features of the ports X1 P1 R and X1 P2 R	Integration in ring topology / MRP possible
Electrical data		
External power supply, redundant setup	Power supply Permitted range	24 VDC +20.4 V to +28.8 V
Current consumption	From external power supply	• 200 mA typical (without connected BusAdapter) • 300 mA maximum
Effective power loss	Typical	4.8 W
	Maximum	7.2 W
Permitted ambient conditions		
Ambient temperature	During operation with the rack installed horizontally	IE/PB LINK PN IO: 0 °C to +60 °C IE/PB LINK HA: -40 °C ... +70 °C
	During operation with the rack installed vertically	IE/PB LINK PN IO: 0 °C to +40 °C IE/PB LINK HA: -40 °C ... +40 °C
	During storage	-40 °C to +70 °C
	During transportation	-40 °C to +70 °C
Relative humidity	During operation	≤ 95 % at 25 °C, no condensation
Operating altitude	During operation	≤ 2000 m above sea level at max. 60 °C ambient temperature
Contaminant concentration	Acc. to ISA-S71.04 severity level G1, G2, G3	
Design, dimensions and weight		

6.2 Pinout of the Ethernet interface

Technical specifications

Module format	Housing of the ET 200SP device family
Properties	IE/PB LINK HA: Coated printed circuit board (conformal coating)
Degree of protection	IP20
Weight	Approx. 600 g
Dimensions (W x H x D)	100 x 117 x 74 mm
Installation options	Installation on a rail: 35 mm DIN rail

Product functions *

* You will find further functions in the section Application and properties (Page 13).

Over and above this, all the information listed in the system manual "Distributed I/O System ET 200SP" applies to the LINK:

- Electromagnetic compatibility
- Transportation/storage conditions
- Mechanical and climatic environmental conditions
- Information on insulation checks, protection class and degree of protection


For the system manual see /4/ (Page 102).

6.2 Pinout of the Ethernet interface

Pinout of the Ethernet interface

The table below shows the pin assignment of the Ethernet interface. The pin assignment corresponds to the Ethernet standard 802.3-2005, 100BASE-TX version.

Table 6- 2 Pin assignment of the Ethernet interface

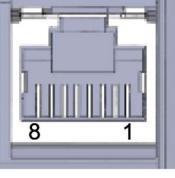View of the RJ-45 jack	Pin	Signal name	Assignment
	1	TD	Transmit Data +
	2	TD_N	Transmit Data -
	3	RD	Receive Data +
	4	GND	Ground
	5	GND	Ground
	6	RD_N	Receive Data -
	7	GND	Ground
	8	GND	Ground

6.3 Pin assignment of the PROFIBUS interface

PROFIBUS interface

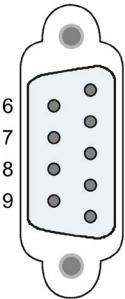


Table 6- 3 Pinout of the D-sub socket

Pin	Description	Pin	Description
1	- not used -	6	VP: Power supply +5 V only for bus terminating resistors; not for supplying external devices
2	- not used -	7	- not used -
3	RxD/TxD-P: Data line B	8	RxD/TxD-N: Data line A
4	CNTR-P: RTS	9	- not used -
5	DGND: Ground for data signals and VP	Housing	Ground connector

PROFIBUS cable and connector

NOTICE

Contacting the shield of the PROFIBUS cable

The shield of the PROFIBUS cable must be contacted. To do this, strip the insulation from the end of the PROFIBUS cable and connect the shield to functional earth.

Approvals

Approvals issued

Note

Issued approvals on the type plate of the device

The specified approvals apply only when the corresponding mark is printed on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate.

Documents on the Internet

You will find the declarations of conformity listed below and certificates of the product on the Internet at the following address:

Link:

You can view the considered standards in the respective certificate which is available on the Internet at the address listed above.

Address for declarations of conformity

The EU and the UK declarations of conformity are available to all responsible authorities at:

Siemens Aktiengesellschaft
Digital Industries
P.O. Box 48 48
90026 Nuremberg
Germany

EC declaration of conformity



The CP meets the requirements and safety objectives of the following EU directives and it complies with the harmonized European standards (EN) for programmable logic controllers which are published in the official documentation of the European Union.

- **2014/34/EU (ATEX explosion protection directive)**

Directive of the European Parliament and the Council of 26 February 2014 on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres, official journal of the EU L96, 29/03/2014, pages. 309-356

- **2014/30/EU (EMC)**

EMC directive of the European Parliament and of the Council of 26 February 2014 on the approximation of the laws of the member states relating to electromagnetic compatibility; official journal of the EU L96, 29/03/2014, p. 79-106

- **2011/65/EU (RoHS)**

Directive of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

UK Declaration of Conformity



Importer UK:

Siemens plc
Sir William Siemens House
Princess Road
Manchester
M20 2UR

The product meets the requirements of the following directives:

- **UKEX Regulations**

SI 2016/1107 The Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016, and related amendments.

- **EMC Regulations**

SI 2016/1091 The Electromagnetic Compatibility Regulations 2016.

- **RoHS Regulations**

SI 2012/3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments.

ATEX, IECEx, UKEx and CCC Ex certification

Observe the information in the "Use of subassemblies/modules in a Zone 2 Hazardous Area" document, which you will find here:

- On the documentation DVD supplied with the product, under:
"All documents" >"Use of subassemblies/modules in a Zone 2 Hazardous Area"
- On the Internet at the following address:
Link:

The conditions must be met for safe usage of the product according to the section Notices for use in hazardous areas according to ATEX / UKEx / IECEx / CCC-Ex (Page 37).

The product meets the explosion protection requirements outlined below.



II 3 G Ex ec IIC T4 Gc

- DEKRA 18ATEX0027 X
- DEKRA 21UKEX0003 X
- IECEx DEK 18.0019 X

Importer UK:

Siemens plc,
Manchester
M20 2UR

(Ex na IIC T4 Gc, not on the nameplate)

The products meet the requirements of the following standards:

EN/IEC 60079-7, GB 3836.8

EN IEC/IEC 60079-0, GB 3836.1

You will find the considered standards in the currently valid certificates.

EMC

The product meets the requirements of the following directives:

- EU directive 2014/30/EU "Electromagnetic Compatibility" (EMC directive)
- EMC Regulations SI 2016/1091 The Electromagnetic Compatibility Regulations 2016, and related amendments.

Applied standards:

- EN 61000-6-2

Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments

- EN 61000-6-4

Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments

RoHS

The product meets the requirements of the following directives:

- EU directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment.
- SI 2012/3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments.

Applied standard: EN 50581:2012

c(UL)us



Applied standards:

- Underwriters Laboratories, Inc.: UL 61010-1 (Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements)
- IEC/UL 61010-2-201 (Safety requirements for electrical equipment for measurement, control and laboratory use. Particular requirements for control equipment)
- Canadian Standards Association: CSA C22.2 No. 142 (Process Control Equipment)

Report / UL file: E 85972 (NRAG, NRAG7)

cULus Hazardous (Classified) Locations



Underwriters Laboratories, Inc.: cULus IND. CONT. EQ. FOR HAZ. LOC.

Applied standards:

- ANSI ISA 12.12.01
- CSA C22.2 No. 213-M1987

APPROVED for Use in:

- Cl. 1, Div. 2, GP. A, B, C, D T3...T6
- Cl. 1, Zone 2, GP. IIC T3...T6

Ta: Refer to the temperature class on the nameplate of the product.

Report / UL file: E223122 (NRAG, NRAG7)

Note the conditions for the safe deployment of the product according to the section Important notes on using the device (Page 35).

CSA



CSA Certification Mark Canadian Standard Association (CSA) nach Standard C 22.2 No. 142:

- Certification Record 063533-C-000

FM

Factory Mutual Approval Standards:

- Class 3600
- Class 3611
- Class 3810
- ANSI/ISA 61010-1

Report Number 3049847

Class I, Division 2, Group A, B, C, D, T4

Class I, Zone 2, Group IIC, T4

You will find the temperature class on the type plate on the module.

Australia - RCM

The product meets the requirements of the AS/NZS 2064 standards (Class A).

Canada

This class A digital device meets the requirements of the Canadian standard ICES-003.

AVIS CANADIEN

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

MSIP 요구사항 - For Korea only**A급 기기(업무용 방송통신기자재)**

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는것을 목적으로 합니다.

Note that in terms of the emission of interference, this device corresponds to limit class A. This device can be used in all areas except for residential environments.

Current approvals

SIMATIC NET products are regularly submitted to the relevant authorities and approval centers for approvals relating to specific markets and applications.

If you require a list of the current approvals for individual devices, consult your Siemens contact or check the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15406/cert>)

Accessories

A.1

BusAdapter

As an alternative to the integrated Ethernet interface X1, the LINK supports connection to the Ethernet network BusAdapter of the ET 200SP/ET 200SP HA device family. A BusAdapter does not ship with the LINK.

The LINK supports the following BusAdapters:

- BA 2xRJ45

PROFINET BusAdapter with the following connectors:

- 2 x Ethernet jack RJ45

Article number: 6ES7193-6AR00-0AA0

- BA 2xFC

PROFINET BusAdapter with the following connectors:

- 2 x direct connection of the bus cable (FastConnect)

Article number: 6ES7193-6AF00-0AA0

- BA 2xSCRJ

PROFINET BusAdapter with the following connectors:

- 2 x fiber-optic cable POF/PCF

Article number: 6ES7193-6AP00-0AA0

- BA SCRJ/RJ45

PROFINET BusAdapter, media converter FO - copper with the following connectors:

- 1 x fiber-optic cable POF/PCF

- 1 x Ethernet jack RJ45

Article number: 6ES7193-6AP20-0AA0

- BA SCRJ/FC

PROFINET BusAdapter, media converter FO - copper with the following connectors:

- 1 x fiber-optic cable POF/PCF

- 1 x direct connection of the bus cable (FastConnect)

Article number: 6ES7193-6AP40-0AA0

- BA 2xLC

PROFINET BusAdapter with the following connectors:

- 2 x fiber-optic cable glass fiber

Article number: 6ES7193-6AG00-0AA0

- BA LC/RJ45

PROFINET BusAdapter, media converter FO - copper with the following connectors:

- 1 x fiber-optic cable glass fiber
- 1 x Ethernet jack RJ45

Article number: 6ES7193-6AG20-0AA0

- BA LC/FC

PROFINET BusAdapter, media converter FO - copper with the following connectors:

- 1 x fiber-optic cable glass fiber
- 1 x direct connection of the bus cable (FastConnect)

Article number: 6ES7193-6AG40-0AA0

- BA 2xRJ45 VD HA

Ethernet adapter for communication via 2-, 4- or 8-wire copper lines (Variable Distance)

Article number: 6GK5991-2VA00-8AA2

- BA 2xRJ45 HA

PROFINET BusAdapter with the following connectors:

- 2 x Ethernet jack RJ45

Article number: 6DL1193-6AR00-0AA0

- BA 2xFc HA

PROFINET BusAdapter with the following connectors:

- 2 x direct connection of the bus cable (FastConnect)

Article number: 6DL1193-6AF00-0AA0

- BA 2xLC HA

PROFINET BusAdapter with the following connectors:

- 2 x fiber-optic cable glass fiber

Article number: 6DL1193-6AG00-0AA0

- BA LC/FC HA

PROFINET BusAdapter with the following connectors:

- 1 x fiber-optic cable glass fiber
- 1 x direct connection of the bus cable (FastConnect)

Article number: 6DL1193-6AG40-0AA0

- BA LC/RJ45 HA

PROFINET BusAdapter with the following connectors:

- 1 x fiber-optic cable glass fiber
- 1 x Ethernet jack RJ45

Article number: 6DL1193-6AG20-0AA0

SIPLUS ET 200SP

- BA 2xRJ45 SIPLUS

PROFINET BusAdapter with the following connectors:

- 2 x Ethernet jack RJ45

Article number: 6AG1193-6AR00-7AA0 (based on 6ES7193-6AR00-0AA0)

- BA 2xFC SIPLUS

PROFINET BusAdapter with the following connectors:

- 2 x direct connection of the bus cable (FastConnect)

Article number: 6AG1193-6AF00-7AA0 (based on 6ES7193-6AF00-0AA0)

- BA 2xSCRJ SIPLUS

PROFINET BusAdapter with the following connectors:

- 2 x fiber-optic cable POF/PCF

Article number: 6AG1193-6AP00-2AA0 (based on 6ES7193-6AP00-0AA0)

- BA 2xLC SIPLUS

PROFINET BusAdapter with the following connectors:

- 2 x fiber-optic cable glass fiber

Article number: 6AG1193-6AG00-2AA0 (based on 6ES7193-6AG00-0AA0)

You will find the pinout of the Ethernet interface of the BusAdapter with RJ-45 connector in section Pinout of the Ethernet interface (Page 88).

You will find further details in the manual */4/* (Page 102) and in the Siemens Industry Mall.

Link: (<https://mall.industry.siemens.com>)

A.2 C-PLUGs

Usable C-PLUGs

The LINK can be operated with a C-PLUG, a removable data storage medium of configuration data. A C-PLUG does not ship with the LINK.

The following C-PLUGs are available:

- **C-PLUG 32**

Article number: 6GK1 900-0AB00

Memory: 32 MB

- **C-PLUG 32 (conformal coating)**

Article number: 6GK1 900-0AQ00

Memory: 32 MB

- **C-PLUG 256**

Article number: 6GK1 900-0AB01

Memory: 256 MB

- **C-PLUG 256**

Article number: 6GK1 900-0AB10

Memory: 256 MB

- **SIPLUS C-Plug 256 (conformal coating)**

Article number: 6AG1 900-0AB10-7AA0

Memory: 256 MB

Recommendation: Avoid writing data cyclically. The flash area allows a limited number of write cycles.

You will find further details in the Siemens Industry Mall.

Link: (<https://mall.industry.siemens.com>)

Documentation references

Where to find Siemens documentation

- Article numbers

You will find the article numbers for the Siemens products of relevance here in the following catalogs:

- SIMATIC NET - Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC - Products for Totally Integrated Automation and Micro Automation, catalog ST 70

You can request the catalogs and additional information from your Siemens representative. You will also find the product information in the Siemens Industry Mall at the following address:

Link: (<https://mall.industry.siemens.com>)

- Manuals on the Internet

You will find SIMATIC NET manuals on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15247/man>)

Go to the required product in the product tree and make the following settings:

Entry type "Manuals"

- Manuals on the data medium

You will find manuals of SIMATIC NET products on the data medium that ships with many of the SIMATIC NET products.

B.1

/1/

SIMATIC NET
IE/PB LINK PN IO
(6GK1 411-5AB10)
Operating Instructions
Siemens AG

Link: (<https://support.industry.siemens.com/cs/ww/en/view/19299692>)

B.2 /2/

SIMATIC NET
IE/PB LINK PN IO
(6GK1 411-5AB00)
Operating Instructions (2005)
Siemens AG
Link: (<https://support.industry.siemens.com/cs/ww/en/view/19299692>)

B.3 /3/

SIMATIC NET
S7 CPs for Industrial Ethernet
Configuring and Commissioning
Manual Part A - General Applications
Configuration Manual
Siemens AG
Link: (<https://support.industry.siemens.com/cs/ww/en/view/30374198>)

B.4 /4/

SIMATIC
Distributed I/O System ET 200
system manual
Siemens AG
Link: (<https://support.industry.siemens.com/cs/ww/en/view/109742709>)

B.5 /5/

SIMATIC NET
Diagnostics and configuration with SNMP
Diagnostics manual
Siemens AG
Link: (<https://support.industry.siemens.com/cs/de/en/view/103949062>)

B.6 /6/

SIMATIC NET
PROFINET in SIMATIC PCS 7
Guidelines and Blueprints
Siemens AG
Link: (<https://support.industry.siemens.com/cs/de/en/view/72887082>)

Index

A

Article number, 3

B

BusAdapter, 97

C

C-PLUG - monitoring, 80

Cross references (PDF), 5

D

Double addressing in the network, 54

E

Ethernet interface

Assignment, 88

F

Field devices

Parameter assignment, routing, 22

Firmware version, 3

G

Glossary, 7

H

Hardware product version, 3

H-CiR, 20

HSP, 25

H-system, 13

I

Identification data, 72

IP address

From DHCP server, 85

IP configuration, 19

L

LLDP, 85

M

Maintenance mode, 17, 32, 34

Media redundancy

MRP, 19

MIBs, 86

Modes, 13

N

NTP, 77

O

Operating modes, 17, 32

P

PNI, 58

Power supply (redundant), 21

PROFIBUS interface

Assignment, 89

PROFINET IO proxy, 13

PROFINET system redundancy (S2), 20

PROFINET-CiR, 18

PST, 54

PST - Version, 26

R

Redundant power supply - monitoring, 80

Replacing scenario, 47, 84

S

S2 device, 60

Safety notices, 35

SIMATIC mode, 77
SIMATIC NET glossary, 7
SIMATIC S7 controllers, 59
SINEC PNI, 26, 54, 58
SINEC PNI
SINEC PNI
SNMP, 19, 85
Standard mode (gateway), 13
Starting up the LINK, 48
STEP 7 Professional Trial, 26
STEP 7 version, 24
Support package, 25
System redundancy
 S2, 20

T

Time synchronization, 21

W

Watchdog time, 54