

Table 4- 12 Disassembling a lateral auxiliary switch

Step	Operating instruction	Figure
1	Press the clips on the top and bottom of the lateral auxiliary switch together.	
2	Run a screwdriver between the motor starter protector and the lateral auxiliary switch. Dislodge the auxiliary switch from the motor starter protector by carefully turning the screwdriver.	
3	Remove the lateral auxiliary switch from the side of the motor starter protector.	