

## 321, 322

Clamp Meter  
Safety Sheet

(English)

**⚠ Read First: Safety Information**

To ensure safe operation and service of the meter, follow these instructions:

- Avoid working alone so assistance can be rendered.
- Never use the meter on a circuit with voltages higher than 600 V or a frequency higher than 400 Hz fundamental. The meter may be damaged.
- Never measure current while the test leads are inserted into the input jacks.
- Do not use the meter or test leads if they look damaged.
- Use extreme caution when working around bare conductors or bus bars. Contact with the conductor could result in electric shock.
- Read the instruction card before use and follow all safety instructions.
- Use the meter only as specified in the instruction card; otherwise, the meter's safety features may not protect you.
- Use caution when working with voltages above 60 V dc or 30 V ac. Such voltages pose a shock hazard.

**Symbols**

	Application around and removal from HAZARDOUS LIVE conductors permitted.
	Risk of danger. Important information. See instruction card
	Equipment protected by double or reinforced insulation
	Battery
	Conforms to CSA C22.2 No 1010. 2.032-96
	Conforms to EU directives
	Earth
	DC measurement
	AC measurement
	Conforms to relevant Australian standards
	Conforms to UL 3111-1 and UL 3111-2-032
	Inspected and licensed by TÜV Product Services

**Limited Warranty and Limitation of Liability**

This Fluke product will be free from defects in material and workmanship for 2 years from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation  
P.O. Box 9090  
Everett, WA 98206-9090  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands

11/99