

Assembly Tools



CAS-BNC-T



HX-R-BNC



HX-BNC



DIE-R-BNC-*



DIE-BNC-*



HT-BNC

CAS-BNC-T BNC tool case equipped with HX-R-BNC, PT-BNC:Plier tool, CS-BNC: Stripping tool

Note: Dies have to be ordered separately

HX-R-BNC Crimp tool, frame.

DIE-R-BNC-* Crimp tool die for pin and shield for HX-R-BNC.

HT-BNC Spanner tool for the pushPULL BNCs.

HX-BNC Crimp tool, frame (heavy duty).

DIE-BNC-* Crimp tool die for pin and shield for HX-BNC.

Crimp die assignment for HX-BNC

Crimp die assignment for HX-R-BNC

Crimp die	Hex crimp mm		Hex crimp inch		Center pin mm (square crimp)
	A	B	A	B	
DIE-BNC-CS	4.06	7.01	0.160	0.276	1.6
DIE-BNC-JD	5.41	4.53	0.213	0.178	1.6
DIE-BNC-PG	6.47	5.00	0.255	0.197	1.6
DIE-BNC-U	7.36	-	0.290	-	1.6
DIE-BNC-UG	7.36	5.00	0.290	0.197	1.6
DIE-BNC-Y	8.23	-	0.324	-	1.6

Crimp die	Hex crimp mm			Hex crimp inch			Center pin mm (square crimp)
	A	B	C	A	B	C	
DIE-R-BNC-PDC	6.47	4.53	4.06	0.255	0.178	0.160	1.6
DIE-R-BNC-PG	6.47	5.00	-	0.255	0.197	-	1.6
DIE-R-BNC-PJ	6.47	5.41	-	0.255	0.213	-	1.6
DIE-R-BNC-PS	6.47	7.01	-	0.255	0.276	-	1.6
DIE-R-BNC-PU	6.47	7.36	-	0.255	0.290	-	1.6
DIE-R-BNC-PY	6.47	8.23	-	0.255	0.324	-	1.6
DIE-R-BNC-Z	9.73	-	-	0.383	-	-	1.75 (Hex Crimp)
DIE-R-BNC-UG	7.36	5.00	-	0.290	0.197	-	1.6

