

# SM-B550H user manual


- Some content may differ from your device depending on the region or service provider.
- Third party services may be terminated or interrupted at any time, and Samsung makes no representation or warranty that any content or service will remain available for any period of time.
- This product includes certain free/open source software. The exact terms of the licences, disclaimers, acknowledgements and notices are available on the Samsung's website [opensource.samsung.com](http://opensource.samsung.com).

[www.samsung.com](http://www.samsung.com)



Printed in Korea  
GH68-43607A Rev.1.1  
English (EU), 04/2015

## Device layout

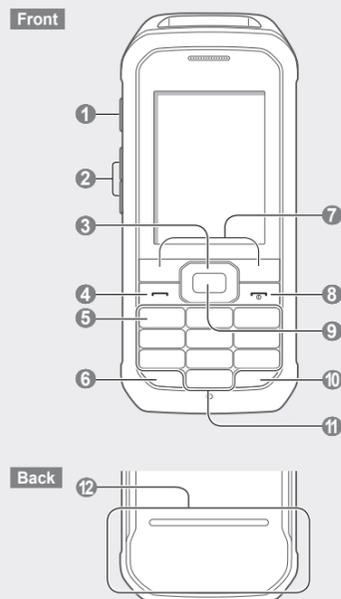

- Torch light button**  
Activate or deactivate the torch  
*See "Using the torch"*
- Volume button**  
From the Home screen, adjust the device's volume; Send an SOS message
- Navigation button**  
From the Home screen, scroll through widgets  
In the Menu screen, scroll through menu options
- Dial button**  
Make or answer a call; From the Home screen, retrieve recently dialed, missed, or received numbers
- Voicemail button**  
From the Home screen, access voicemails (press and hold)
- Keypad lock button**  
From the Home screen, lock or unlock the keypad (press and hold)
- Softkeys**  
Perform actions indicated at the bottom of the display
- Power button**  
Turn the device on or off (press and hold); End a call; In the Menu screen, cancel an input and return to the Home screen
- Confirm button**  
In the Menu screen, select the highlighted menu option, or confirm an input  
*The key might perform differently, depending on the region*
- Silent mode button**  
From the Home screen, activate or deactivate the silent mode (press and hold)
- Alphanumeric buttons**
- Internal antenna**  
Do not cover the antenna area with your hands or other objects. This may cause connectivity problems or drain the battery

The device displays the following status indicators at the top of the screen:

Icon	Description	Icon	Description
	No SIM card		SOS message feature activated
	No signal		Normal profile activated
	Signal strength		Silent profile activated
	Network searching		Connected to computer
	GPRS network connected		Bluetooth feature activated
	EDGE network connected		Alarm activated
	UMTS network connected		Earphone inserted
	HSDPA network connected		Music playback in progress
	Battery power level		Music playback paused
	Call in progress		FM radio on
	Call diverting activated		Roaming (outside of normal service area)
	New text message (SMS)		Memory card inserted
	New multimedia message (MMS)		Flight mode
	New voice mail message		Current time
	New push message		

## Charging the battery



To electric socket

 
- Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger into an electric socket.
- After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause battery to explode or damage the device.
- Do not remove the battery before removing the charger. This may damage the device.

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

## Insert a memory card (optional)

The device accepts memory cards with maximum capacities of 16 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the device.



Memory card

Insert the memory card as shown in the drawing.

- Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

## Turning the device on or off

### Turning the device on

Press and hold [Power], and then enter the PIN and press <OK>, if necessary.

### Turning the device off

Press and hold [Power].

- If the battery is fully discharged or removed from the device, the time and date will be reset.

## Accessing menus

To access the device's menus or options,

Navigation button	Scroll to each menu.
Confirm button	Launch a menu or an application.
<Menu>	Open the Menu screen.
<Back>	Return to the previous screen.
[Power]	Close the menu or application and return to the Home screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

## Entering text

### Changing the text input mode

Press [#]	Change to uppercase, lowercase, or switch to number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on the region, users might be able to use an input mode for specific language.
Press [*]	Switch to symbol mode.
Press and hold [*]	Select an input mode, change the input language, or select words in word list.

### T9 mode

 
- Press the appropriate alphanumeric buttons to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation button up or down to select an alternate word.

### ABC mode

Press an appropriate alphanumeric button until the character appears on the display.

## Installing the SIM card and battery

- Remove the back cover and insert the SIM card.




Back cover

SIM card

- Do not bend or twist the back cover excessively. Doing so may damage the cover.

- Insert the battery and replace the back cover.

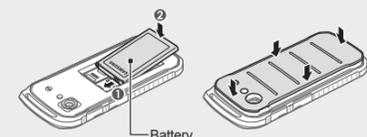

Battery

- Ensure that the back cover is completely closed to avoid water damage.

## Charging the battery



To electric socket

 
- Plug the small end of the charger into the multipurpose jack of the device, and plug the large end of the charger into an electric socket.
- After fully charging, disconnect the device from the charger. First unplug the charger from the device, and then unplug it from the electric socket.

- Use only Samsung-approved chargers, batteries, and cables. Unapproved chargers or cables can cause battery to explode or damage the device.
- Do not remove the battery before removing the charger. This may damage the device.

- To save energy, unplug the charger when not in use. The charger does not have a power switch, so you must unplug the charger from the electric socket when not in use to avoid wasting power. The charger should remain close to the electric socket and easily accessible while charging.

## Insert a memory card (optional)

The device accepts memory cards with maximum capacities of 16 GB. Depending on the memory card manufacturer and type, some memory cards may not be compatible with the device.



Memory card

Insert the memory card as shown in the drawing.

- Formatting the memory card on a computer might cause incompatibility with your device. Format the memory card only on the device.
- Frequent writing and erasing of data will shorten the lifespan of memory cards.
- Do not use sharp tools to remove the memory card from the device.

## Turning the device on or off

### Turning the device on

Press and hold [Power], and then enter the PIN and press <OK>, if necessary.

### Turning the device off

Press and hold [Power].

- If the battery is fully discharged or removed from the device, the time and date will be reset.

## Accessing menus

To access the device's menus or options,

Navigation button	Scroll to each menu.
Confirm button	Launch a menu or an application.
<Menu>	Open the Menu screen.
<Back>	Return to the previous screen.
[Power]	Close the menu or application and return to the Home screen.

- When you access a menu requiring the PIN2, you must enter the PIN2 supplied by the SIM card. For details, contact your service provider.
- Samsung is not responsible for any loss of passwords or private information or other damage caused by illegal software.

## Entering text

### Changing the text input mode

Press [#]	Change to uppercase, lowercase, or switch to number mode.
Press and hold [#]	Switch between T9 and ABC mode. Depending on the region, users might be able to use an input mode for specific language.
Press [*]	Switch to symbol mode.
Press and hold [*]	Select an input mode, change the input language, or select words in word list.

### T9 mode

- Press the appropriate alphanumeric buttons to enter an entire word.
- When the word displays correctly, press [0] to insert a space. If the word does not display, press the Navigation button up or down to select an alternate word.

### ABC mode

Press an appropriate alphanumeric button until the character appears on the display.

### Number mode

Press an appropriate alphanumeric button to enter a number.

### Symbol mode

Press an appropriate alphanumeric button to enter a symbol.

### Other features for text input

Press the Navigation button	Move the cursor.
Press <Clear>	Delete characters one by one.
Press and hold <Clear>	Delete characters quickly.
Press [0]	Insert a space. Press three times to change the line.
Press [1]	Enter punctuation marks.

## Making or answering a call

- To make a call, enter a phone number and press [Call].
- To end a call, press [End call].
- To call a recently dialled number, press [Redial] to select a number, and press [Redial] again to dial the number.
- To make a call using the phonebook, press <Menu> → <Contacts>, select a contact and press [Call].
- To answer an incoming call, press [Answer].

## Sending and viewing messages

<Menu> → Messages

### Sending messages

- Press **Create message**.
- Enter a contact number or press **Add** to open the phonebook.
- Select a contact and press **Add**.
- Scroll down and enter a text message.  
*See "Entering text".*
- To attach files with the message, press <Options> → **Add multimedia** and take photos or select files.
- Press **Send**.

### Viewing messages

Press **Inbox** and select a message to read.

## Managing contacts

Save data, such as names, phone numbers and personal information in the device memory or SIM card.

<Menu> → Contacts

- Users can change the memory location by pressing <Menu> → <Contacts> → <Options> → **Settings** → **Save new contact to** and selecting a memory location.

### Adding new contacts

- Press <Options> → **Create contact** → a memory location (if necessary).
- Select a number type (if necessary).
- Enter contact information and press the Confirm button.

### Editing contacts

- Select a contact and press the Confirm button.
- Edit items and press the Confirm button to save.

### Deleting contacts

Select a contact and press <Options> → **Delete**.

## Using the camera

<Menu> → Camera

### Taking photos

- Rotate the device anti-clockwise to landscape view. Or, press [8] to change between landscape and portrait view.
- Aim the lens at the subject and make any adjustments by pressing <Options>.
- Press the Confirm button to take a photo. Photos are saved automatically.

### Recording videos

- Press <Options> → **Camcorder**. Or, press [1] to change from **Camera** to **Camcorder**.
- Rotate the device anti-clockwise to landscape view.
- Aim the lens at the subject and make any adjustments by pressing <Options>.
- Press the Confirm button to start recording.
- Press [Stop] to end recording. Videos are saved automatically.

### Viewing photos and videos

From the Home screen, press <Menu> → **My Files** → **Images** or **Videos** and select an item to view.

## Listening to music

<Menu> → Music

Buttons	Function
Confirm button	Play, pause, or resume music.
Navigation button	<ul style="list-style-type: none"> <li>Left: Skip backwards (press); Scan backwards in a file (press and hold).</li> <li>Right: Skip forwards (press); Scan forwards in a file (press and hold).</li> <li>Up: Open the playlist.</li> <li>Down: Change the repeat mode.</li> </ul>
1	Rate the current track.
2	Change the sound effect.
3	Change the music display.
4	Change the repeat mode.
5	Turn shuffle mode on or off.

## Browsing the web

<Menu> → Opera Mini

- When users access **Opera Mini** for the first time, users might be prompted to create an Internet profile.

### Navigating webpages

Buttons	Function
Navigation button	Scroll up or down on a webpage.
Confirm button	Select an item.
<Back>	Return to the previous page.
<Menu>	Open browser options.

### Bookmarking webpages

- Open a webpage to bookmark.
- Press <Menu> → Select [Down arrow] for drop-down list.
- Select **Bookmarks** → <Add>.
- Enter details and press <Save>.

## Using the alarm

<Menu> → Alarms

### Setting alarms

- Press <Create>.
- Enter details and press <Save>.

### Stopping alarms

When an alarm rings,

- Press <Confirm> to stop the alarm.
- Press <Snooze> to silence the alarm for the snooze period.

### Deleting alarms

Select an item and press <Options> → **Delete**.

### Deactivating alarms

Select an item and press <Options> → **Deactivate alarm**.

## Managing calendar

<Menu> → Calendar

### Creating events

- Press <Options> → **Create** and select an event type.
- Enter details of the event and press <Save>.

### Viewing events

Select a date and press the Confirm button. To change the calendar view, press <Options> → **Week view** or **Month view**.

## Listening to the FM radio

<Menu> → FM Radio

### Activating the FM radio

- Plug a headset into the device.
- Press the Confirm button to turn on the FM radio.
- Press <Yes> to start automatic tuning. Users may be asked to start automatic tuning when accessing the FM radio for the first time.
- Control the FM radio using the following buttons:

Buttons	Function
Confirm button	Turn the FM radio on or off.
Navigation button	Left/Right: Fine-tune the frequency; Search for the next available station (press and hold).

### Adding radio stations to the favourites list

- Plug a headset into the device.
- Press <Options> → **Add to** → **Favourites**.
- Assign a button and press <Select>.

## Using the Bluetooth feature

<Menu> → Bluetooth

### Turning on the Bluetooth feature

- Press <Options> → **Settings** and set **Bluetooth to On**.
- Set **My phone's visibility** to allow other devices to search for the device.

### Finding and pairing with other Bluetooth devices

- Press the Confirm button to find other Bluetooth devices.
- Select a device and press the Confirm button.
- Press <Yes> to match the PIN between the devices.
- When the other device accepts the connection, pairing is complete.

- Users might have to enter a PIN, depending on the device.

### Turning off the Bluetooth feature

Select <Options> → **Settings** and set **Bluetooth** to **Off**.

### Sending data using the Bluetooth feature

- Select items to send from one of the device's applications.
- Press <Options> → **Send via** → **Bluetooth**.

## Customising the device

Settings control how applications and functions operate. Change them to customise the device. Appearances, sound profiles, call actions, and many more can be customised.

<Menu> → Settings

Menu	Description
<b>Profiles</b>	Change the alert type, ringtone, volume, etc.
<b>Display</b>	Alter wallpaper, theme, brightness, etc.
<b>Time and date</b>	Change the time and date of the device.
<b>Phone</b>	Change the device language, etc.
<b>Call</b>	Set auto reject, answering mode, call forwarding, fake call, etc.
<b>Backup manager</b>	Back up or restore data.
<b>Security</b>	Set locks or change passwords.
<b>PC connections</b>	Set connection settings with a computer.
<b>Network</b>	Change network profiles settings.
<b>Ultra power saving</b>	Activate or deactivate ultra power saving mode.

