Fuse accessory selection guide

Technical Note 10575

J


The star

												C)				
Fuse fam	ily			Size	PCB fuse	clip	PCB mo	unt holder		Panel	mount ho	lder				In-line	fuse hold
ABC	<u>AGC</u>			1/4" x 1 1/4" (6 mm x 32 mm)			HBH-I	HBV-I		HTB	<u>HK</u>	<u>HKP</u>	<u>HMR</u>	<u>HGA</u>	<u>HTJ</u>	<u>HRK</u>	HHB
AGA				1/4" x 5/8"			—			—						—	
<u>AGW</u>				1/4" x 7/8"	<u>1Axxxx</u>		-			—						<u>HRK</u>	<u>HHB</u>
<u>AGX</u>				1/4" x 1"			-			<u>HJL</u>	<u>HJM</u>						
AHC(A)	<u>ADC</u>			1/4" x 1 1/4" (6 mm x 32 mm)			HBH-I	HBV-I		<u>HVP</u>						<u>HVI</u>	
<u>AMH</u>	<u>AML</u>			55.4 mm x 17.7 mm x 12 mm Bolt-down fuse	—		—			—						—	
<u>AMX</u>				48 mm x 12 mm x 8.5 mm Bolt-down fuse	—		—			—						—	
<u>ATC</u>				Auto blade fuse (19.1 mm x 18.7 mm)	<u>1A5600</u>		-			—						HHF	<u>JFCU</u>
<u>ATM</u>				Auto mini blade fuse (10.92 mm x 16.25 mm)	<u>1A5778</u>		—			—						HHM	
<u>C519</u>	<u>C520</u>			5 mm x 15 mm	<u>1Axxxx</u>		-			-						HHT	
<u>FNM</u>	<u>FNQ</u>			13/32" x 1 1/2" (10 mm x 38 mm)	<u>1A3400</u>		—			HP						HEB	
<u>FNQ-R</u>	<u>KTK-R</u>	LP-CC		Class CC			—									—	
<u>GBA</u>	<u>GLD</u>			1/4" x 1 1/4" (6 mm x 32 mm)	1Axxxx		—			<u>HLD</u>						—	
<u>GBB</u>							<u>HBH-I</u>	<u>HBV-I</u>		<u>HTB</u>	<u>HK</u>	<u>HKP</u>	<u>HMR</u>	<u>HGA</u>	<u>HTJ</u>	<u>HRK</u>	<u>HHB</u>
<u>GDA</u> <u>GDB</u>	<u>GDC</u> <u>GMA</u>	<u>GMC</u> <u>GMD</u>		5 mm x 20 mm	<u>1Axxxx</u>	HTC-2xxM	<u>H15</u>	HBH-M	HBV-M	<u>HTB</u>	<u>HTC</u>					<u>HHT</u>	
<u>KLKE</u>	<u>KLM</u>	<u>KTK</u>		13/32" x 1 1/2" (10 mm x 38 mm)	<u>1A3400</u>		—			HP						HEB	
MDA MDP	MDL	<u>MDQ</u>	<u>MDH</u>	1/4" x 1 1/4" (6 mm x 32 mm)	<u>1Axxxx</u>		<u>HBH-I</u>	HBV-I		<u>HTB</u>	<u>HK</u>	<u>HKP</u>	<u>HMR</u>	<u>HGA</u>	<u>HTJ</u>	HRK HVI	<u>HHB</u>
PC-Tron (PC	<u>CB, PCC, PCE</u>),PCE,PCF,PC	<u>G,PCH,PCI)</u>	Radial leaded fuse	—		<u>BK-PCS (I</u> only)	PCC or PCE		_						—	
<u>S500</u> <u>S505H</u>	<u>S501</u> S520	<u>S505</u>	<u>S506</u>	5 mm x 20 mm	<u>1Axxxx</u>	HTC-2xxM	<u>H15</u>	HBH-M	HBV-M	<u>HTB</u>						HHT	
<u>SC-xxA</u>				13/32" x various lengths 1.31" to 2.25"	<u>1A3400</u>		_			HPS-EE	<u>HPS-JJ</u>	<u>HPS-FF</u>				<u>HEG</u>	<u>HEH</u>
<u>SFE</u>				1/4" x various lengths (5/8" to 1 7/16")	<u>1Axxxx</u>		_			-						HR/HM	
<u>SR-5 / SR- SS-5 / SS-</u>	<u>5F / SR-5H</u> 5F <u>/ </u> SR-5H			Radial leaded fuse	_		BK-PCS			-						—	
<u>TDC10/11</u>				1/4" x 1 1/4" (6 mm x 32 mm)			HBH-I	<u>HBV-I</u>		<u>HTB</u>	<u>HK</u>	<u>HKP</u>	<u>HMR</u>	<u>HGA</u>	<u>HTJ</u>	<u>HRK</u>	<u>HHB</u>
<u>TDC180</u>	<u>TDC600</u>			1/4" x 1"	<u>1Axxxx</u>		_			<u>HJL</u>	<u>HJM</u>					<u>HRK</u>	<u>HHB</u>



BUSSMANN SERIES

Effective September 2024 Supersedes February 2023

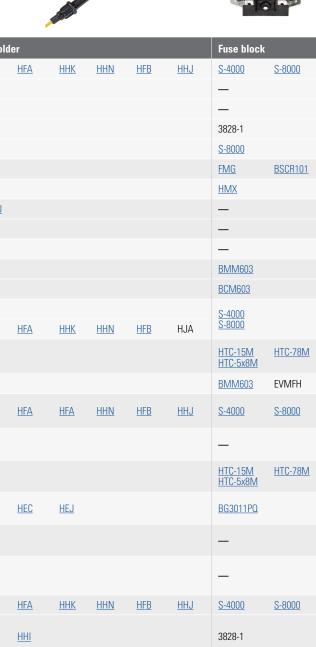

Tools & resources

- <u>Webpage</u>
- Parametric search tool
- How to select a fuse holder white paper

© 2024 Eaton All Rights Reserved Printed in USA Publication No. 10575 September 2024

Eaton is a registered trademark.

All other trademarks are property of their respective owners.