

LR Series Modular Models

Select a Buzzer Unit (for Flashing / Buzzer function)

Size	Color	Model	Power Consumption	Mass
φ40		LR4-B□	1.0W	0.035kg
φ50		LR5-B□	1.0W	0.050kg
φ60		LR6-B□	1.0W	0.080kg
φ70		LR7-B□	1.0W	0.070kg

□...W: Off-white U: Silver K: Black

Select an LED Unit

Size	Color	Model	Power Consumption	Mass
φ40		LR4-E-FY/G/B/C	1.0W	0.035kg
φ50		LR5-E-FY/G/B/C	1.0W	0.040kg
φ60		LR6-E-FY/G/B/C	1.0W	0.060kg
φ70		LR7-E-FY/G/B/C	1.0W	0.065kg

Select a Body Unit

Direct Mount Models (WJ, WT)

- DC24V / AC100-240V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)
- DC24V / DC24V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)
- DC24V / AC100-240V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)

L-bracket Models (LJ)

- DC24V / DC24V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)
- DC24V / AC100-240V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)

Folding Bracket Models (QJ)

- DC24V / DC24V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)
- DC24V / AC100-240V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)

Circular Bracket Mount Models (PJ)

- DC24V / DC24V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)
- DC24V / AC100-240V Cable Terminal: LR4 (φ40), LR5 (φ50), LR6 (φ60), LR7 (φ70)

Body Unit Model Code

(Ex.) LR6-02WJNW

Model		①	②	③	④	⑤
(1) Size	(2) Rated Voltage	(3) Mounting/Wiring	(4) Flashing/Buzzer	(5) Body Color		
4 = φ40 5 = φ50 6 = φ60 7 = φ70	01 = DC12V ^{#1} 02 = DC24V M2 = AC100-240V ^{#2}	WJ = Direct with Terminal ^{#3} WT = Direct with Cable ^{#4} LJ = Pole Mount with Cable ^{#4} PJ = Pole Circular Bracket with Cable ^{#4} QJ = Pole Folding Bracket with Cable ^{#4}	N = No Flashing/Buzzer 1 = Flashing/Buzzer	W = Off-white U = Silver K = Black ^{#5}		

^{#1} For LRS models only
^{#2} For WJ and PJ mounting with LR4 and LR6 models
^{#3} For LR5, LR7, DC24V models only
^{#4} With LR4 and LR6 DC24V Cable models only
^{#5} For LR5, LR7 models only

3 Easy Steps

1 Remove the headcover to setup the body unit



2 Attach one LED unit at a time to the body unit



3 Replace the headcover, or attach the buzzer unit



See the Movie!

Scan the QR code to see how easy LR is to configure.



Mounting Type	Rated Voltage	Size	Wiring	Model
Direct Mount	DC12V	φ50	Cable	LR5-01WJNW
		φ40		LR4-02WJNW/U
	DC24V	φ50	Cable	LR5-02WJNW
		φ60		LR6-02WJNW/U
Screwless Terminal	φ50	Screwless Terminal	LR7-02WJNW	
	φ70		LR7-02WTNW/UJK	
Pole Mount with/ Circular Bracket	AC100-240V	φ40	Cable	LR4-M2WJNW
		φ60		LR6-M2WJNW
	DC12V	φ50	Cable	LR5-01PJNW
		φ40		LR4-02PJNW/U
DC24V	φ50	Cable	LR5-02PJNW	
	φ60		LR6-02PJNW/U	
Pole Mount with/ L-bracket	AC100-240V	φ40	Cable	LR4-M2PJNW
		φ60		LR6-M2PJNW
	DC12V	φ50	Cable	LR5-01LJNW
		φ40		LR4-02LJNW/U
DC24V	φ50	Cable	LR5-02LJNW	
	φ60		LR6-02LJNW/U	
Pole Mount with/ Folding Bracket	DC24V	φ40	Cable	LR4-02QJNW
		φ60		LR6-02QJNW

Removable Screwless Terminal



A new, removable terminal for easier wiring.



The terminal can be pulled out

