



INSTRUCTION MANUAL

FRONT

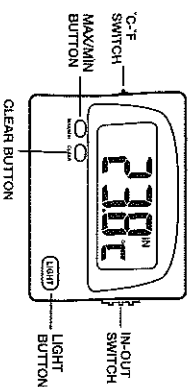

BACK

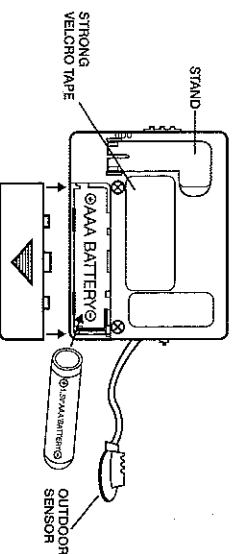

1. INSTALLATION

Choose a suitable space away from direct sunlight, rain or extreme heat. Wipe the area clean, remove protective paper from Velcro magic tape on unit back. Press firmly into position.

2. TO INSERT BATTERY

Slide and open the battery door on the rear of the unit, insert one "AAA" battery by following the + and - polarity signs inside the battery compartment.

3. TO READ IN-OUT TEMPERATURE

Slide the IN-OUT switch, the LCD display shows the current indoor or outdoor temp.

4. TO CHOOSE DEGREE °C OR °F TEMPERATURE READOUT

Slide the °C / °F switch for Celsius or Fahrenheit temp. readout.

5. TO USE THE MIN-MAX TEMPERATURE MEMORY

Press the MIN-MAX button to read highest and lowest records of indoor or outdoor temp.

| TO READ INDOOR MAX-MIN TEMP. | | TO READ OUTDOOR MAX-MIN TEMP. | |
|--|--|---|--|
| Indoor MAX Temp. | | Outdoor MAX Temp. | |
| Indoor MIN Temp. | | Outdoor MIN Temp. | |
| Press 'CLEAR' button to clear indoor MAX-MIN Temp. memory record | | Press 'CLEAR' button to clear outdoor MAX-MIN Temp. memory record | |
| | | | |

To facilitate **HOURLY, DAILY, WEEKLY, MONTHLY and ANY SPECIFIC PERIOD'S** in/out max-min memory record, memory can be cleared by pressing "CLEAR" button, and new memory can be recorded instantly when the display is back to normal temp. mode.

8. TO USE BACKLIGHT

Press the LIGHT button to light up the LCD display to read temperature in the dark.

Remark : Frequent use of this feature will affect the battery life.

CARE OF YOUR PRODUCT

- Avoid exposing your Thermometer to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol, or cleaning agents.

MODEL 3370
ENGLISH