

# DTX-PLA002S




## 10 Gigabit Permanent Link Adapters

### Users Guide

The DTX-PLA002S is a set of two permanent link adapters for use with a Fluke Networks DTX CableAnalyzer™ tester. The adapters let you test and certify installed permanent links to proposed ANSI/TIA/EIA Cat 6A standards and verify that links will support 10 Gigabit Ethernet applications.

The adapter's minimal effect on test results ensures that your results exceed the accuracy and repeatability specifications given in the proposed TIA-568-B, ISO 11801, and IEEE 802.3an (10GBASE-T) standards.


## Symbols

	Warning or Caution: Risk of damage or destruction to equipment or software. See explanations in the manuals.
	<p>This product complies with the WEEE Directive marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Product Category: With reference to the equipment types in the WEEE Directive Annex I, this product is classed as category 9 "Monitoring and Control Instrumentation" product. Do not dispose of this product as unsorted municipal waste.</p> <p>To return unwanted products, contact the manufacturer's web site shown on the product or your local sales office or distributor.</p>
	40 year Environment Friendly Use Period (EFUP) under China Regulation - Administrative Measure on the Control of Pollution Caused by Electronic Information Products. This is the period of time before any of the identified hazardous substances are likely to leak out, causing possible harm to health and the environment.

## Caution

To avoid damaging the adapter and to ensure maximum accuracy of test results:

- Never pinch, kink, or crush the adapter's cable. Follow the handling guidelines given in Figures 1 and 3.
- Never connect the adapters to telephone lines of any type, including ISDN lines. Doing so can damage the adapters and the tester.
- Always turn on the tester before connecting it to a link. Doing so activates the tool's input protection circuitry.
- Before using a DTX tester, read the complete list of safety and operational information given in the product's documentation.

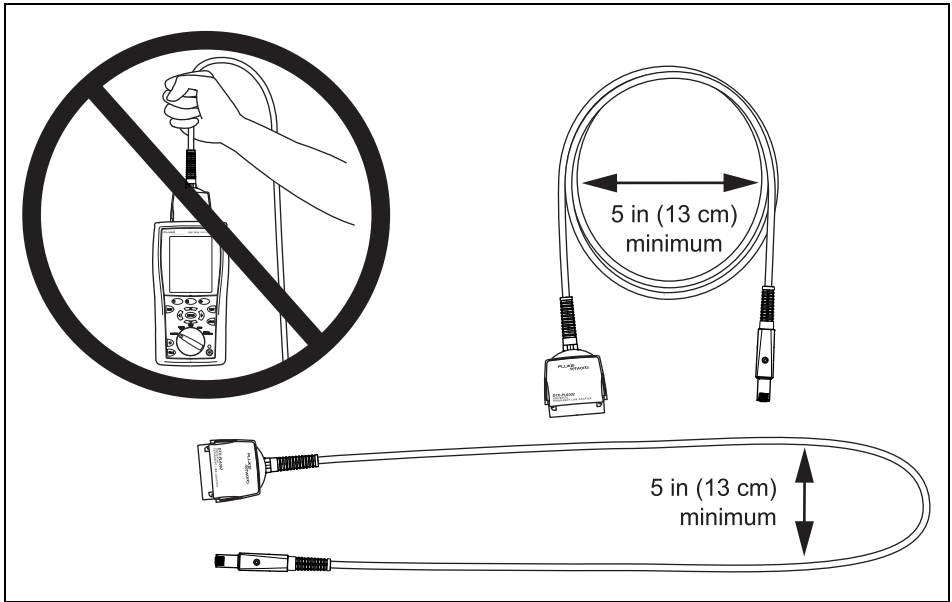

eiy01.eps

**Figure 1. Handling Guidelines**

# Using the Permanent Link Adapters

*Note*

*The DTX main and remote testers must have software version 1.31 or later to work with the DTX-PLA002 adapters. Software upgrades are available on the Fluke Networks website.*


Figure 2 shows typical connections to a permanent link. Be sure to select the test standard appropriate for the link under test. Refer to the tester's users manual or contact Fluke Networks for additional information.

*Note*

*To disconnect the plug from a patch panel, pull on the plug's case as shown in Figure 3. You do not need to depress the latch to disconnect the plug.*


**⚠ Caution**

**To avoid damaging the adapter, never pull on the strain relief to disconnect the plug from a patch panel. See Figure 3.**

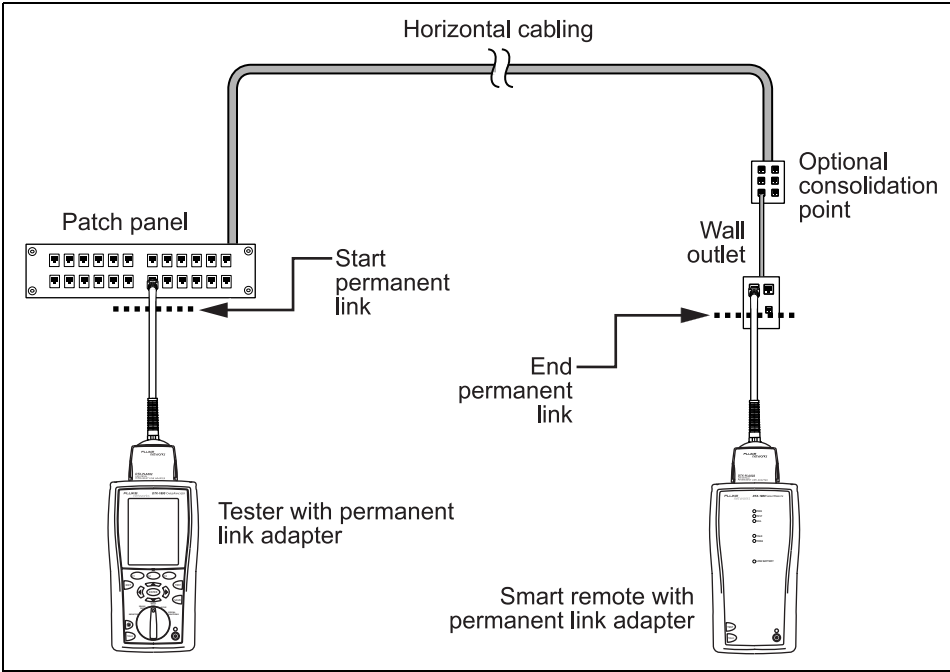

**Figure 2. Connecting to a Permanent Link**

eti02.eps

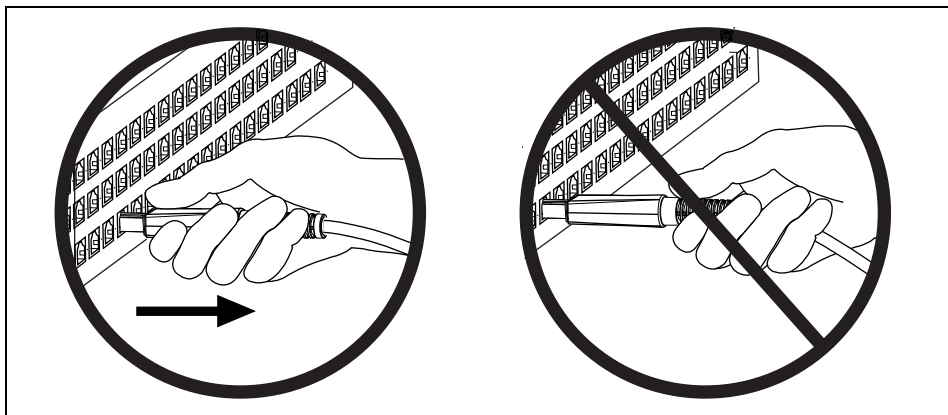

eiy03.eps

**Figure 3. Disconnecting the Plug from a Jack**

## Maintenance and Service

Clean the adapters with a soft cloth dampened with water or water and a mild soap. Do not use abrasives, solvents, or alcohol.

For the most current test standards, new features, and other enhancements, keep your tester's software up to date. The latest version of software is available on the Fluke Networks website.

If an adapter does not work properly, check for damage to the connectors or cable. Verify that the adapter is securely latched to the tester.

The adapters should be serviced only by a qualified technician. Contact Fluke Networks for the location of the nearest service center.

### Replacing the Tip or Latch

Replace the tips when test result margins begin to shrink or if a tip is damaged. The Autotest counter on the tester's version information screen is useful for tracking the number of insertions.

The plug's latch may also wear out over time. The kit listed under "Options and Accessories" provides replacement tips and latches.

# Options and Accessories

Description	Fluke Networks Model Number
Set of 2 tips, 2 latches, 2 screws, and 2 conductive washers for DTX-PLA002 Permanent Link Adapters	DTX-PLA002PRP

## Contacting Fluke Networks

-  [www.flukenetworks.com](http://www.flukenetworks.com)
-  [info@flukenetworks.com](mailto:info@flukenetworks.com)
-  1-800-283-5853, +1-425-446-5500
-  **Fluke Networks**  
6920 Seaway Boulevard, MS 143F  
Everett WA 98203 USA

Fluke Networks operates in more than 50 countries worldwide. For more contact information, go to our website.

## Specifications

The DTX-PLA002 Permanent Link Adapter meets all proposed measurement accuracy specifications for Level IV test equipment. Visit the Fluke Networks website for performance characteristics and additional information.

- Life of module contacts (typical):** >5,000 cycles
- Dimensions:** 4.57 in x 2.13 in x 1.81in (11.6 cm x 5.4 cm x 4.6 cm) with 5 ft (1.5 m) cable
- Weight:** 6.6 oz (187 g)

## LIMITED WARRANTY AND LIMITATION OF LIABILITY

Fluke Networks mainframe products will be free from defects in material and workmanship for one year from the date of purchase, unless stated otherwise herein. Parts, accessories, product repairs and services are warranted for 90 days, unless otherwise stated. Ni-Cad, Ni-MH and Li-Ion batteries, cables or other peripherals are all considered parts or accessories. This warranty does not cover damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke Networks' behalf. To obtain service during the warranty period, contact your nearest Fluke Networks authorized service center to obtain return authorization information, then send your defective product to that Service Center with a description of the problem.

For a list of authorized resellers, visit [www.flukenetworks.com/wheretobuy](http://www.flukenetworks.com/wheretobuy).

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE NETWORKS IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

4/15

Fluke Networks  
PO Box 777  
Everett, WA 98206-0777  
USA