

**851 = RS 317-244**

Brief setting instructions are detailed below. For fully detailed instructions please refer to the USER BOOKLET.

**ALL MODELS:** Insert key and turn to "Set Time" position. Enter Day No. followed by actual Time (24 hour clock). Return key to "Run".

**Insert key and turn to "Set Programme". Enter Day No. followed by Time (24 hour clock) followed by either "Enter On" or "Enter Off" as required. Return key to "Run".**

**Insert key and turn to "Set Channel 1", Enter Day No./Time/and event as above. Then turn key to "Set Channel 2" and enter programme for this channel in the same way. Finally return key to "Run".**

Insert key and turn to "Set Programme" or "Set Channel". Enter Day No. and event time required followed by "Enter". Finally return key to "Run".

**Insert key and turn to either "Set Programme" or "Set Channel". Pressing the "Verify" keypad will display the next programme event set. Pressing the "Cancel" key will cancel the programme event on display. Return key to "Run".**

**Either of these keypads can be operated without the key inserted. Pressing the "Extend" keypad will either extend the current On programme or switch the output(s) On if they are Off. Pressing the "Crop" keypad will cancel a current On programme. A second press of either keypad will restore the unit to the set programme(s).**

Record	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday	Sunday
Assigned Day No.							
Event/Time							