

XPSMCMx Fieldbus Expansion Modules

Instruction Sheet (Original Language)

12/2014

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Failure to use Schneider Electric software or approved software with our hardware products may result in injury, harm, or improper operating results.

Failure to observe this information can result in injury or equipment damage.

© 2014 Schneider Electric. All rights reserved.

Table of Contents



| | |
|--|---|
| About the Book | 5 |
| XPSMCMx Fieldbus Expansion Modules | 7 |

About the Book



At a Glance

Document Scope

This information is about the usage and configuration of the following fieldbus expansion modules for the XPSMCMCP0802• Modular Safety Controller:

| Reference | Interface |
|-----------------|---------------------|
| XPSMCMCO0000CO• | CANopen |
| XPSMCMCO0000DN• | DeviceNet |
| XPSMCMCO0000EC• | EtherCAT |
| XPSMCMCO0000EI• | Ethernet/IP |
| XPSMCMCO0000EM• | Modbus TCP/IP |
| XPSMCMCO0000EP• | PROFINET |
| XPSMCMCO0000MB• | Modbus Serial (RTU) |
| XPSMCMCO0000PB• | PROFIBUS DP |
| XPSMCMCO0000UB• | USB |

Validity Note

The characteristics that are presented in this manual should be the same as those characteristics that appear online. In line with our policy of constant improvement, we may revise content over time to improve clarity and accuracy. If you see a difference between the manual and online information, use the online information as your reference.

Product Related Information

The XPSMCM• is built to the following safety integrity levels: SIL 3 according to EN/IEC 61508, SILcl 3 according to EN/IEC 62061, PL e category 4 according to EN ISO 13849-1 in accordance with the applicable standards. However, the definitive SIL and PL of the application depends on the number of safety components, their parameters, and the connections that are made, as per the risk analysis.

The module must be configured in accordance with the application-specific risk analysis and all the applicable standards.

Pay particular attention in conforming to any safety information, different electrical requirements, and normative standards that would apply to your adaptation.

WARNING

UNINTENDED EQUIPMENT OPERATION

Perform an in-depth risk analysis to determine the appropriate safety integrity level for your specific application, based on all the applicable standards.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTE: Configuration of the module is the sole responsibility of the installer or user.

For all matters concerning functional safety, if necessary, contact the competent safety authorities or the competent trade associations of your country.

Consult the specific product documentation and the relative product and/or application standards to ensure correct use of modules connected to the fieldbus expansion modules within your specific application.

The ambient temperature of the installed system must be compatible with the operating temperature parameters stated on the product label and in the product specifications.

XPSMCMx Fieldbus Expansion Modules

Safety-related Information

NOTE: The safety function can be compromised if this module is not used for the intended purpose and in accordance with the instructions in this document.

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Do not install, operate, or maintain this equipment unless you are a trained professional electrician and qualified to perform these activities.
- Install and use this equipment only in locations known to be non-hazardous.
- Do not use the equipment described herein to supply external drives or contactors.
- Use the same ground supply (0 Vdc) to supply all modules of the Modular Safety Controller family.
- Disconnect all power from all equipment including connected input devices, contactors, and drives prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires.
- If connected drives or contactors contain stored energy, allow sufficient time after the removal of power for the stored energy to discharge in accordance with the instructions for those drives and contactors.
- Always use a properly rated voltage sensing equipment to confirm that the power is removed.
- Avoid contacting terminals with hand or tools until the power has been confirmed removed.
- Follow all electrical safety regulations and standards (for example, lockout/tag-out, phase grounding, barriers) to reduce the possibility of contact with hazardous voltages in the work area.
- Remove locks, tags, barriers, temporary ground straps, and replace and secure all covers, doors, accessories, hardware, cables, and wires and confirm that a proper ground connection exists before reapplying power to the unit.
- Complete thorough hardware tests and system commissioning to verify that line voltages are not present on the control circuits before using your hardware operationally.
- Use only the specified voltage when operating this equipment and any associated products.

Failure to follow these instructions will result in death or serious injury.

DANGER

LOSS OF DESIGNATED SAFETY FUNCTION

- Install the XPSMCM[®] Modular Safety Controller in an enclosure with a protection class of at least IP 54.
- Always use an isolated power supply (PELV) to help prevent the application of line voltages to control circuitry in the case of short-circuits.

Failure to follow these instructions will result in death or serious injury.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Do not use the Modular Safety Controller in locations where explosive atmospheres are suspected, or are confirmed, to exist.
- Do not use the Modular Safety Controller on mobile, moveable, or floating systems.
- Do not use the Modular Safety Controller for life support systems.
- Do not use the Modular Safety Controller in underground applications.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTE: The observation of operating limits and duty cycles is of particular importance for equipment designed to perform a safety function. If this module has been subjected to electrical, mechanical, or environmental stresses in excess of its stated limits, do not use it.

WARNING

UNINTENDED EQUIPMENT OPERATION

- Do not exceed any of the rated values specified in this document.
- Immediately cease using and replace any module that has or might have been subjected to conditions in excess of its rated operating limits.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

User Responsibilities

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user, machine builder, or system integrator to perform the appropriate and complete risk analysis, evaluation, and testing of the products with respect to the relevant specific application or use thereof.

Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found discrepancies in this publication, notify Schneider Electric. All pertinent safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

Qualified Personnel

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. A qualified person is one who has skills and knowledge related to the construction and operation of this electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Module and Function Description

The XPSMCMCO0000CO(G), XPSMCMCO0000DN(G), XPSMCMCO0000EC(G), XPSMCMCO0000EI(G), XPSMCMCO0000EM(G), XPSMCMCO0000EP(G), XPSMCMCO0000MB(G), XPSMCMCO0000PB(G), and XPSMCMCO0000UB(G) are fieldbus expansion modules for the XPSMCM• Modular Safety Controller offer. The fieldbus expansion modules can only be configured in conjunction with the XPSMCMCP0802• Modular Safety Controller.

The fieldbus expansion modules can be configured using the bus configuration software, part of the install package for SoSafe Configurable software.

One fieldbus expansion module can be added to your Modular Safety Controller.

The fieldbus expansion modules contain the following interfaces:



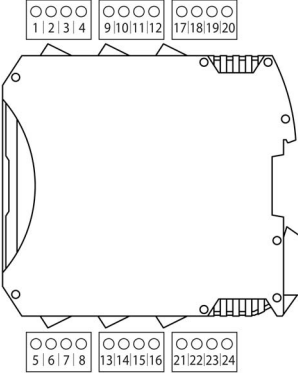
| Reference | Interface | Port Designation |
|-----------------|---------------------|------------------|
| XPSMCMCO0000CO• | CANopen | CAN |
| XPSMCMCO0000DN• | DeviceNet | DEVN |
| XPSMCMCO0000EC• | EtherCAT | ECAT |
| XPSMCMCO0000EI• | Ethernet/IP | EIP |
| XPSMCMCO0000EM• | Modbus TCP/IP | MBTCP |
| XPSMCMCO0000EP• | PROFINET | PNET |
| XPSMCMCO0000MB• | Modbus Serial (RTU) | MBS |
| XPSMCMCO0000PB• | PROFIBUS DP | PBUS |
| XPSMCMCO0000UB• | USB | USB |

The fieldbus expansion module exports the system status and the states and diagnostics of all I/Os configured on the Modular Safety Controller.

The input and output memory maps are described in the *Modular Safety Controller User Guide*.

Terminals

Examples with maximum number of terminals. Regarding terminal designation, refer to table below.

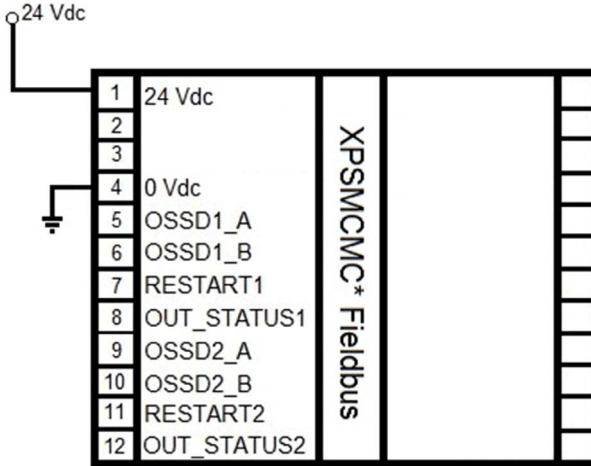
| | | |
|--|---|---|
| <p>Screw terminals example</p>  | <p>Spring terminals example</p>  | <p>Terminal numbers</p>  |
|--|---|---|

XPSMCMCO0000CO•, XPSMCMCO0000DN•, XPSMCMCO0000EC•,
 XPSMCMCO0000EI•, XPSMCMCO0000EM•, XPSMCMCO0000EP•,
 XPSMCMCO0000MB•, XPSMCMCO0000PB•, XPSMCMCO0000UB•

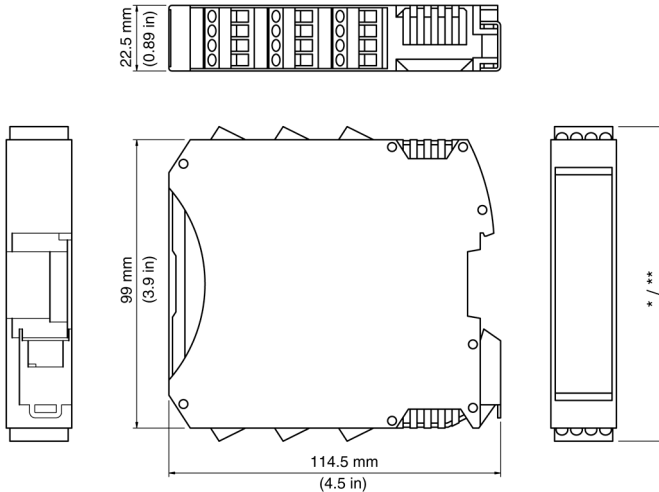
| Terminal | Signal | LED | Type | Description | Operation |
|----------|--------|-----|------|---------------------|-----------|
| 1 | 24 VDC | PWR | – | 24 Vdc power supply | – |
| 2 | – | – | – | Not connected | – |
| 3 | | | | | |
| 4 | 0 VDC | PWR | – | 0 Vdc power supply | – |
| 5 | – | – | – | Not connected | – |
| 6 | | | | | |
| 7 | | | | | |
| 8 | | | | | |

Wiring Example

Fieldbus expansion modules



Dimensions



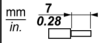








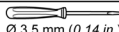
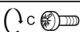
- * Screw terminals 108 mm (4.25 in)
- ** Spring terminals 118 mm (4.67 in)

Mount the modules (Modular Safety Controller and any I/O expansion modules) within an IP54 rated electric cabinet. The minimum clearance below and above the controller is 40 mm. Allow at least 100 mm distance between the cabinet door and the front face of the module(s). There are no clearances required on the left or right side of the module(s); however, other equipment in proximity may require larger distances and those clearances must also be taken into account.

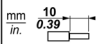





Technical Data

Cable types and wire sizes

for a 5.08 pitch removable **screw** terminal block

| | | | | | | | | |
|---|---|---|---|---|---|---|---|---|
|  |  |  |  |  |  |  |  |  |
| mm in. | 7 0.28" | | | | | | | |
| mm ² | 0.2...2.5 | 0.2...2.5 | 0.25...2.5 | 0.25...1.5 | 2 x 0.2...1 | 2 x 0.2...1.5 | 2 x 0.25...1 | 2 x 0.5...1.5 |
| AWG | 24...14 | 24...14 | 23...14 | 23...16 | 2 x 24...18 | 2 x 24...16 | 2 x 23...18 | 2 x 20...16 |
|  | |  | | N*m | 0.5 | | | |
| Ø 3,5 mm (0.14 in.) | | | | lb-in | 4.42 | | | |

for a 5.08 pitch removable **spring** terminal block (used by XPSMCM•••G).

| | | | | | |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| mm in. | 10 0.39" | | | | |
| mm ² | 0.2...2.5 | 0.2...2.5 | 0.25...2.5 | 0.25...2.5 | 2 x 0.5...1 |
| AWG | 24...14 | 24...14 | 23...14 | 23...14 | 2 x 20...18 |

The following instructions concerning connection cables must be observed:

- Use 60/75 °C copper (Cu) conductor only. Maximum cable length 100 m (328 ft).
- Cables used for connections of longer than 50 m (164 ft) must have a cross-section of at least 1 mm² (AWG 16).



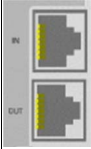
Enclosure




| | |
|----------------------------------|---|
| Enclosure material | Polyamide |
| Enclosure protection class | IP20 |
| Terminal blocks protection class | IP2x |
| Mounting | 35 mm DIN rail according to EN/IEC 60715 |
| Mounting position | Horizontal |
| Dimensions (h x l x d) | <ul style="list-style-type: none"> ● Screw terminals: 108 x 22.5 x 114.5 mm (4.25 x 0.89 x 4.5 in) ● Spring terminals: 118.5 x 22.5 x 114.5 mm (4.67 x 0.89 x 4.5 in) |

General characteristics




| | |
|---------------------------------------|--|
| Rated voltage | 24 Vdc ± 20 % (PELV supply) |
| Dissipated power | 3 W maximum |
| Over voltage category | II |
| Ambient operating temperature | -10...+55 °C (14...131 °F) |
| Storage temperature | -20...+85 °C (-4...185 °F) |
| Relative humidity | 10...95% |
| Maximum operation altitude | 2000 m (6562 ft) |
| Pollution degree | 2 |
| Vibration resistance (IEC/EN 61496-1) | +/- 3.5 mm (0.138 in) 5...8.4 Hz 1 g (8.4...150 Hz) |

| General characteristics | |
|-----------------------------------|------------------------|
| Shock resistance (IEC/EN 61496-1) | 15 g (11 ms half-sine) |
| EMC Category | Zone B |

| Module-specific characteristics | XPSMCMCO0000CO• | XPSMCMCO0000DN• | XPSMCMCO0000EC• |
|---------------------------------|--|---|---|
| Reference description | CAN (CANOpen) standard communication device | DEVN (DeviceNet) standard communication device | ECAT (ETHERCAT) standard communication device |
| Weight | 0.12 kg (4.2 Oz) | | |
| Output and PIN number | CAN (CANopen)  | DEVN (DeviceNet)  | ECAT (ETHERCAT)  |
| Wiring | Pin/ Signal 1/ not connected 2/ CAN_L 3/ CAN_GND 4/ not connected 5/ CAN_SHLD 6/ not connected 7/ CAN_H 8/ not connected 9/ not connected Housing CAN_SHIELD | Pin/ Signal/ Description 1 /V- /Negative bus supply voltage 2/ CAN_L/ CAN low bus line 3/ SHIELD/ Cable shield 4/ CAN_H/ CAN high bus line 5/ V+ / Positive bus supply voltage | PIN/Signal 1/ Tx+ 2/Tx- 3/Rx+ 4/not connected 5/not connected 6/Rx- 7/not connected 8/not connected |
| Slot for memory card | No (Modular Safety Controller only) | | |
| Data sets | Input status, input diagnostics, fieldbus input status, probe status, safety output status, safety output diagnostics | | |

| Module-specific characteristics | XPSMCMCO0000EI• | XPSMCMCO0000EM• | XPSMCMCO0000EP• |
|---------------------------------|--|---|--|
| Reference description | EIP (ETHERNET/IP) standard communication device | MBTCP (Modbus TCP/IP) standard communication device | PNET (PROFINET) standard communication device |
| Weight | 0.12 kg (4.2 Oz) | | |
| Output and PIN number | EIP (ETHERNET/IP)  | MBTCP (Modbus TCP)  | PNET (PROFINET)  |

| Module-specific characteristics | XPSMCMCO0000EI• | XPSMCMCO0000EM• | XPSMCMCO0000EP• |
|---------------------------------|---|-----------------|-----------------|
| Wiring | PIN/Signal 1/ Tx+ 2/Tx- 3/Rx+ 4/not connected 5/not connected 6/Rx- 7/not connected 8/not connected | | |
| Slot for memory card | No (Modular Safety Controller only) | | |
| Data sets | Input status, input diagnostics, fieldbus input status, probe status, safety output status, safety output diagnostics | | |

| Module-specific characteristics | XPSMCMCO0000MB• | XPSMCMCO0000PB• | XPSMCMCO0000UB• |
|---------------------------------|--|--|--|
| Reference description | MBS (Modbus Serial) standard communication device | PBUS (PROFIBUS DP) standard communication device | USB (USB) communication device |
| Weight | 0.12 kg (4.2 Oz) | | |
| Output and PIN number | MBS (Modbus Serial)  | PBUS (PROFIBUS)  | USB (USB)  |
| Wiring | PIN/Signal/ Description 1/ not connected 2/ not connected 3/ not connected 4/ D1 5/ D0 6/ not connected 7/ VP (+5 Vdc) 8/ Common | PIN/Signal/ Description 1 / not connected 2 / not connected 3 / B Line / Positive RxD/TxD, RS485 level 4 / RTS / Request to send 5 / GND Bus/ ground (isolated) 6 / +5 V Bus Output / +5V termination power (isolated, short-circuit protected) 7 / not connected 8 / A Line /Negative RxD/TxD, RS485 level 9 / not connected housing/ cable Shield / Internally connected to the protective earth via cable shield filters according to the PROFIBUS standard. | mini USB connection |
| Slot for memory card | No (Modular Safety Controller only) | | |
| Data sets | Input status, input diagnostics, fieldbus input status, probe status, safety output status, safety output diagnostics | | |

Checklist After Installation

The following must be verified:

| Step | Action |
|------|---|
| 1 | Conduct a full functional test of the system (see <i>Validation</i> section in the <i>Modular Safety Controller User Guide</i> .) |
| 2 | Verify that all the cables are correctly inserted and the terminal blocks are within correct torque for screw terminals. |
| 3 | Verify that all the LED indicators are correctly illuminating for the inputs and outputs used. |
| 4 | Verify the positioning and function of all input and output sensors and actuators used with the XPSMCM•. |
| 5 | Verify the correct mounting of XPSMCM• to the DIN rail. |
| 6 | Verify that all the external indicators (lamps/beacons/sirens) are correctly functioning. |

EC Declaration of Conformity



EC DECLARATION OF CONFORMITY

Copy of Document-no.: NHA3417601.00
Original Language

WE: **Schneider Electric Automation GmbH** / Schneiderplatz 1 / Marktheidenfeld 97828, Germany

hereby declare that the safety component

TRADEMARK: **SCHNEIDER ELECTRIC**

PRODUCT, TYPE: Modular Safety Controller – Communication Modules, Accessories

MODELS: XPSMCMCO0000CO*, XPSMCMCO0000DN*, XPSMCMCO0000EC*, XPSMCMCO0000EI*,
XPSMCMCO0000EI2*, XPSMCMCO0000EM*, XPSMCMCO0000EP*, XPSMCMCO0000MB*,
XPSMCMCO0000PB*, XPSMCMCO0000UB*,
XPSMCMCN0000SG, TSXS MCMCN***, TSXESPPM***, TSXESPP3***

SERIAL NUMBER: YYYXZZZZ (YY: 10...99, XX: 01...53, ZZZZ: 0001...9999)

DATE OF MANUFACTURING: refer to device nameplate

all the essential protection requirements that are described in the following directives are defined, corresponding.
Furthermore, the conformity with the following harmonized European standards explained:

| DIRECTIVE: | HARMONIZED STANDARD: |
|--|----------------------|
| DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL (EMC) of 15 December 2004 on the approximation of the laws of the Member States relating to electromagnetic compatibility and repealing Directive 89/336/EEC | EN 61131-2:2007 |
| DIRECTIVE 2011/65/EC OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL (RoHS) of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment | EN 50581:2012 |

It is important that the safety component is subject to correct installation, maintenance and use conforming to its intended purpose, to the applicable regulations and standards, to the supplier's instructions and to accepted rules of the art.

First year of affixing CE marking: 2014

Marktheidenfeld, Germany
December 1st, 2014

i.A. Michael Schweizer
Machine Solutions Certification Manager

The original EC Declaration of Conformity is available on our website: www.schneider-electric.com