

RIVKLE® – Outils de pose manuels

RIVKLE® BRK 08 - Pince à levier



	Ø RIVKLE®							
	M3	M4	M5	M6	M8	M10	M12	M14
Acier		■	■	■	■			
Inox		■	■	■				
Aluminium		■	■	■	■	■		



870 g


235 121 00000

Outillage inclus (45 - M10)

RIVKLE® BRK 10 - Pince à levier



	Ø RIVKLE®							
	M3	M4	M5	M6	M8	M10	M12	M14
Acier			■	■	■	■		
Inox			■	■	■			
Aluminium			■	■	■	■		



1900 g


235 120 00000

Outillage inclus (M5 - M10)

RIVKLE® ES 51 - Outil manuel hydraulique



	Ø RIVKLE®							
	M3	M4	M5	M6	M8	M10	M12	M14
Acier				■	■	■	■	■
Inox				■	■	■	■	■
Aluminium				■	■	■	■	■



2700 g


235 118 00000

Outillage non inclus

RIVKLE® OPTEX - Appareil pour poinçonnage hexagonal et pose d'écrous



	Ø RIVKLE®		
	M5	M6	M8
Acier	■	■	■
Inox	■	■	■

0,5 - 2,5 mm



2100 g


235 110 00000

Outillage inclus (M5 - M8)

RIVKLE® – Outils de pose manuels

Outillage



RIVKLE® BRK 01

Tige de traction
+
Enclume



235 119 XX 001

 
Ø RIVKLE®

M3	M4	M5	M6
03	04	05	06



RIVKLE® BRK 08

Tige de traction
+
Enclume



235 121 XX 001

Ø RIVKLE®

M4	M5	M6	M8	M10
04	05	06	08	10



RIVKLE® BRK 10

Tige de traction
+
Enclume



235 120 XX 001

Ø RIVKLE®

M5	M6	M8	M10
05	06	08	10



RIVKLE® M2007

Tige de traction



235 302 XX 020

Ø RIVKLE®

M5	M6	M8	M10	M12
05	06	08	10	12

Enclume



235 302 XX 030

05	06	08	10	12
----	----	----	----	----



RIVKLE® ES 51

Tige de traction



235 108 XX 020

Ø RIVKLE®

M6	M8	M10	M12	M14
06	08	10	12	14

Enclume



235 108 XX 030

06	08	10	12	14
----	----	----	----	----

Ecrou




235 108 00 001

✓	✓	✓	✓	✓
---	---	---	---	---



RIVKLE® OTEX

 Tige de traction



235 110 XX 020

Ø RIVKLE®

M5	M6	M8
05	06	08

Ecrou



235 110 67 006

✓	✓	✓
---	---	---

Enclume



235 110 XX 030

05	06	08
----	----	----

Poinçon



235 110 XX 021

05	06	08
----	----	----

Matrice



235 110 XX 031

05	06	08
----	----	----