



# Instruction Manual

## FRIDGE/ FREEZER THERMOMETER WITH ALARM

UK, E, F, D, I

### Installation

The probe sensor: Designed to detect the temperature of a freezer or refrigerator and should be placed inside the compartment

The unit: Designed to detect the room temperature or temperature immediately outside the freezer or refrigerator. A convenient place may be the outside wall of the freezer or refrigerator.

Clean the surface of the mounting area and remove the protective paper of the double sided mounting tape. Press firmly into position

### Operation

- 1) Insert the AAA battery as shown.
- 2) The left-side screen displays the temperature as detected by the built in sensor (room temperature)
- 3) Select the FREEZER / REFRIGERATOR switch position according to where the probe sensor is installed
- 4) ALERT ON/OFF switch position. In the ON position "ALERT" will display in the bottom right of the display. The alarm sounds and the LED lights flash for 5 seconds every minute when the temperature is detected as being outside the safety zone indicating a freezer/refrigerator malfunction

Freezer safety zone: -9.5°C to -23°C / +14.9°F to -9.4°F

Refrigerator safety zone: +2°C to +8°C / +35.6°F to +46.4°F

Operating Temperature	0°C ~ 40°C
Temperature Measuring Range	-50°C ~ 70°C
Temperature Accuracy 0°C ~ 40°C Other	±1°C ±2°C
Battery (supplied)	1 x 1.5V AAA (LR03 ) alkaline

