
# NEBU-M8G3/W3...-LE

### **Connecting cable**

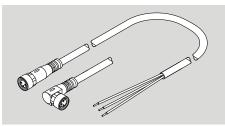

=ESTO

Festo SE & Co. KG Ruiter Straße 82 73734 Esslingen Germany +49 711 347-0

www.festo.com

Instructions | Assembly

8127703 2020-03b [8127705]



Translation of the original instructions

© 2020 all rights reserved to Festo SE & Co. KG

### Other applicable documents

m

All available documents for the product → www.festo.com/sp.

### 2 Safety

### 2.1 Safety Instructions

- Do not connect or disconnect plug connector when powered.
- Only mount the product on components that are in a condition to be safely operated.
- Assembly and installation should only be carried out by qualified personnel.
  These personnel have electrical training or a relevant qualification.

### 2.2 Intended use

Connecting cable for connection of field devices (sensors, actuators) to controllers.

### 3 Configuration

### 3.1 Product design


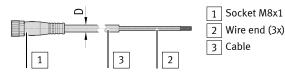


Fig. 1 NEBU-M8G3-...-LE3

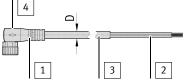

- 1 Socket M8x1
- 2 Wire end (3x)
- 3 Cable
- 4 Switching status indication (optional)

Fig. 2 NEBU-M8W3...-LE3

### 3.2 Contact assignment

Electrical con- nection 1 field device side	Pin	Insulated wire	Electrical con- nection 2 con- troller side					
NEBU-M8G3/W3LE3								
4	1	BN	Open end					
0	O 3	BU						
3 (0 0) 1	4	ВК						

1) Colour code in accordance with IEC 60757:1983-01

Tab. 1 Contact assignment

### 4 Assembly

# 4.1 Assembly, field device side

- 1. Align socket 1 to match plug.
- 2. Connect socket 1 to the plug.

3. Tighten the screw-type lock of the socket  $\boxed{1}$ . Tightening torque: 0.2 Nm ± 50 %

### 4.2 Assembly, controller side

- 1. Shorten and pre-assemble cable sheath and wire ends as needed.
- 2. Connect the wires in accordance with the contact assignment.

#### 4.3 Wiring

Character- istic	Cable characteristic	Wiring
-K-	Standard	in energy chain (bending radius 75 mm) or flexible (freely movable, unguided installation) The cable can be bent dynamically, but not for robots.
-E-	Suitable for energy chains	in energy chain or flexible
-R-	Suitable for robot applications	at robots, in energy chain or flexible

### Tab. 2 Wiring

### 4.4 Installation in energy chain

- 1. Lay the chain out lengthwise.
- 2. Place the cables on the chain, making sure they are not twisted.
- 3. Separate cables from each other using separators/drilled holes.
- 4. Do not connect cables together.

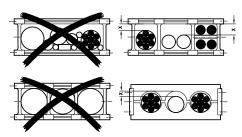


Fig. 3

5. Maintain space X. X > 10% of the cable diameter D. If the chain is suspended vertically: increase space X.

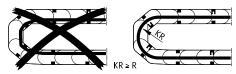


Fig. 4

- 6. Align chain in the operating position:
  - Make sure that the radius is greater than the bending radius R of the cables.
  - Cables can move freely in the bending radius KR of the energy chain.
  - Solution Cables are not forced through the chain.
- 7. Mount the energy chain → corresponding instructions.
- 8. Fasten cables:
  - with short energy chains (length < 1 m) at both ends of the chain
  - with long sliding energy chains (length > 1 m) only at the driver end

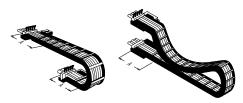


Fig. 5

- 9. Do not move cables all the way to the fastening point.
  - Mounting space A between the fastening point and bending movement is maintained.

### NOTICE!

### Damage to cables if the chain breaks.

Replace cables after a chain break.

## NOTICE!

### Malfunction and material damage due to vertically suspended cables.

The cables stretch.

- Regularly check the length of the cables.
- Readjust the cables if required.

# Technical data

NEBU			-К	-E	-R
Cable characteristic			Standard	Suitable for energy chains	Suitable for robot applications
Bending radius <sup>1)</sup>					
Fixed cable installation	R	[mm]	≥ 12	≥ 12	≥ 12
Flexible cable installation R [		[mm]	≥ 75	≥ 28	≥ 28
Torsion <sup>2)</sup>					
Flexible cable installation	Flexible cable installation [°/0.1 m]		-	-	±135
Ambient temperature					
Fixed cable installation [°C]		[°C]	-25 +70	-25 +80	-25 +80
Flexible cable installation [°C]		-5 +70	-5 +80	-5 +80	
Material					
Cable sheath			TPE-U(PUR)		
Insulating sheath		PP			

- 1) Cable test conditions: cable chain; 5 million cycles. Further test conditions on request. 2) test conditions: 300000 cycles. Further test conditions on request.

Tab. 3 Technical data NEBU

NEBU-M8G3/W3				P	N
Switching status indication			none	PNP N/O contact Yellow LED	NPN N/O contact Yellow LED
Status indicator			none	Green LED	
Surge resistance		[kV]	1.5	0.8	
Current rating at 40 °C		[A]	3		
Operating voltage range					
AC	U <sub>B</sub>	[V]	0 60	_	
DC	U <sub>B</sub>	[V]	0 60	10 30	

Tab. 4 Technical data NEBU-M8G3/W3...

NEBU-M8G3/W3			-LE3	
Cable composition		[mm <sup>2</sup> ]	3x0.25	
Cable diameter	D	[mm]	3.8	
Mounting space	Α	[mm]	> 76	
Electrical connection 1				
Function			Field device side	
Connection type			Socket	
Connection technology			M8x1 A-coded to EN 61076-2-104	
Number of pins/wires			3	
Assigned pins/wires			3	
Degree of protection			IP65, IP68, IP69K In assembled state	
Electrical connection 2				
Function			Controller side	
Connection type			Cable	
Connection technology			Open end	
Number of pins/wires			3	

Tab. 5 Technical data NEBU-M8G3/W3...-LE3