



WIRING DIAGRAM

## CT444OIT & BISAUST FIS

## July 2001 ref CM/SICTV/re v0

## PORTABLE STYLE VARIABLE TRANSFORMERS SAFETY INSTRUCTIONS

- Read all of these instructions before you use the transformer.
- This transformer is not designed to provide mains isolation.
- Variable transformers operate at mains voltage.
   DO NOT EXCEED THE MAXIMUM VOLTAGE AND CURRENT RATING.
- Maintenance should only be carried out by suitably qualified personel.
- Variable transformers must not be tested as Class 2 appliances on portable appliances testers, flash test only at 1.5kV.
- 6. When connected to the electrical supply the terminals, brushes and track face are at mains potential with a potentially lethal voltage.
- 7. The input must always be applied across the load.

  Never connect the transformer in series with the load.
- 8. The carbon brush should be inspected for damage or wear, faulty our worn brushes will result in damage to the windings.

Туре	Output Amps	w	D	Н	Weight
CMCTV 6	ð	210	200	270	10
CMCTV 10	10	210	200	270	12