



HIGH VELOCITY FLOOR FAN

MODEL:WS-18BM



OPERATING INSTRUCTIONS

IMPORTANT NOTICE

Note:-Read these instructions fully before commencing assembly and operation of the fan.


Retain these instructions for future reference.

- Do not use the fan if the plug or power cord is damaged.
- Never insert fingers, pencils or any other object through the grille when the fan is running.
- Unplug the fan from the power socket when not in use and when moving it from one location to other.
- Unplug the fan from the power socket before cleaning.
- Do not use or place fan in wet areas such as bathrooms and shower rooms etc.
- Do not use the fan outdoors and do not allow fan to become wet any water or liquid entering the fan could cause an electric shock hazard.
- Do not cover the grille when the fan is in operation.
- Do not allow children to operate the fan.

- Completely assemble the fan before use.

PARTS LIST

- Fan head
- Switch box
- Power cord

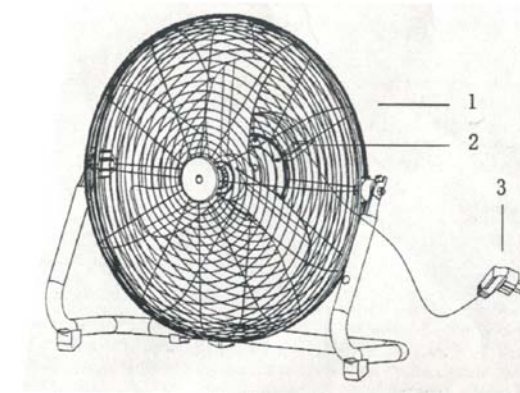

OPERATION PROCEDURE

To operate, plug the fan into a 13A power socket outlet and simply turn the rotary switch to the desired speed setting.

1=LOW SPEED

2=MEDIUM SPEED

3=HIGH SPEED

To stop the fan, turn the rotary switch back to the position marked O.

FAN DIRECTION ADJUSTMENT

- Do not attempt to make any adjustments to the direction of the grille and fan assembly until the fan has been turned off and unplugged from the socket.
- To adjust the direction of the fan, hold the grille and gently tilt the fan until the desired position is reached.
- Plug the fan back into the socket and turn the fan on.

CLEANING

- a) Ensure that the fan is unplugged from the power socket before commencing cleaning.
- b) Parts should be cleaned with a soft dry cloth.
- c) Stubborn marks should be removed with a mild soap (detergent) and a damp cloth. Ensure that all traces of the soap film are removed with the damp cloth.
- d) Care should be taken to ensure that water (or other liquid) does not enter the fan motor housing or the speed control unit.

RS Components Ltd
PO Box 99
Corby
Northants
NN17 9RS
Tel: 08457 201201