


S06 Body Cam

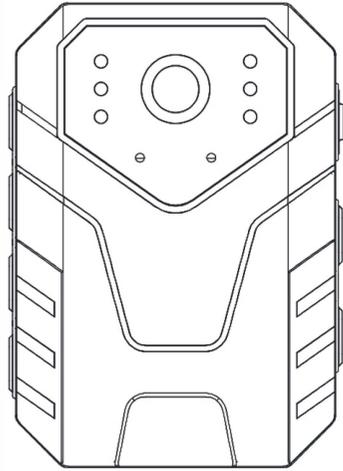


Instructions for use

Before using this product, please read the instructions carefully. The instructions are for reference only, and the specific operation is subject to the real object.

I. Product Structure

Product Description

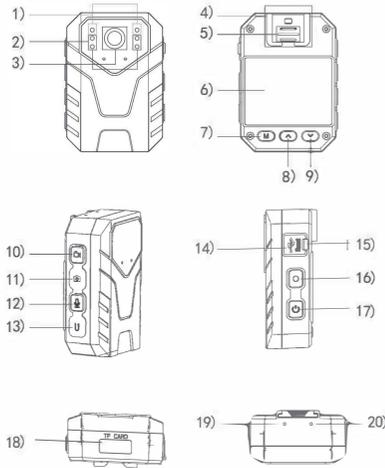

- 1) Warning lights 2) Infrared lamp 3) Camera
- 4) Shoulder clip 5) Horn 6) Display screen
- 7) Menu key 8) Up key 9) Down key
- 10) Video mode key 11) Photo mode key 12) Recording mode key

1

- 13) Back key 14) USB data interface 15) Reset hole
- 16) Confirm key 17) Power key 18) TF card slot
- 19) Blue indicator light 20) Red indicator light

II. Introduction to Keys and Interface Functions

I. Menu key

Short press to enter the set penalty menu, and short press again to exit the menu:

- 2 Up key
- 1) select up key;
- 2) When playing back the video, short press to adjust the sound: long press to fast forward the speed;
- 3) When playing back the picture, press and hold the up key to enlarge it;
- 3 Down key
- 1) down select key;
- 2) When playing back the video, short press to adjust the sound busy: long press to slow down the speed;
- 3) When playing back the picture, press the key for a long time to zoom out;
4. Video mode key
- Short press to enter the video recording mode; Long press to quickly switch the resolution;
5. Camera mode key

Short press to enter the photo mode; Long press to call out the alarm sound;

Short press to enter the recording mode will immediately record and start timing, long press to bring up the infrared icon:

7. Return key
- Short press to quickly enter the file viewing mode: long press to turn on the infrared light:

2

- 8. USB data interface
- L) Interfacetype: Mi ni -B
- 2) It is used to connect the external power supply to charge the battery or provide working power.
- 3) It is used to connect the PC end for real -time picture:
- 4) Photo album files can be viewed in U disk mode.
- 9. Reset hole

When the machine appears, abnormal crash and so on, it can be restarted by a short poke with a pinhole.

- 10. Led light
- L) Blue light: on/off flashing: flashing when taking a picture; Flashes once a second while recording.
- 2) Red light: charging (always on when charging, full light off).

- 11. Confirm inlay
- 1) In video recording mode, press and hold to lock or unlock:
- 2) Short press to view playback.
- 12. Power key
- 1) Short press to turn off the screen, short press again to turn on:
- 2) Long press to turn on/off.

III. Basic Operation Instructions

- I. Video pre - recording
- L) When there is no normal video recording, automatic loop video recording:
- 2) During pre - recording, press the video key for a short time to restore the normal recording, and the pre -recorded segment and the normal segment are merged into the same video:

3

- 3) When the pre - recording is not closed, the automatic loop recording cannot be stopped.
- 2. Time -lapse video
- After the time -lapse recording is set, the countdown will be set for the duration of the countdown (5 seconds/15 seconds/30 seconds).
- 3. Motion detection
- 1) When there is movement or object movement, it will automatically detect and start recording;
- 2) From dynamic to static state, the recording will be automatically stopped after 10 seconds of static time;
- 3) Recording is not started while in a quiescent state.
- 4. Selfie settings
- Set the countdown time for taking photos, and take photos immediately after the countdown.
- 5. Infrared mode
- L) After the automatic start is set, it will automatically sense and start in the dark;
- 2) After setting the manual start, press the return key for a long time to start the infrared icon.
- 6. File view mode
- 1) The selected photo mode is displayed in a six - grid format with a preview screen;
- 2) The selected file mode is displayed as a file list with no preview.
- 7. Fast resolution switching
- After setting, press and hold the video key to quickly switch the resolution.

IV. Product parameters and specifications

Master control	1167B
Image Sensor	GC2023
Camera Lens	Fixed lens, Large wide angle

4

TFT display	20-Inch color display (320 * 240)
Video resolution	2K, 4K, 1080FHD, 1080P, 720P, WVGA, VGA, QVGA
Video file format	MOV
Video quality	Hyperfine, Good, Normal
Video pre-recording	Off, on
Time-lapse video	Off, 5 seconds, 15 seconds, 30 seconds
Motion detection	Off, on
Photo resolution	VGA, 1.3M, 2M, 3M, 5M, 8M, 10M, 12M
Photo format	JPG
Picture quality	Hyperfine, Good, Normal
Multiple shots	Off, 5 sheets, 10 sheets, 20 sheets
Selfie interval	Off, 3 seconds, 5 seconds, 10 seconds
Exposure compensation	-2.0, -1.7, -1.3, -1.0, -0.7, -0.3, -0.0, +0.3, +0.7, +1.0, +1.3, +1.7, +2.0
Recording file format	WAY
LCD brightness	0, 10, 20, 30, 40, 50, 60, 70, 80, 90, 100
Automatic shutdown	Off, 1 minute, 2 minutes, 3 minutes
USB mode	U disk version, use version
Automatically close the screen	Off, 30 seconds, 1 minute, 3 minutes

5

Sound likeness control	0 to 7
Video segmentation	Close, 5 points, 10 points, 15 points
Touch tone	Off, on
Infrared mode	Off, Auto, Manual
The alarm signal is announced	Off, on
File lookup mode	Photo mode, file mode,
Fast resolution switching	Off, on
Video beep	Off, on
1 five -port	English, Simplified Chinese, Traditional China
Operating humidity	≤75%
Operating temperature	≤20 degrees to + 60 degrees
Power supply	USB: 5V Battery: 3.7V
Standby current	≥40.5uA
Low power prompt	3.63V
Power consumption	USB5V: ≤4W battery 3.7V: ≤2W
Version number	1167B / 7789 / 2083
Hardware version number	Z1v4/Z2v4/20220830
Memory card	TF card, supporting up to l28 G

6

