


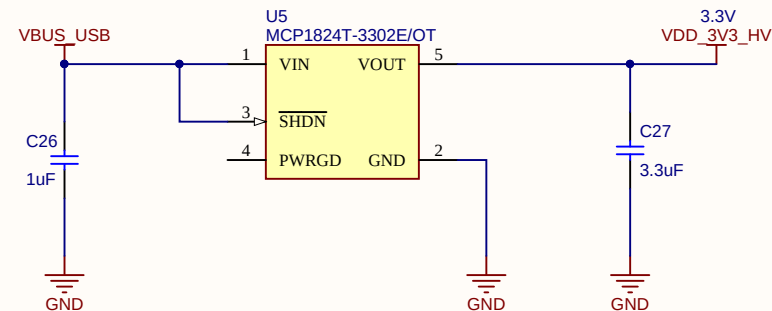
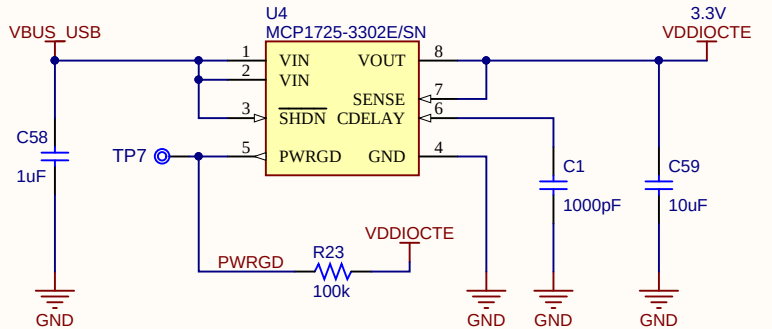
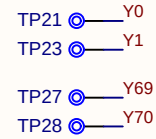
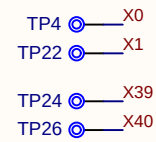


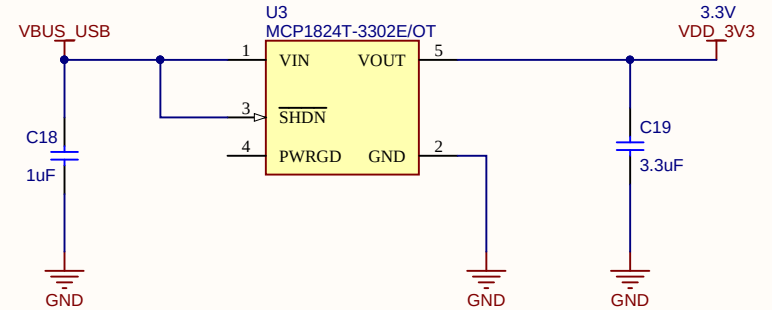

Break solder link to disconnect ESD Ring from GND. Fit header only if required for testing.

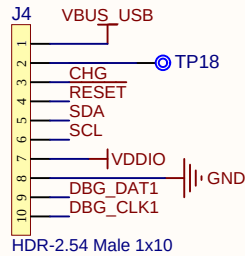

ESD Ring

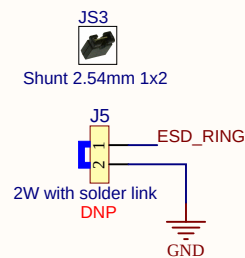