


## NLHP-555W SETUP GUIDE


### Connecting to the Wireless Homeplug

Without any other Homeplugs plugged in, plug in the Wireless Homeplug. Connect to the device using either a LAN cable or the Wireless connection.

The default wireless key is: **1234567890**

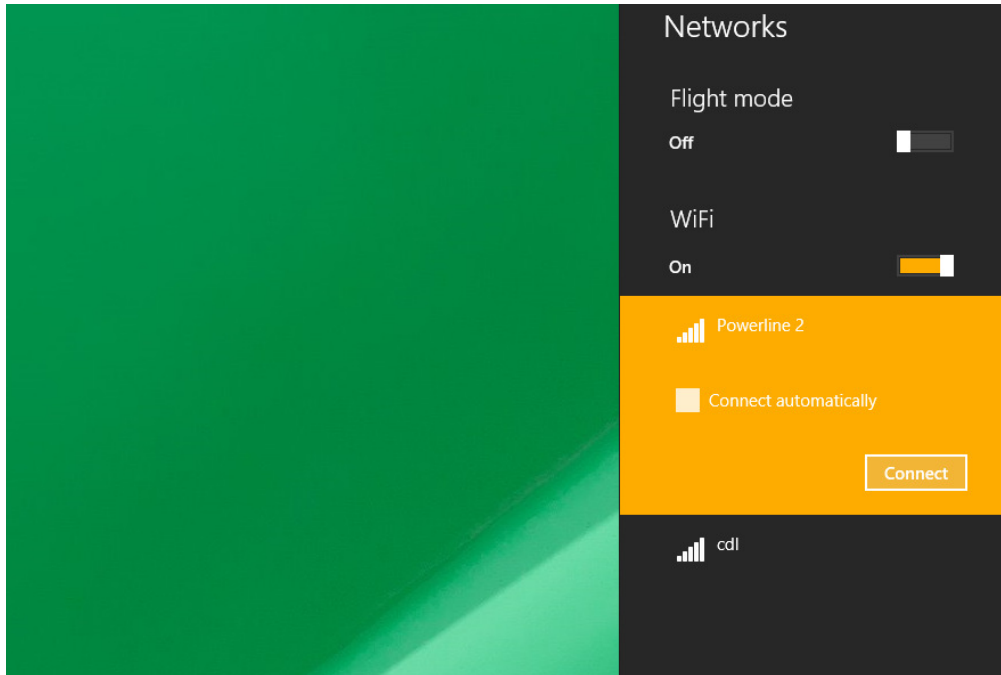

When you log in to the Wireless Homeplug for the first time, do as follows:

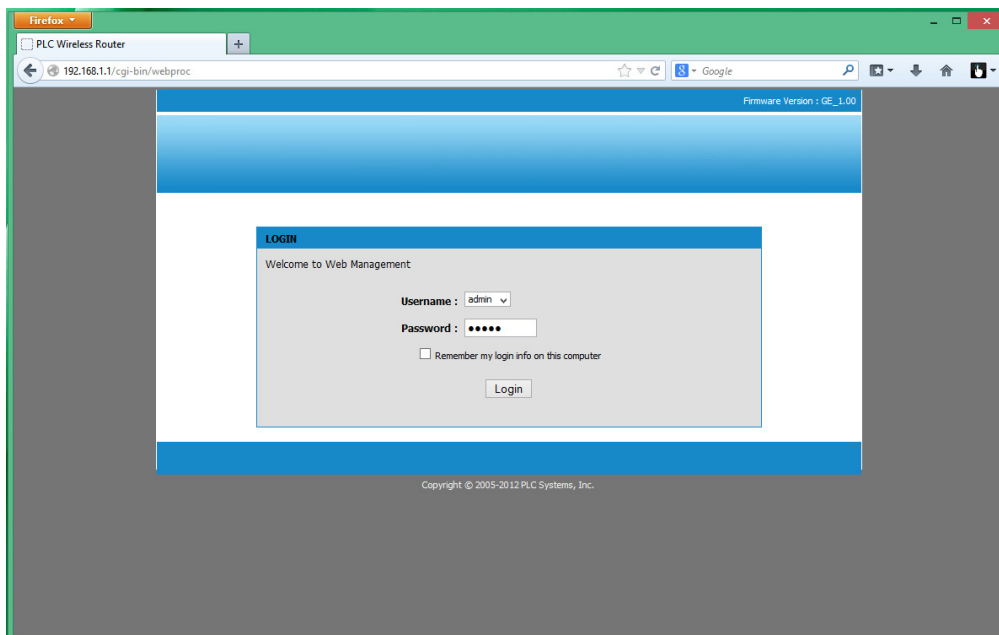


**Step 1** Open the a web browser, and enter **http://192.168.1.1** in the address bar.

**Step 2** In the login page, enter the **admin** user name and password.

**Note:**

- Both the default user name and password of super user are **admin**.
- Both the default user name and password of common user are **user**.

**Step 3** Click **Login**, and the following page appears.

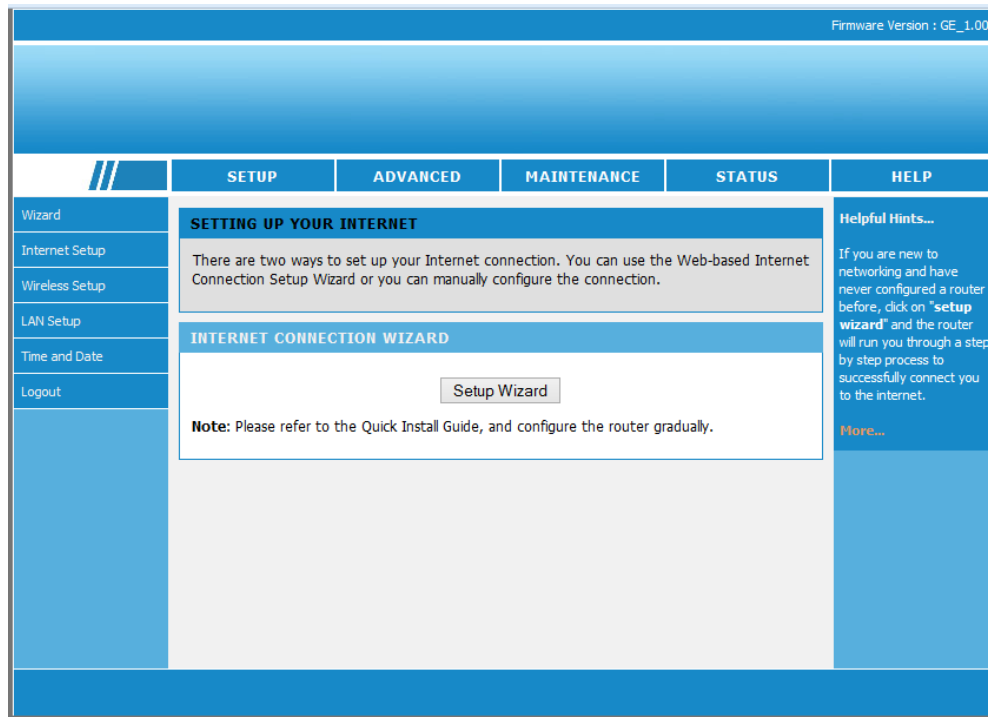

**To set the Wireless Homplug up to work with a Router**

You need to set the adaptor to bridge mode. In the **Bridge** mode, all physical ports and wireless interfaces co-exist in the virtual interfaces.

On the left hand menu click on **Internet Setup**



Click on **Apply**

If the router you are connecting to has the same IP address of the Wireless Homeplug 192.168.1.1 then you will need to change the address.

To do this click on LAN Setup on the right hand menu.

Change the Router IP Address to something not in use eg: 192.168.1.30

Unselect Enable DHCP Server

It should look like below:

Firmware Version : GE\_1.00

	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Wizard	<b>LAN SETTINGS</b>  This section allows you to configure the LAN Setup settings of your router . Please note that this section is optional and you should not need to change any of the settings here to get your network up and running.  <i>Note: Generally, you do not need to modify the default configuration of this page.</i>				<b>Helpful Hints...</b>  The IP address of your router is the same IP address you will use to access the web management interface of your router. If you already have a DHCP server on your network or are using static IP addresses on all the devices on your network, click on <b>Disable DHCP Server</b> to disable this feature.  <a href="#">More...</a>
Internet Setup	<b>ROUTER SETTING</b>  <b>Router IP Address :</b> <input type="text" value="192.168.1.30"/> <b>Subnet Mask :</b> <input type="text" value="255.255.255.0"/> <b>Enable Gateway Isolate :</b> <input type="checkbox"/>				
Wireless Setup	<b>DHCP SERVER</b>  <b>Enable DHCP Server</b> <input type="checkbox"/>  <b>IP Pool Starting Address :</b> <input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="1"/> <input type="text" value="2"/> <b>IP Pool Ending Address :</b> <input type="text" value="192"/> <input type="text" value="168"/> <input type="text" value="1"/> <input type="text" value="100"/> <b>IP Pool Subnet mask :</b> <input type="text" value="255.255.255.0"/> <b>DHCP Lease Time :</b> <input type="text" value="24"/> ( 1 - 160 hours) <b>Domain Name Server Assignment :</b> <input checked="" type="radio"/> Auto <input type="radio"/> Manual <b>Domain Name Server (Primary) IP :</b> <input type="text"/> <b>Domain Name Server (Secondary) IP :</b> <input type="text"/>  <input type="button" value="Apply"/> <input type="button" value="Cancel"/>				
LAN Setup					
Time and Date					
Logout					

Click **Apply**

Now reconnect all the other Homeplugs and you should have internet access through the access point.