

Vacuum Pad

Ø 1.5, Ø 2, Ø 3.5, Ø 4, Ø 6, Ø 8, Ø 10, Ø 13, Ø 16

New


RoHS

Overall length is shortened. In the case of Flat type (Pad diameter: Ø 2)

Pad unit

Max. **9 mm** shortened

Actual size

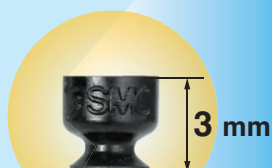

New ZP3


ZP(Conventional model)

12 mm

With adapter

Max. **11 mm** shortened

Actual size

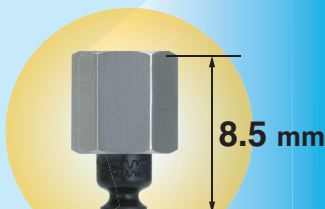


New ZP3

ZP(Conventional model)


19.5 mm

Space-saving Ø 2 piping reduces working space!

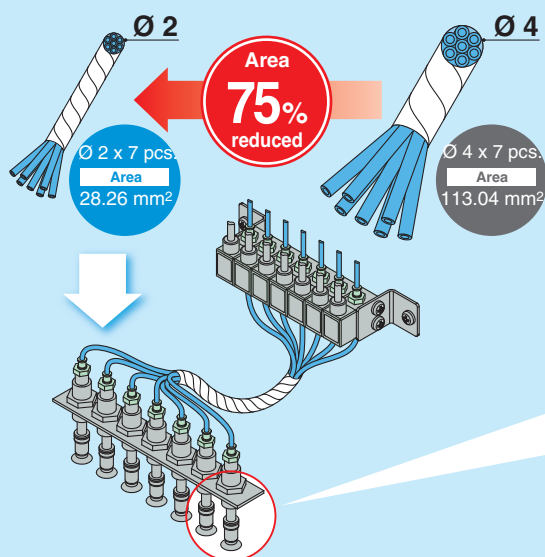


Vertical

- Male thread
- Female thread
- Barb fitting (Applicable tubing: Ø 2)
- One-touch fitting (Applicable tubing: Ø 2)

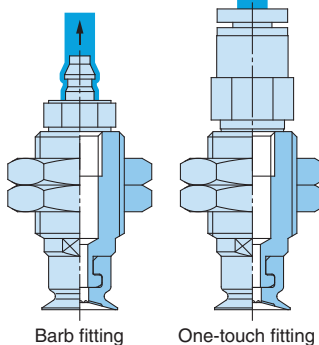

Lateral

- Female thread
- Barb fitting (Applicable tubing: Ø 2)
- One-touch fitting (Applicable tubing: Ø 2)

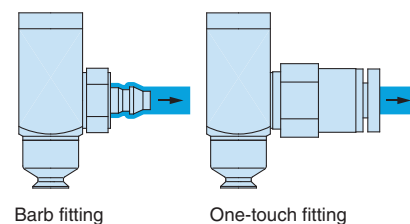

Variations

Pad diameter Ø 1.5 added!

Type	New Pad diameter									
	Ø 1.5	Ø 2	Ø 3.5	Ø 4	Ø 6	Ø 8	Ø 10	Ø 13	Ø 16	
Flat										
Flat with groove										
Bellows										



Series ZP3



CAT.EUS100-100Aa-UK

Excellent functions New

Excellent functions

Adsorption surface is shot-blasted

Micro-dents and bumps on the surface facilitate easy removal.


With groove

Less contact surface with the workpiece makes it easy to remove.



Construction to prevent pad from coming off

New shape for connecting with the adapter prevents the pad from coming off.

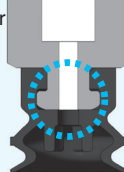




Pad diameter from $\varnothing 1.5$

Easier identification

SMC logo mark




Fixing boss allows easy mounting and repeatability.

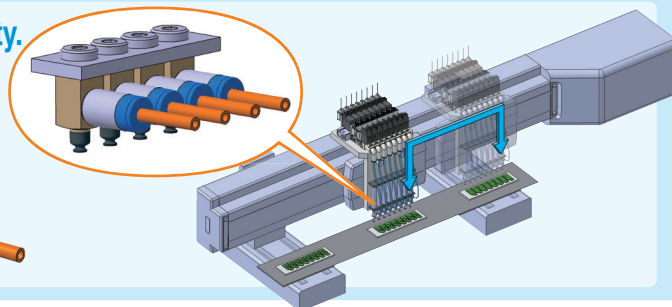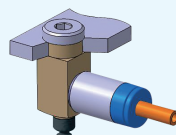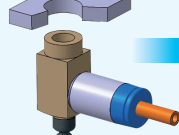

Compact buffer body New

Overall length is shortened.

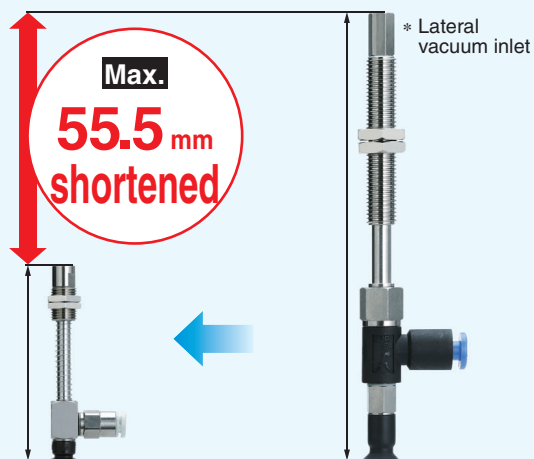

ZP3

ZP

Pad diameter $\varnothing 8$, Flat, With one-touch fitting


ZP3

Stroke	Overall length [mm]
3	40
6	46
10	56
15	59
20	66.5
25	—

ZP

Stroke	Overall length [mm]
3	—
6	78.5
10	109.5
15	114.5
20	—
25	124.5

Short stroke type: 3 mm added

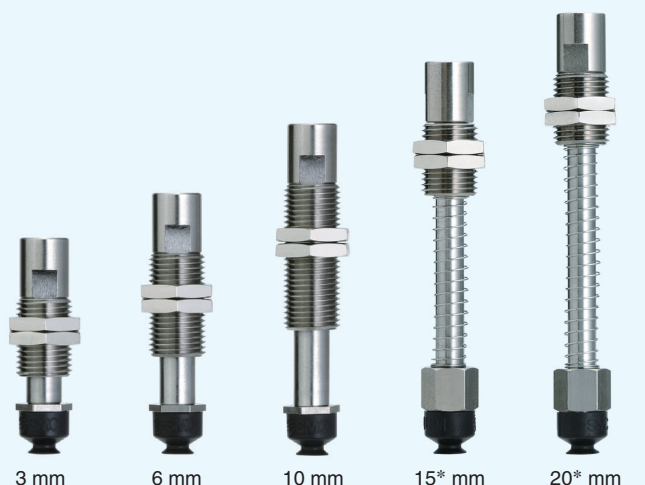


Buffer stroke

(* With bushing)


Pad diameter	Buffer specifications	Stroke [mm]				
		3	6	10	15	20
$\varnothing 1.5, \varnothing 2, \varnothing 3.5$	Rotating, Non-rotating	●	●	—	—	—
	Rotating	●	●	●	—	—
	Rotating, With bushing	—	—	—	●	●
	Non-rotating	●	●	●	●	●

Wide selection of piping

Male thread

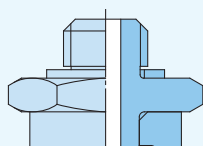


Female thread

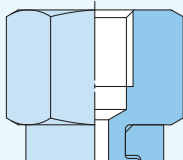


New For $\varnothing 2$ piping!

Barb fitting

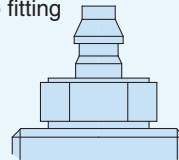

One-touch fitting

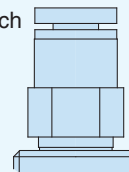

Vacuum Pads Series ZP3/ZP2/ZP

Pad Diameter List



★: New Series ZP3



●: Series ZP2



○: Series ZP

Pad type	Symbol																		
		0.8	1.1	1.5	2	3	3.5	4	5	6	7	8	9	10	11	13	14	15	
Flat	U	—	—	★	★	●	—	Note)	—	○	—	○	—	○	—	○	—	—	
	MU	—	—	—	Note)	—	Note)	Note)	Note)	Note)	—	Note)	—	Note)	—	—	—	Note)	
	EU	—	—	—	Note)	—	—	Note)	—	Note)	—	●	—	—	—	—	—	●	
	AU	—	—	—	●	●	—	●	—	Note)	—	●	—	—	—	—	—	—	
Flat with rib	C	—	—	—	—	—	—	—	—	●	●	●	—	○	—	○	—	—	
Flat with groove	UM	—	—	—	—	—	—	★	—	★	—	★	—	★	—	★	—	—	
Thin flat	UT	—	—	—	—	—	—	—	●	●	—	—	—	○	●	○	●	—	
Thin flat with rib	CT	—	—	—	—	—	—	—	—	—	—	—	—	○	—	○	—	—	
Bellows	B	—	—	—	—	—	—	—	—	Note)	—	Note)	—	○	—	○	—	—	
	J	—	—	—	—	—	—	—	—	●	—	—	●	Note)	—	—	●	Note)	
	MB	—	—	—	—	—	—	Note)	—	Note)	—	Note)	—	Note)	—	—	—	Note)	
	ZJ	—	—	—	●	—	—	●	●	●	—	—	—	—	—	—	—	—	
Deep	D	—	—	—	—	—	—	—	—	—	—	—	—	○	—	—	—	—	
Nozzle pad	AN	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
Flat pad	MT	—	—	—	—	—	—	—	—	—	—	—	—	Note)	—	—	—	Note)	
Oval	W	—	—	—	—	—	3.5 x 7	4 x 10 4 x 20 4 x 30	5 x 10 5 x 20 5 x 30	6 x 10 6 x 20 6 x 30	—	8 x 20 8 x 30	—	—	—	—	—	—	
	U	—	—	—	2 x 4	—	3.5 x 7	4 x 10	—	—	—	—	—	—	—	—	—	—	
Heavy-duty pad	H	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	HT	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	HB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	HW	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
Mark-free pad	U	—	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	—	
	H	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
Sponge pad	S	—	—	—	—	—	—	●	—	●	—	●	—	●	—	—	—	●	
Resin attachment	K	—	—	—	—	—	—	—	—	●	—	●	—	●	—	●	—	—	
Pad with ball spline buffer	U	—	—	—	●	—	—	●	—	●	—	●	—	—	—	—	—	—	
Heavy-duty ball joint pad	H	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	HB	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	

* Cyclone pad (Non-contact pad) Made to Order

Note) The ZP2 series is blast type.

■ Products other than above

Vacuum pad for transferring disks



Vacuum pad for fixing panel



Vacuum saving valve



*Refer to our website www.smc.eu for further information.

* The ZP3 series is available from Ø 1.5 to Ø 16. If you need other sizes or shapes, please choose from ZP or ZP2 series.

Pad Diameter List

* ○: Refer to our website www.smc.eu for more details of the ZP series.





SMC vacuum pad

Search



Pad diameter																		Symbol
	16	18	20	25	30	32	40	46	50	63	80	100	125	150	250	300	340	
	○	—	○	○	—	○	○	—	○	—	—	—	—	—	—	—	—	U
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	MU
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	EU
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	AU
	○	—	○	○	—	○	○	—	○	—	—	—	—	—	—	—	—	C
	★	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	UM
	○	●	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	UT
	○	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	CT
	○	—	○	○	—	○	○	—	○	—	—	—	—	—	—	—	—	B
	★	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	
	●	—	—	●	●	—	—	—	—	—	—	—	—	—	—	—	—	J
	—	—	●	—	—	—	—	—	—	—	—	—	—	—	—	—	—	MB
	—	—	—	—	—	—	●	●	—	—	—	—	—	—	—	—	—	ZJ
	○	—	—	○	—	—	○	—	—	—	—	—	—	—	—	—	—	D
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	AN
	—	—	●	●	●	—	—	—	—	—	—	—	—	—	—	—	—	MT
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	W
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	U
	—	—	—	—	—	●	○	—	○	○	○	○	○	—	—	●	●	H
	—	—	—	—	—	—	—	—	—	—	—	—	—	●	●	—	—	HT
	—	—	—	—	—	●	○	—	○	○	○	○	○	●	—	—	—	HB
	—	—	—	—	30 x 50 ●	—	—	—	—	—	—	—	—	—	—	—	—	HW
	●	—	—	●	—	●	●	—	●	—	—	—	—	—	—	—	—	U
	—	—	—	—	—	—	●	—	●	●	●	●	●	—	—	—	—	H
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	S
	●	—	●	●	—	●	—	—	—	—	—	—	—	—	—	—	—	K
	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	U
	—	—	—	—	—	—	●	—	●	●	●	●	●	—	—	—	—	H
	—	—	—	—	—	—	●	—	●	●	●	●	●	—	—	—	—	HB

Related Products

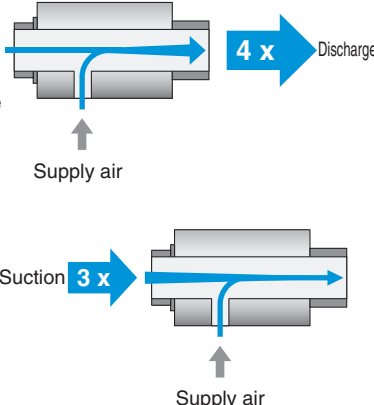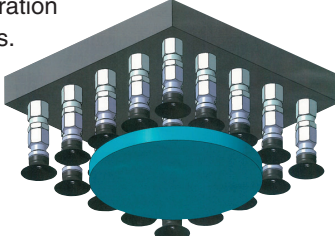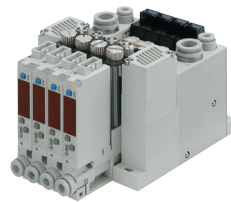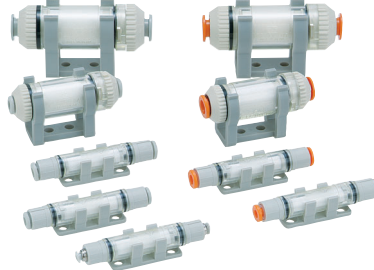Variations		Note
Vacuum Flow ZH□-□-X185 <i>Made to Order</i> ■ A blow flow rate 4 times the supply air ■ A vacuum flow rate 3 times the supply air A discharge flow rate 4 times the supply air can be generated. Contributes to reduction in flow consumption if discharge requires flow rate.  A suction flow rate 3 times the supply air can be generated. Contributes to reduction in flow consumption if suction requires flow rate.		—
Vacuum Saving Valve ZP2V ■ Can restrict the reduction of vacuum pressure even when there is no workpiece. ■ No need for switching operation when changing workpieces. ■ Multiple vacuum pads can be operated by one ejector. 		Connection thread size for pad side • M5 x 0.8 • M6 x 1 • M8 x 1.25 • R1/8 • Rc1/8 • G1/8 • NPT1/8
Space Saving Vacuum Ejector/ Pump System ZQ ■ Width: 10 mm Weight: 109 g (Single unit, with vacuum pressure switch and suction filter)		—
Multistage Ejector ZL ■ Suction flow rate increased by a 3 stage diffuser construction. (Max. 200 l/min (ANR))		—
Air Suction Filter with One-touch Fittings/ In-line Type ZFC ■ IN/OUT straight piping ■ One-touch fittings for easy installation and remove ■ Lightweight molded resin parts ■ Cartridge type allows element replacement.		—
SMC Design Support Software Ver.2.0 ■ Model Selection Software ■ Vacuum Adsorption Transfer System Selection Software ■ Electric Actuator Selection Software ■ SMC Draw Ver.1.0 Pneumatic Circuit Drawing Software ■ Guide Cylinder Selection Software ■ Energy Saving Software *Refer to www.smcworld.com for more details		—

Vacuum Equipment Model Selection

CONTENTS

1	Features and Precautions for Vacuum Adsorption	Front matter 2
2	Vacuum Pad Selection	Front matter 2
	● Vacuum Pad Selection Procedures ● Points for Selecting Vacuum Pads A. Theoretical Lifting Force B. Shear Force and Moment Applied to Vacuum Pad ● Lifting Force and Vacuum Pad Diameter 1. Theoretical Lifting Force ● Vacuum Pad Type ● Vacuum Pad Material ● Rubber Material and Properties ● Colour and Identification ● Buffer Attachment ● Pad Selection by Workpiece Type ● Vacuum Pad Durability	
3	Selection of Vacuum Ejector and Vacuum Switching Valve	Front matter 8
	● Calculating Vacuum Ejector and Switching Valve Size with the Formula	
4	Leakage Volume during Workpiece Adsorption	Front matter 8
	● Leakage Volume from Conductance of Workpiece ● Leakage Volume from Adsorption Test	
5	Adsorption Response Time	Front matter 9
	● Relationship between Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated ● Calculating Adsorption Response Time with the Formula ● Adsorption Response Time from the Selection Graph	
6	Precautions on Vacuum Equipment Selection and SMC's Proposal	Front matter 11
	● Safety Measures ● Precautions on Vacuum Equipment Selection ● Vacuum Ejector or Pump and Number of Vacuum Pads ● Vacuum Ejector Selection and Handling Precautions ● Supply Pressure of Vacuum Ejector ● Timing for Vacuum Generation and Suction Verification A. Timing for Vacuum Generation B. Suction Verification C. Set Pressure for Vacuum Pressure Switch ● Dust Handling of Vacuum Equipment	
7	Vacuum Equipment Selection Example	Front matter 15
	● Transfer of Semiconductor Chips	
8	Data	Front matter 16
	● Selection Graph ● Glossary of Terms ● Countermeasures for Vacuum Adsorption System Problems (Troubleshooting) ● Non-conformance Examples ● Time of Replacement of Vacuum Pad	

Model Selection

1 Features and Precautions for Vacuum Adsorption

Vacuum adsorption system as a method to hold a workpiece has the following features. But it is also necessary to note some precautions.

Features and precautions of vacuum

Features	• Easy construction • Compatible with any place where adsorption is possible. • Compatible with soft and easily-deformed workpieces • Available when the space around the workpiece is limited.
Precautions	• Workpiece may drop under certain conditions since it is transferred being adsorbed. • Liquid or foreign matter around the workpiece may be sucked into the equipment. • Large adsorption area is necessary to get large gripping force. • Vacuum pad (rubber) may deteriorate. • Precise positioning is difficult.

Fully understand the features above and select the equipment that suits your operating conditions.

2 Vacuum Pad Selection

● Vacuum Pad Selection Procedures

- 1) Fully taking into account the balance of a workpiece, identify the adsorption positioning, number of pads and applicable pad diameter (or pad area).
- 2) Find the theoretical lifting force from the identified adsorption area (pad area x number of pads) and vacuum pressure, and then find the lifting force considering actual lifting and safety factor of transfer condition.
- 3) Determine a pad diameter (or pad area) that is sufficient to ensure the lifting force is greater than the workpiece mass.
- 4) Determine the pad type and materials, and the necessity of buffer based on the operating environment, and the workpiece shape and materials.

The above shows selection procedures for general vacuum pads; thus, they will not be applicable for all pads. Customers are required to conduct a test on their own and to select applicable adsorption conditions and pads based on the test results.

● Points for Selecting Vacuum Pads

A. Theoretical Lifting Force

- The theoretical lifting force is determined by vacuum pressure and contact area of the vacuum pad.
- Since the theoretical lifting force is the value measured at the static state, the safety factor responding to the actual operating conditions must be estimated in the actual operation.
- It is not necessarily true that higher vacuum pressure is better. Extremely high vacuum pressure may cause problems.
 - When the vacuum pressure is unnecessarily high, pads are likely to be worn out quickly and cracked, which makes the pad service life shorter.
Doubling the vacuum pressure makes the theoretical lifting force double, while doubling the pad diameter makes the theoretical lifting force quadruple.
 - When the vacuum pressure (set pressure) is high, it makes not only response time longer, but also the necessary energy to generate a vacuum larger.

Example) Theoretical lifting force = Pressure x Area 2 times 

Pad diameter	Area [cm ²]	Vacuum pressure [-40 kPa]	Vacuum pressure [-80 kPa]
Ø 6	0.28	Theoretical lifting force 1.1 N	Theoretical lifting force 2.2 N
Ø 16	2.01	Theoretical lifting force 8.0 N	Theoretical lifting force 16.1 N

4 times 

B. Shear Force and Moment Applied to Vacuum Pad


- Vacuum pads are not resistant to shear force (parallel force with adsorption surface) and moment.
- Minimise the moment applied to the vacuum pad with the position of the workpiece centre of gravity in mind.
- The acceleration rate of the movement must be as small as possible, and make sure to take into consideration the wind pressure and impact. If measures to slow down the acceleration rate are introduced, safety to prevent the workpiece from dropping will improve.
- Avoid lifting the workpiece by adsorbing the vertical side with a vacuum pad (vertical lifting) if possible. When it is unavoidable, a sufficient safety factor must be secured.

Lifting Force, Moment, Horizontal Force

To lift a workpiece vertically, make sure to take into consideration the acceleration rate, wind pressure, impact, etc., in addition to the mass of the workpiece. (Refer to Fig. 1)


Because the pads are susceptible to moments, mount the pad so as not to allow the workpiece to create a moment. (Refer to Fig. 2)

When a workpiece that is suspended horizontally is moved laterally, the workpiece could shift depending on the extent of the acceleration rate or the size of the friction coefficient between the pad and the workpiece. Therefore, the acceleration rate of the lateral movement must be minimised. (Refer to Fig. 3)

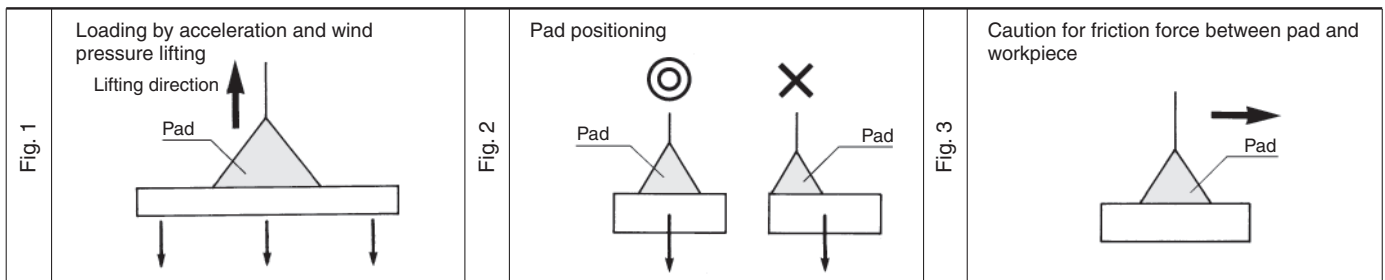


Balance of Pad and Workpiece

Make sure that the pad's suction surface is not larger than the surface of the workpiece to prevent vacuum leakage and unstable picking.

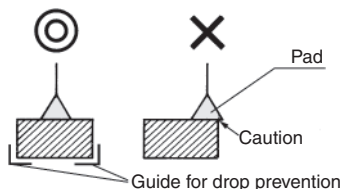


If multiple pads are used for transferring a flat object with a large surface area, properly allocate the pads to maintain balance. Also make sure that the pads are aligned properly to prevent them from becoming disengaged along the edges.

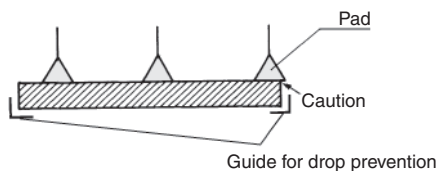

Provide an auxiliary device (example: a guide for preventing the workpieces from dropping) if as necessary.

Mounting Position

As a rule, the unit must be installed horizontally. Although a diagonal or a vertical installation should be avoided whenever possible, if the unit must be installed in such a manner, be certain to provide a guide to absolute safety.

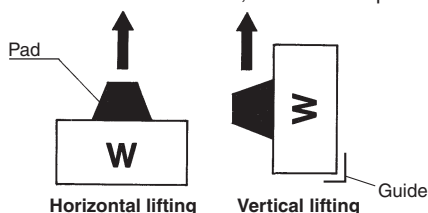

Model Selection

● Lifting Force and Vacuum Pad Diameter

1. Theoretical Lifting Force



- Set the vacuum pressure below the pressure that has been stabilised after adsorption.
- However, when a workpiece is permeable or has a rough surface, note that the vacuum pressure drops since the workpiece takes air in. In such a case, carry out an adsorption test for confirmation.
- The vacuum pressure when using an ejector is approximately –60 kPa as a guide.

The theoretical lifting force of a pad can be found by calculation or from the theoretical lifting force table.

Calculation

$$W = P \times S \times 0.1 \times \frac{1}{t}$$

W : Lifting force [N]
P : Vacuum pressure [kPa]
S : Pad area [cm²]
t : Safety factor Horizontal lifting: 4 or more
 Vertical lifting: 8 or more

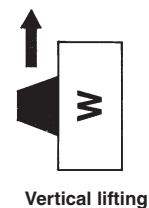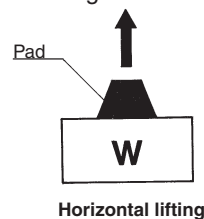

(This type of application should basically be avoided.)

Theoretical Lifting Force

The theoretical lifting force (not including the safety factor) is found from the pad diameter and vacuum pressure. The required lifting force is then found by dividing the theoretical lifting force by the safety factor **t**.

Lifting force = Theoretical lifting force ÷ **t**

(1) Theoretical Lifting Force (Theoretical lifting force = $P \times S \times 0.1$)

[N]

Pad diameter [mm]	Ø 1.5	Ø 2	Ø 3.5	Ø 4	Ø 6	Ø 8	Ø 10	Ø 13	Ø 16
Pad area S [cm ²]	0.02	0.03	0.10	0.13	0.28	0.50	0.79	1.33	2.01
Vacuum pressure [kPa]	–85	0.15	0.27	0.82	1.07	2.4	4.2	6.6	11.3
	–80	0.14	0.25	0.77	1.00	2.2	4.0	6.2	10.6
	–75	0.13	0.24	0.72	0.94	2.1	3.7	5.8	10.0
	–70	0.12	0.22	0.67	0.88	1.9	3.5	5.5	9.3
	–65	0.11	0.20	0.63	0.82	1.8	3.2	5.1	8.6
	–60	0.11	0.19	0.58	0.75	1.7	3.0	4.7	8.0
	–55	0.10	0.17	0.53	0.69	1.5	2.7	4.3	7.3
	–50	0.09	0.16	0.48	0.63	1.4	2.5	3.9	6.7
	–45	0.08	0.14	0.43	0.57	1.2	2.2	3.5	6.0
	–40	0.07	0.13	0.38	0.50	1.1	2.0	3.1	5.3

● Vacuum Pad Type

- Flat type, flat with groove and bellows type are available in the ZP3 series. Select the appropriate shape to suit the workpiece and operating environment.

Pad Type

Pad type	Application
Flat 	To be used when adsorption surface of a workpiece is flat and not deformed.
Flat with groove 	To be used to ensure removal of a workpiece.
Bellows 	To be used when there is not enough space to install a buffer or adsorption surface of a workpiece is inclined.

● Vacuum Pad Material

- It is necessary to determine vacuum pad materials carefully taking into account the workpiece shape, adaptability in the operating environment, effect after being adsorbed, electrical conductivity, etc.
- Based on the workpiece transfer example for each material, select after confirming the characteristics (adaptability) of rubber.

Vacuum Pad/Example of Workpiece Transfer

Material

Material	Application
NBR	Transfer of general workpieces, Corrugated board, Veneer plate, Iron plate and others
Silicone rubber	Semiconductor, Removing from die-casting, Thin workpieces, Food processor
Urethane rubber	Corrugated board, Iron plate, Veneer plate
FKM	Chemical workpieces
Conductive NBR	General workpieces of semiconductor (Static electricity resistance)
Conductive silicone rubber	Semiconductor (Static electricity, surface resistance up to 10^6 [Ω])
Semiconductive silicone rubber	Semiconductor (Static electricity, surface resistance 10^6 to 10^9 [Ω])

Model Selection

● Rubber Material and Properties

General name		NBR (Nitrile rubber)	Silicone rubber			Urethane rubber	FKM (Fluoro rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber
			—	Semiconductive	Conductive				
Main features		Good oil resistance, abrasion resistance, and aging resistance	Excellent workpiece surface suction ability due to product flexibility Can be used in a wide range of operating temperatures due to excellent heat resistance and cold resistance Superior ozone resistance FDA and Food Sanitation Law compliant (excluding conductive silicone rubber)			Excellent mechanical strength	Best heat resistance, and chemical resistance	Good oil resistance, abrasion resistance, and aging resistance. Conductive	Very excellent heat resistance, and cold resistance. Conductive
Pure gum property (specific gravity)		1.00-1.20	0.95-0.98			1.00-1.30	1.80-1.82	1.00-1.20	0.95-0.98
Physical properties of blended gum	Impact resilience	○	◎			◎	△	○	◎
	Abrasion resistance	◎	×/△			◎	◎	◎	×/△
	Tear resistance	○	×/△			◎	○	○	×/△
	Flex crack resistance	○	×/○			◎	○	○	×/○
	Maximum operation temperature °C	120	200			60	250	100	200
	Minimum operation temperature °C	0	−30	−10		0	0	0	−10
	Volume resistivity (Ωcm)	—	—	—	10 ⁴ or less	—	—	10 ⁴ or less	10 ⁴ or less
	Heat aging	○	◎			△	◎	○	◎
	Weather resistance	○	◎			◎	◎	○	◎
	Ozone resistance	△	◎			◎	◎	△	◎
Chemical resistance Oil resistance	Gasoline/Gas oil	◎	×/△			◎	◎	◎	×/△
	Benzene/Toluene	×/△	×			×/△	◎	×/△	×
	Alcohol	◎	◎			△	△/◎	◎	◎
	Ether	×/△	×/△			×	×/△	×/△	×/△
	Ketone (MEK)	×	○			×	×	×	○
	Ethyl acetate	×/△	△			×/△	×	×/△	△
Alkaline resistance Acid resistance	Water	◎	○			△	◎	◎	○
	Organic acid	×/△	○			×	△/○	×/△	○
	Organic acid of high concentration	△/○	△			×	◎	△/○	△
	Organic acid of low concentration	○	○			△	◎	○	○
	Strong alkali	○	◎			×	○	○	◎
	Weak alkali	○	◎			×	○	○	◎

◎ = Excellent --- Not affected at all, or almost no effect

○ = Good --- Affected a little, but adequate resistance depending on conditions

△ = Better not to use if possible

× = Unsuitable for usage. Severely affected.

* Properties, chemical resistance, and other values are not guaranteed. These values depend on the operating environment, so they cannot be guaranteed by SMC. Thorough research and confirmation are necessary before usage.

● Colour and Identification



General name	NBR (Nitrile rubber)	Silicone rubber	Urethane rubber	FKM (Fluoro rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber	Semiconductive silicone rubber
Colour of rubber	Black	White	Brown	Black	Black	Black	Black
Identification (Dot)	—	—	—	· Green 1 dot	· Silver 1 dot	· Pink 1 dot	· Vertical line laser mark
Rubber hardness HS (±5°)	A60/S						

● Buffer Attachment

- Choose buffer type when the workpieces are of varying heights, the workpieces are fragile, or you need to reduce the impact to the pad. If rotation needs to be limited, use non-rotating buffer.

Unsteady Distance between Pad and Workpiece

When the workpieces are of varying heights, use the buffer type pad with built-in spring. The spring creates a cushion effect between the pad and the workpieces. If rotation needs to be limited further, use non-rotating buffer type.

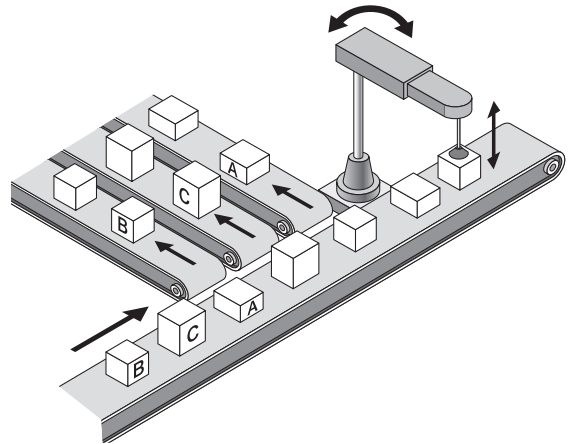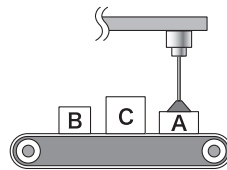


● Pad Selection by Workpiece Type

- Carefully select a pad for the following workpieces.


1. Porous Workpiece

To pick a permeable workpiece such as paper, select a pad with a small diameter that is sufficient to lift the workpiece. Because a large amount of air leakage could reduce the pad's suction force, it may be necessary to increase the capacity of an ejector or vacuum pump or enlarge the conductance area of the piping passage.

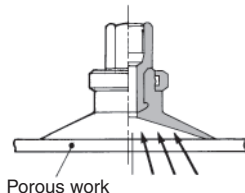


2. Flat Plate Workpiece

When a workpiece with a large surface area such as sheet glass or PCB is suspended, the workpiece could move in a wavelike motion if a large force is applied by wind pressure or by an impact. Therefore, it is necessary to ensure the proper allocation and size of pads.

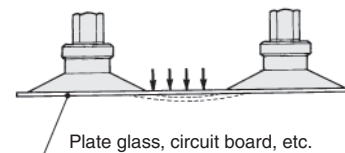


3. Soft Workpiece

If a soft workpiece such as vinyl, paper, or thin sheet is picked up, the vacuum pressure could cause the workpiece to deform or wrinkle. In such a case, it will be necessary to use a small pad or a ribbed pad and reduce the vacuum pressure.

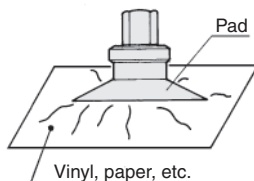

4. Impact to Pad

When pushing a pad to a workpiece, make sure not to apply an impact or a large force which would lead to premature deformation, cracking, or wearing of the pad. The pad should be pushed against the workpiece to the extent that its skirt portion deforms or that its ribbed portion comes into slight contact with the workpiece. Especially, when using a smaller diameter pad, make sure to locate it correctly.

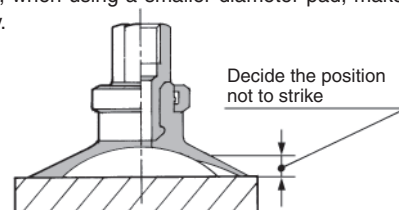

● Vacuum Pad Durability

- Need to be careful of the vacuum pad (rubber) deterioration.
- The vacuum pad's adsorption surface will be worn out when it is used for a certain period of time, and the outer diameter gradually becomes smaller. The lifting force becomes weaker as the pad diameter becomes smaller, but adsorption is still possible.
- Decide when to replace the vacuum pads, taking into account the customer's operating conditions, and signs of deterioration such as changes in the appearance due to wear, reduction in the vacuum pressure that is reached, and delay in the adsorption response time.

Model Selection

3 Selection of Vacuum Ejector and Vacuum Switching Valve

● Calculating Vacuum Ejector and Switching Valve Size with the Formula

Average suction flow rate for achieving adsorption response time _____

$$Q = \frac{V \times 60}{T_1} + Q_L$$

$$T_2 = 3 \times T_1$$

Q : Average suction flow rate l/min (ANR)

V : Piping capacity [L]

T₁ : Arrival time to stable **P_v** 63 % after adsorption [sec]

T₂ : Arrival time to stable **P_v** 95 % after adsorption [sec]

Q_L : Leakage volume during workpiece adsorption [l/min (ANR)] ^{Note 1)}

Max. suction flow rate

$$Q_{max} = (2 \text{ to } 3) \times Q \text{ [l/min (ANR)]}$$

<Selection Procedure>

- **Ejector**

Select the ejector with the greater maximum suction flow rate from the **Q_{max}** indicated above.

- **Direct operation valve**

$$\text{Conductance } C = \frac{Q_{max}}{55.5} \text{ [dm}^3\text{/(s}\cdot\text{bar)]}$$

* Select a valve (solenoid valve) having a conductance that is greater than that of the conductance **C** formula given above.


Note 1) **Q_L**: 0 when no leakage occurs during adsorbing a workpiece.

If there is leakage during adsorbing a workpiece, find the leakage volume based on "4. Leakage Volume during Workpiece Adsorption."

Note 2) Tube piping capacity can be found in "8. Data: Piping Capacity by Tube I.D. (Selection Graph (2))."

4 Leakage Volume during Workpiece Adsorption

Air could be drawn in depending on the type of workpiece. As a result, the vacuum pressure in the pad becomes reduced and the amount of vacuum that is necessary for adsorption cannot be attained. When this type of workpiece must be handled, it is necessary to select the proper size of the ejector and the vacuum switching valve by taking into consideration the amount of air that could leak through the workpiece.

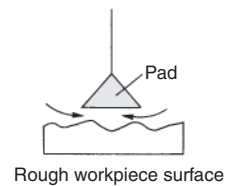

● Leakage Volume from Conductance of Workpiece

$$\text{Leakage volume } Q_L = 55.5 \times C_L$$


Q_L: Leakage volume [l/min (ANR)]

C_L: Conductance between workpiece and pad, and workpiece opening area [dm³/(s·bar)]

● Leakage Volume from Adsorption Test

As described in the illustration below, pick up the workpiece with the ejector, using an ejector, pad and a vacuum gauge.

At this time, read vacuum pressure **P₁**, obtain the suction flow rate from the flow-rate characteristics graph for the ejector that is being used, and render this amount as the leakage of the workpiece.

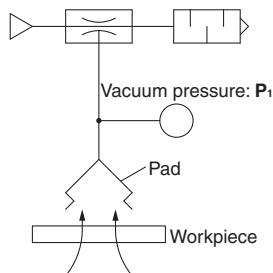

Exercise: Using a supply pressure of 0.45 MPa, when the ejector (ZH07□S) picks up a workpiece that leaks air, the vacuum gauge indicated a pressure of -53 kPa. Calculate the leakage volume from the workpiece.


<Selection Procedure>

When obtaining the suction flow rate at a vacuum pressure of -53 kPa from the ZH07DS flow-rate characteristics graph, the suction flow rate is 5 l/min (ANR). (A→B→C)


$$\text{Leakage volume} \approx \text{Suction flow rate } 5 \text{ l/min (ANR)}$$

ZH07BS, ZH07DS

Exhaust Characteristics

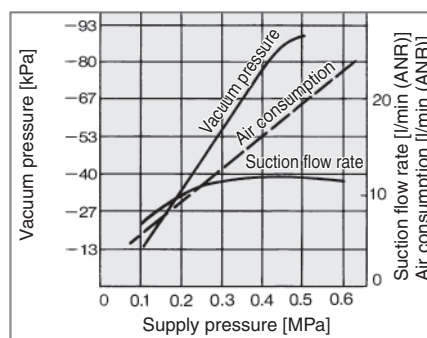

Flow-rate Characteristics Supply pressure {0.45 MPa}

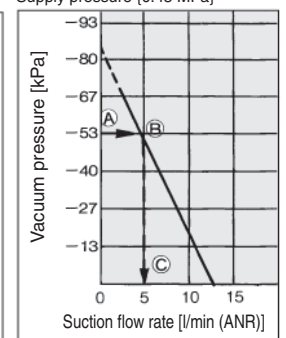


5 Adsorption Response Time

When a vacuum pad is used for the adsorption transfer of a workpiece, the approximate adsorption response time can be obtained (the length of time it takes for the pad's internal vacuum pressure to reach the pressure that is required for adsorption after the supply valve {vacuum switching valve} has been operated). An approximate adsorption response time can be obtained through formulas and selection graphs.


● Relationship between Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated

The relationship between vacuum pressure and response time after the supply valve (switching valve) is operated as shown below.

Vacuum System Circuit

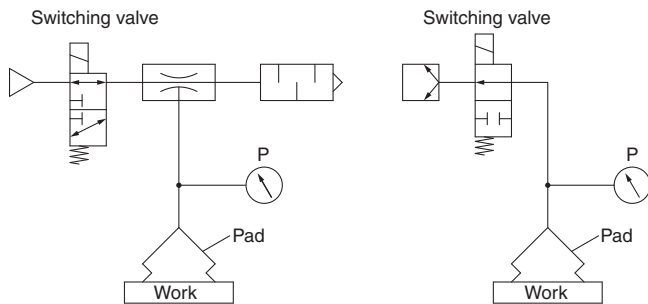

Vacuum Pressure and Response Time after Supply Valve (Switching Valve) is Operated

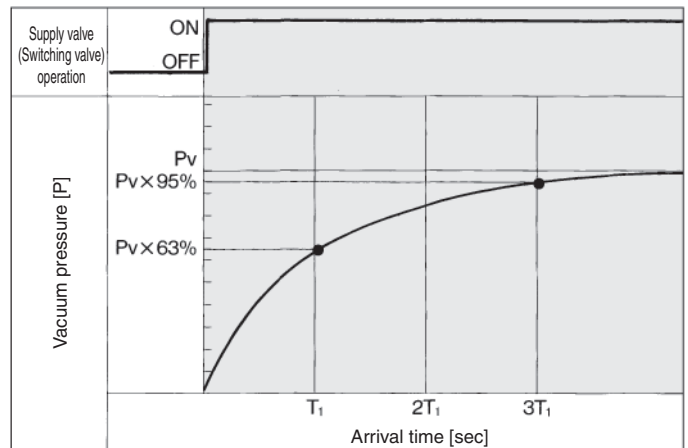

Pv : Final vacuum pressure

T₁ : Arrival time to 63 % of final vacuum pressure **Pv**

T₂ : Arrival time to 95 % of final vacuum pressure **Pv**

● Calculating Adsorption Response Time with the Formula

Adsorption response times **T₁** and **T₂** can be obtained through the formulas given below.

$$\text{Adsorption response time } T_1 = \frac{V \times 60}{Q}$$

$$\text{Adsorption response time } T_2 = 3 \times T_1$$

Piping capacity

$$V = \frac{3.14}{4} D^2 \times L \times \frac{1}{1000} \text{ (L)}$$

T₁ : Arrival time to 63% of final vacuum pressure **Pv** (sec)

T₂ : Arrival time to 95% of final vacuum pressure **Pv** (sec)

Q₁ : Average suction flow rate [L/min [ANR]]

Calculation of average suction flow rate

• Ejector

$$Q_1 = (1/2 \text{ to } 1/3) \times \text{Ejector max. suction flow rate [l/min [ANR]]}$$

• Vacuum pump

$$Q_1 = (1/2 \text{ to } 1/3) \times 55.5 \times \text{Conductance of vacuum pump [dm}^3\text{/(s}\cdot\text{bar)}]$$

D : Piping diameter [mm]

L : Length from ejector and switch valve to pad [m]

V : Piping capacity from ejector and switching valve to pad [L]

Q₂ : Max. flow from ejector and switching valve to pad by piping system

$$Q_2 = C \times 55.5 \text{ l/min [ANR]}$$

Q : Smaller one between the **Q₁** and **Q₂** [l/min [ANR]]

C : Conductance of piping [dm³/(s·bar)]

For the conductance, the equivalent conductance can be found in “8. Data: Conductance by Tube I.D. (Selection Graph (3)).”

Model Selection

● Adsorption Response Time from the Selection Graph


1. Tube Piping Capacity

Piping capacity from the ejector and switching valve at vacuum pump to the pad can be found in “8. Data: Piping Capacity by Tube I.D. (Selection Graph (2)).”

2. Obtain the adsorption response times.

By operating the supply valve (switching valve) that controls the ejector (vacuum pump), the adsorption response times T_1 and T_2 that elapsed before the prescribed vacuum pressure is reached can be obtained from the Selection Graph (1).

Selection Graph (1) Adsorption Response Time

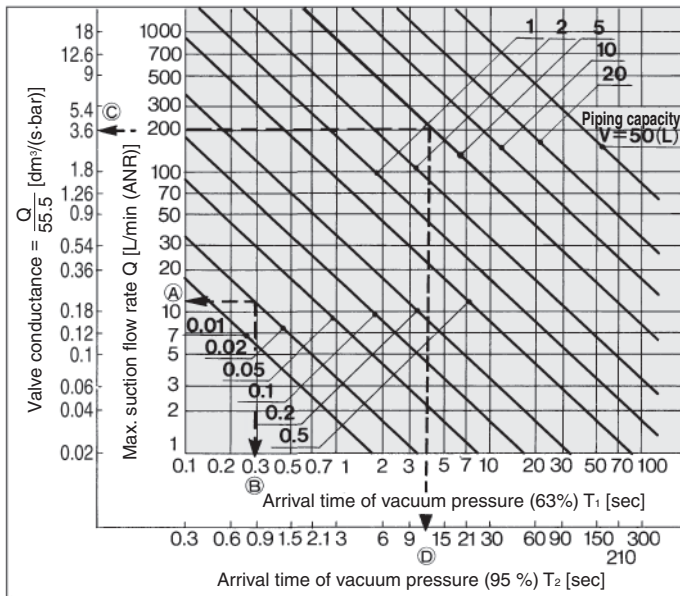

* Conversely, the size of the ejector or the size of the switching valve of the vacuum pump system can be obtained from the adsorption response time.

How to read the graph

Example 1: For obtaining the adsorption response time until the pressure in the piping system with a piping capacity of 0.02 L is discharged to 63 % (T_1) of the final vacuum pressure through the use of the vacuum ejector ZH07□S with a maximum suction flow rate of 12 l/min (ANR).

<Selection Procedure>

From the point at which the vacuum ejector's maximum vacuum suction flow rate of 12 l/min (ANR) and the piping capacity of 0.02 L intersect, the adsorption response time T_1 that elapses until 63 % of the maximum vacuum pressure is reached can be obtained. (Sequence in Selection Graph (1), (A)→(B)) $T_1 \approx 0.3$ seconds.

Example 2: For obtaining the discharge response time until the internal pressure in the 5 L tank is discharged to 95 % (T_2) of the final vacuum pressure through the use of a valve with a conductance of 3.6 [dm³/(s·bar)].

<Selection Procedure>

From the point at which the valve's conductance of 3.6 [dm³/(s·bar)] and the piping capacity of 5 L intersect, the discharge response time (T_2) that elapses until 95 % of the final vacuum pressure is reached can be obtained. (Sequence in Selection Graph (1), (C)→(D)) $T_2 \approx 12$ seconds.


6 Precautions on Vacuum Equipment Selection and SMC's Proposal

● Safety Measures

- Make sure to provide a safe design for a vacuum pressure drop due to a disruption of power supply, or a lack of supply air. Drop prevention measures must be taken in particular when dropping a workpiece presents some degree of danger.


● Precautions on Vacuum Equipment Selection

As a countermeasure for power outages, select a supply valve that is normally open or one that is equipped with a self-holding function.

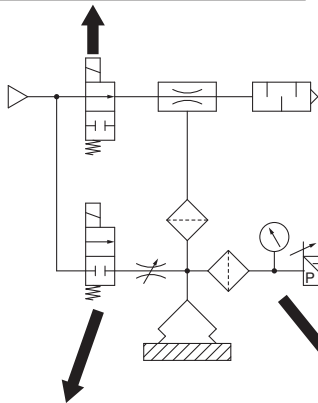


For the release valve, select a 2/3 port valve with a low vacuum specification. Also, use a needle valve to regulate the release flow rate.

 - During the adsorption and transfer of a workpiece, verification of the vacuum switch is recommended.
- In addition, visually verify the vacuum gauge when handling a heavy or a hazardous item.
- The ZSP1 type is optimal for the adsorption and transfer of small parts using a suction nozzle with a small diameter.
- Install a filter (Series ZFA, ZFB, ZFC) before the pressure switch if the ambient air is of low quality.



Select a vacuum switching valve that has a conductance that does not reduce the composite conductance consisting of the areas from the pad to the ejector.

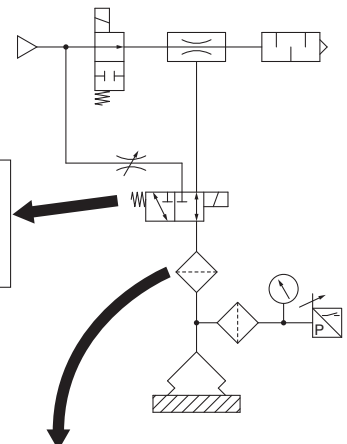

Use a suction filter (Series ZFA, ZFB, ZFC) to protect the switching valve and to prevent the ejector from becoming clogged. Also, a suction filter must be used in a dusty environment. If only the unit's filter is used, it will become clogged quickly.

● Vacuum Ejector or Pump and Number of Vacuum Pads

Ejector and number of pads		Vacuum pump and number of pads	
Ideally, one pad should be used for each ejector.	When more than one pad is attached to a single ejector, if one of the workpieces becomes detached, the vacuum pressure will drop, causing other workpieces to become detached. Therefore, the countermeasures listed below must be taken. • Adjust the needle valve to minimise the pressure fluctuation between adsorption and non-adsorption operations. • Provide a vacuum switching valve to each individual pad to minimise the influences on other pads if an adsorption error occurs.	Ideally, one pad should be used for each line.	When more than one pad is attached to a single vacuum line, take the countermeasures listed below. • Adjust the needle valve to minimise the pressure fluctuation between adsorption and non-adsorption operation. • Include a tank and a vacuum pressure reduction valve (vacuum pressure regulator valve) to stabilise the source pressure. • Provide a vacuum switching valve to each individual pad to minimise the influences on other pads if an adsorption error occurs.


Model Selection

● Vacuum Ejector Selection and Handling Precautions


Ejector Selection

There are 2 types of ejector flow-rate characteristics: the high vacuum type (S type) and the high flow type (L type). During the selection, pay particular attention to the vacuum pressure when adsorbing workpieces that leak.

High Vacuum Type Flow-rate Characteristics/ ZH13□S

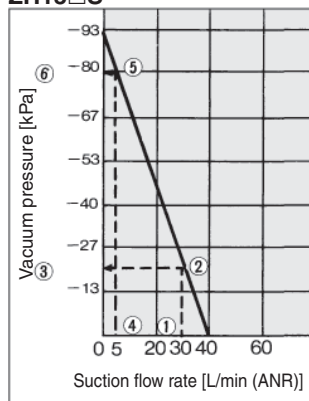

High Flow Type Flow-rate Characteristics/ ZH13□L

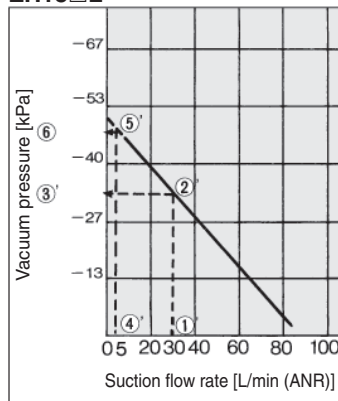

The vacuum pressure varies in accordance with the leakage volumes indicated in the above diagrams.

If the leakage volume is 30 l/min (ANR), the vacuum pressure of the S type is -20 kPa ① → ② → ③, and for the L type it is -33 kPa ①' → ②' → ③'. If the leakage volume is 5 l/min (ANR), the vacuum pressure of the S type is -80 kPa ④ → ⑤ → ⑥, and for the L type it is -47 kPa ④' → ⑤' → ⑥'. Thus, if the leakage volume is 30 l/min (ANR) the L type can attain a higher vacuum pressure, and if the leakage volume is 5 l/min (ANR), the S type can attain a higher vacuum pressure.


Thus, during the selection process, make sure to take the flow-rate characteristics of the high vacuum type (S type) and the high flow type (L type) into consideration in order to select the type that is optimal for your application.

- If the vacuum ejector makes an intermittent noise (abnormal noise) from exhaust at a certain supply pressure, the vacuum pressure will not be stable. It will not be any problem if the vacuum ejector is used under this condition. However, if the noise is disturbing or might affect the operation of the vacuum pressure switch, lower or raise supply pressure a little at a time, and use in an air pressure range that does not produce the intermittent noise.

● Supply Pressure of Vacuum Ejector

- Use the vacuum ejector at the standard supply pressure.
The maximum vacuum pressure and suction flow rate can be obtained when the vacuum ejector is used at the standard supply pressure, and as a result, adsorption response time also improves. From the viewpoint of energy-saving, it is the most effective to use the ejector at the standard supply pressure. Since using it at the excessive supply pressure causes a decline in the ejector performance, do not use it at a supply pressure exceeding the standard supply.


Ejector Nozzle Diameter Selection

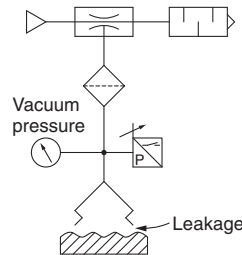

If a considerable amount of leakage occurs between the workpiece and the pad, resulting in incomplete adsorption, or to shorten the adsorption and transfer time, select an ejector nozzle with a larger diameter from the ZH, ZM, ZR, or ZL series.


Manifold Use

Individual exhaust

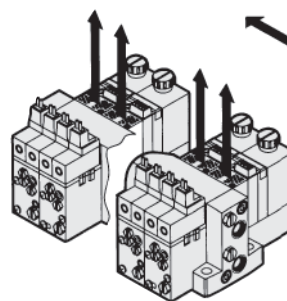

If there are a large number of ejectors that are linked on a manifold and operate simultaneously, use the built-in silencer type or the port exhaust type.

Centralised exhaust

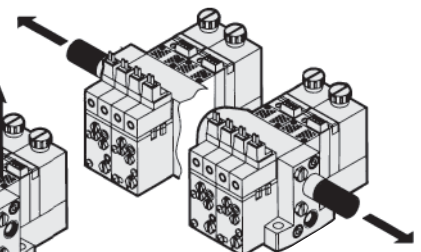

If there are a large number of ejectors that are linked on a manifold, which exhaust collectively, install a silencer at both ends. If the exhaust must be discharged outdoors through piping, make sure that the diameter of the piping is large enough that its back pressure will not affect the operation of the ejectors.

● Timing for Vacuum Generation and Suction Verification

A. Timing for Vacuum Generation

The time for opening/closing the valve will be counted if a vacuum is generated after the adsorption pad descends to adsorb a workpiece. Also, there is a timing delay risk for the generating vacuum since the operational pattern for the verification switch, which is used for detecting the descending vacuum pad, is not even.

To solve this issue, we recommend that vacuum be generated in advance, before the vacuum pad begins to descend to the workpiece. Adopt this method after confirming that there will be no misalignment resulting from the workpiece's light mass.

B. Suction Verification

When lifting the vacuum pad after absorbing a workpiece, confirm that there is a suction verification signal from the vacuum pressure switch, before the vacuum pad is lifted. If the vacuum pad is lifted, based on the timing of a timer, etc., there is a risk that the workpiece may be left behind.

In general adsorption transfer, the time for adsorbing a workpiece is slightly different since the position of the vacuum pad and the workpiece are different after every operation. Therefore, program a sequence in which the suction completion is verified by a vacuum pressure switch, etc. before moving to the next operation.

C. Set Pressure for Vacuum Pressure Switch

Set the optimum value after calculating the required vacuum pressure for lifting a workpiece.

If a higher pressure than required is set, there is a possibility of being unable to confirm the suction even though the workpiece is adsorbed. This will result in a suction error.

When setting vacuum pressure switch set values, you should set using a lower pressure, with which a workpiece can be adsorbed, only after considering the acceleration or vibration when a workpiece is transferred. The set value of the vacuum pressure switch shortens the time to lift a workpiece. Since the switch detects whether the workpiece is lifted or not, the pressure must be set high enough to detect it.


Vacuum Pressure Switch (Series ZS), Vacuum Pressure Gauge (Series GZ)

When adsorbing and transferring a workpiece, verify at the vacuum pressure switch as much as possible (In addition, visually verify the vacuum gauge, especially when handling a heavy or a hazardous item.).

Approx. $\phi 1$ adsorption nozzle

The difference in pressure between ON and OFF becomes small depending on the capacity of the ejector and vacuum pump. In such a case, **it will be necessary to use ZSP1 that can detect a small hysteresis or a flow switch.**

- Note) • A vacuum generator with a large suction capacity will not be detected properly, so an ejector with an appropriate capacity must be selected.
- Since the hysteresis is small, vacuum pressure must be stabilised.

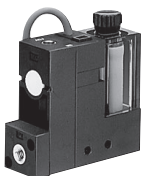

Suction verification switch
ZSP1




Flow sensor
PFMV



Vacuum pressure
gauge
GZ46

Refer to our website www.smc.eu for more details.

Timing Chart Example

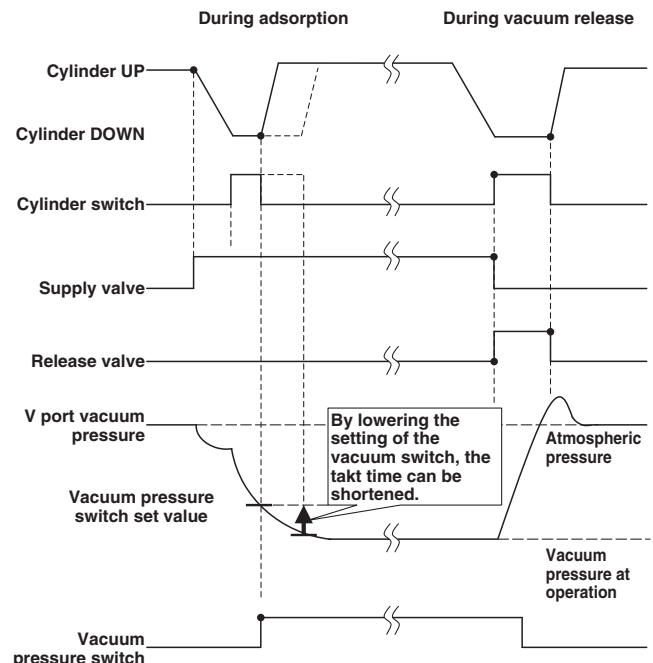

Model Selection

● Dust Handling of Vacuum Equipment

- When the vacuum equipment is used, not only the workpiece, but also dust in the surrounding environment is taken in the equipment. Preventing the intrusion of dust is required more than for any other pneumatic equipment. Some of SMC's vacuum equipment comes with a filter, but when there is a large amount of dust, an additional filter must be installed.
- When vaporised materials such as oil or adhesive are sucked into the equipment, they accumulate inside, which may cause problems.
- It is important to prevent dust from entering the vacuum equipment as much as possible.
 - (1) Make sure to keep the working environment and surrounding area of the workpiece clean so that dust will not be sucked in the equipment.
 - (2) Check the amount and types of dust before using the equipment and install a filter, etc., in the piping when necessary. In particular, equipment used to capture dust, such as a vacuum cleaner, require a special filter.
 - (3) Conduct a test and make sure that operating conditions are cleared before using the equipment.
 - (4) Perform filter maintenance depending on the amount of dirt.
 - (5) Filter clogging generates a pressure difference between the adsorption and ejector parts. This requires attention, since clogging can prevent proper adsorption from being achieved.

Air Suction Filter (Series ZFA, ZFB, ZFC)

- To protect the switching valve and the ejector from becoming clogged, a suction filter in the vacuum circuit is recommended.
- When using an ejector in a dusty environment, the unit's filter will become clogged quickly, so it is recommended that the ZFA, ZFB or ZFC series be used concurrently.

Vacuum Line Equipment Selection

Determine the volume of the suction filter and the conductance of the switching valve in accordance with the maximum suction flow rate of the ejector and the vacuum pump. Make sure that the conductance is greater than the value that has been obtained through the formula given below. (If the devices are connected in series in the vacuum line, their conductances must be combined.)

$$C = \frac{Q_{\max}}{55.5}$$

C: Conductance [dm³/(s·bar)]
Q_{max}: Max. suction flow rate [l/min (ANR)]

7 Vacuum Equipment Selection Example

● Transfer of Semiconductor Chips

Selection conditions:

- (1) Workpiece: Semiconductor chips
Dimensions: 8 mm x 8 mm x 1 mm, Weight: 1 g
- (2) Vacuum piping length: 1 m
- (3) Adsorption response time: 300 msec or less

1. Vacuum Pad Selection

- (1) Based on the workpiece size, the pad diameter is 4 mm (1 pc.).
- (2) Using the formula on the front matter 4, confirm the lifting force.

$$\begin{aligned} W &= P \times S \times 0.1 \times 1/t \\ 0.0098 &= P \times 0.13 \times 0.1 \times 1/4 \\ P &= 3.0 \text{ kPa} \end{aligned} \quad \left\{ \begin{aligned} W &= 1 \text{ g} = 0.0098 \text{ N} \\ S &= \pi/4 \times (0.4)^2 = 0.13 \text{ cm}^2 \\ t &= 4 \text{ (Horizontal lifting)} \end{aligned} \right.$$

According to the calculation, -3.0 kPa or more of vacuum pressure can adsorb the workpiece.

- (3) Based on the workpiece shape and type, select:
Pad type: Flat
Pad material: Silicone
- (4) According to the results above, select a vacuum pad part number ZP3-04US-□□.
(Specify the vacuum inlet type (□□) from the pad mounting status.)

2. Vacuum Ejector Selection

- (1) Find the vacuum piping capacity.
Assuming that the tube I.D. is 2 mm, the piping capacity is as follows:
$$V = \pi/4 \times D^2 \times L \times 1/1000 = \pi/4 \times 2^2 \times 1 \times 1/1000 = 0.0031 \text{ L}$$
- (2) Assuming that leakage (Q_L) during adsorption is 0, find the average suction flow rate to meet the adsorption response time using the formula on the front matter 8.

$$Q = (V \times 60) / T_1 + Q_L = (0.0031 \times 60) / 0.3 + 0 = 0.62 \text{ L}$$

From the formula on the front matter 8, the maximum suction flow rate $Q_{\max}$ is

$$\begin{aligned} Q_{\max} &= (2 \text{ to } 3) \times Q = (2 \text{ to } 3) \times 0.62 \\ &= 1.24 \text{ to } 1.86 \text{ l/min (ANR)} \end{aligned}$$

According to the maximum suction flow rate of the vacuum ejector, a nozzle with a 0.5 diameter can be used.

If the vacuum ejector ZX series is used, representative model ZX105□ can be selected.

(Based on the operating conditions, specify the complete part number for the vacuum ejector used.)

3. Adsorption Response Time Confirmation

Confirm the adsorption response time based on the characteristics of the vacuum ejector selected.

- (1) The maximum suction flow rate of the vacuum ejector ZX105□ is 5 l/min (ANR). From the formula on the front matter 9, the average suction flow rate Q_1 is as follows:

$$\begin{aligned} Q_1 &= (1/2 \text{ to } 1/3) \times \text{Ejector max. suction flow rate} \\ &= (1/2 \text{ to } 1/3) \times 5 = 2.5 \text{ to } 1.7 \text{ l/min (ANR)} \end{aligned}$$

- (2) Next, find the maximum flow rate Q_2 of the piping. The conductance **C** is 0.22 from the Selection Graph (3).
From the formula on the front matter 9, the maximum flow rate is as follows:

$$Q_2 = C \times 55.5 = 0.22 \times 55.5 = 12.2 \text{ l/min (ANR)}$$

- (3) Since Q_2 is smaller than Q_1 , $Q = Q_1$.

Thus, from the formula on the front matter 9, the adsorption response time is as follows:

$$\begin{aligned} T &= (V \times 60) / Q = (0.0031 \times 60) / 1.7 = 0.109 \text{ seconds} \\ &= 109 \text{ msec} \end{aligned}$$


It is possible to confirm that the calculation result satisfies the required specification of 300 msec.

Model Selection

8 Data

● Selection Graph

Selection Graph (2) Piping Capacity by Tube I.D.

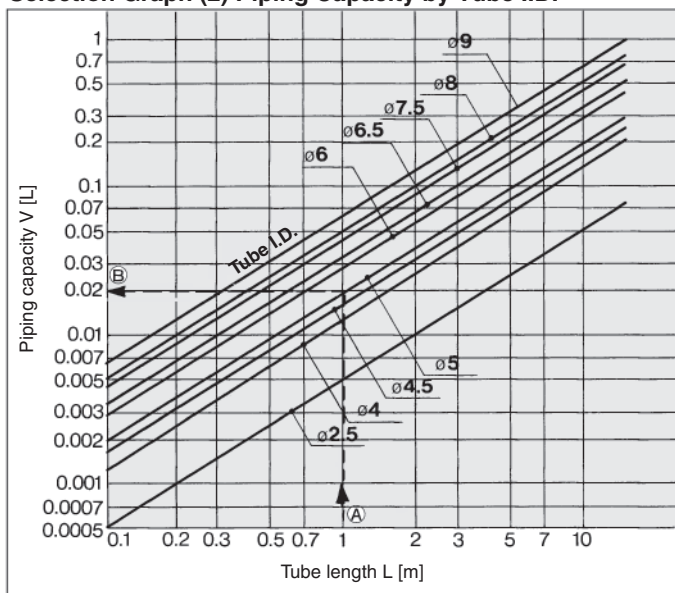

How to read the graph


Example: For obtaining the capacity of tube I.D. Ø 5 and 1 meter length

<Selection Procedure>

By extending leftward from the point at which the 1 meter tube length on the horizontal axis intersects the line for a tube I.D. Ø 5, the piping capacity approximately equivalent to 0.02 L can be obtained on the vertical axis.

Piping capacity $\approx 0.02 L$

Selection Graph (3) Conductance by Tube I.D.

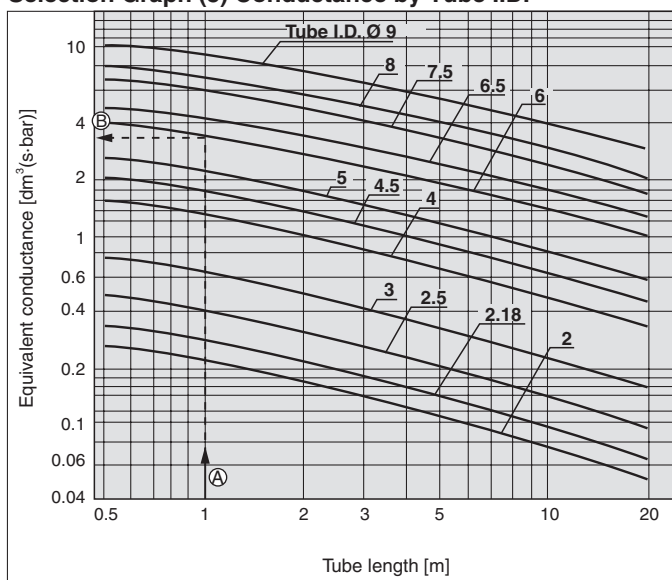

How to read the graph

Example: Tube size Ø 8/Ø 6 and 1 meter length

<Selection Procedure>

By extending leftward from the point at which the 1 meter tube length on the horizontal axis intersects the line for a tube I.D. Ø 6, the equivalent conductance approximately 3.6 [dm³/(s·bar)] can be obtained on the vertical axis.

Equivalent conductance ≈ 3.6 [dm³/(s·bar)]

● Glossary of Terms

Terms	Description
(Max.) suction flow rate	Volume of air taken in by the ejector. The maximum value is the volume of air taken in without having anything connected to the vacuum port.
Maximum vacuum pressure	The maximum value of the vacuum pressure generated by the ejector
Air consumption	The compressed volume of air consumed by the ejector
Standard supply pressure	The optimal supply pressure for operating the ejector
Exhaust characteristics	The relationship between the vacuum pressure and the suction flow rate when the supply pressure to the ejector has been changed.
Flow-rate characteristics	The relationship between the vacuum pressure and the suction flow rate with the standard supply pressure supplied to the ejector.
Vacuum pressure switch	Pressure switch for verifying the adsorption of a workpiece
Suction verification switch	Switch, based on an air pressure bridge, for verifying the adsorption of a workpiece. It is used when the adsorption pad and the nozzle are extremely small.
(Air) supply valve	Valve for supplying compressed air to the ejector
(Vacuum) release valve	Valve for supplying positive pressure or air for breaking the vacuum state of the adsorption pad
Flow adjustment valve	Valve for adjusting the volume of air for breaking the vacuum
Release pressure	Pressure for breaking the vacuum
Pilot pressure	Pressure for operating the ejector valve
External release	The action of breaking the vacuum using externally supplied air instead of using the ejector unit
Vacuum port	Port for generating vacuum
Exhaust port	Port for exhausting air consumed by the ejector, and air taken in from the vacuum port.
Supply port	Port for supplying air to the ejector
Back pressure	Pressure inside the exhaust port
Leakage	The entry of air into the vacuum passage, such as from an area between a workpiece and a pad, or between a fitting and a tube. The vacuum pressure decreases when leakage occurs.
Response time	The time from the application of the rated voltage to the supply valve or release valve, until V port pressure reaches the specified pressure.
Average suction flow rate	The suction flow rate by the ejector or pump for calculating the response speed. It is 1/2 to 1/3 of the maximum suction flow rate.
Conductive pad	A low electrical resistance pad for electrostatic prevention measure
Vacuum pressure	Any pressure below the atmospheric pressure. When the atmospheric pressure is used as a reference, the pressure is presented by -kPa (G), and when the absolute pressure is used as a reference, the pressure is represented by kPa (abs). When referencing a piece of vacuum equipment such as an ejector, the pressure is generally represented by -kPa.
Ejector	A unit for generating vacuum by discharging the compressed air from a nozzle at a high speed, based on the phenomenon in which the pressure is reduced when the air around the nozzle is sucked.
Air suction filter	Vacuum filter provided in the vacuum passage for preventing the dust intrusion into the ejector, vacuum pump, or peripheral equipment

Model Selection

● Countermeasures for Vacuum Adsorption System Problems (Troubleshooting)

Condition & Description of improvement	Contributing factor	Countermeasure
Initial adsorption problem (During trial operation)	Adsorption area is small. (Lifting force is lower than the workpiece mass.)	Reconfirm the relationship between workpiece mass and lifting force. • Use a vacuum pad with a large adsorption area. • Increase the quantity of vacuum pads.
	Vacuum pressure is low. (Leakage from adsorption surface) (Air permeable workpiece)	Eliminate (reduce) leakage from adsorption surface. • Reconsider shape of vacuum pad. Confirm the relationship between suction flow rate and arrival pressure of vacuum ejector. • Use a vacuum ejector with a high suction flow rate. • Increase adsorption area.
	Vacuum pressure is low. (Leakage from vacuum piping)	Repair leakage point.
	Internal volume of vacuum circuit is large.	Confirm the relationship between internal volume of the vacuum circuit and suction flow rate of the vacuum ejector. • Reduce internal volume of the vacuum circuit. • Use a vacuum ejector with a high suction flow rate.
	Pressure drop of vacuum piping is large.	Reconsider vacuum piping. • Use a shorter or larger tube (with appropriate diameter).
	Inadequate supply pressure of vacuum ejector	Measure supply pressure in vacuum generation state. • Use standard supply pressure. • Reconsider compressed air circuit (line).
	Clogging of nozzle or diffuser (Infiltration of foreign objects during piping)	Remove foreign objects.
	Supply valve (switching valve) is not being activated.	Measure supply voltage at the solenoid valve with a tester. • Review electric circuits, wiring and connectors. • Use in the rated voltage range.
	Workpiece deforms during adsorption.	Since a workpiece is thin, it deforms and leakage occurs. • Use a pad for adsorption of thin objects.
Late vacuum achieving time (Shortening of response time)	Internal volume of vacuum circuit is large.	Confirm the relationship between internal volume of the vacuum circuit and suction flow rate of the vacuum ejector. • Reduce internal volume of the vacuum circuit. • Use a vacuum ejector with a high suction flow rate.
	Pressure drop of vacuum piping is large.	Reconsider vacuum piping. • Use a shorter or larger tube (with appropriate diameter).
	Using the product as close to the highest vacuum power in the specifications.	Set vacuum pressure to minimum necessary value by optimising the pad diameter, etc. As the vacuum power of an ejector (venturi) rises, the vacuum flow actually lowers. When an ejector is used at its highest possible vacuum value, the vacuum flow will lower. Due to this, the amount of time needed to achieve adsorption is lengthened. One should consider an increase in the diameter of the ejector nozzle or an increase the size of the vacuum pad utilised in order to lower the required vacuum pressure, maximum the vacuum flow, and speed up the adsorption process.
	Setting of vacuum pressure switch is too high.	Set to suitable setting pressure.

Condition & Description of improvement	Contributing factor	Countermeasure
Fluctuation in vacuum pressure	Fluctuation in supply pressure	Reconsider compressed air circuit (line). (Addition of a tank, etc.)
	Vacuum pressure may fluctuate under certain conditions due to ejector characteristics.	Lower or raise supply pressure a little at a time, and use in a supply pressure range where vacuum pressure does not fluctuate.
Occurrence of abnormal noise (intermittent noise) from exhaust of vacuum ejector	Intermittent noise may occur under certain conditions due to ejector characteristics.	Lower or raise supply pressure a little at a time, and use in a supply pressure range where the intermittent noise does not occur.
Air leakage from vacuum port of manifold type vacuum ejector	Exhaust air from the ejector enters the vacuum port of another ejector that is stopped.	Use a vacuum ejector with a check valve. (Please contact SMC for the part no. of an ejector with a check valve.)
Adsorption problem over time (Adsorption was normal during trial operation.)	Clogging of suction filter	Replace filters. Improve installation environment.
	Clogging of sound absorbing material	Replace sound absorbing materials. Add a filter to supply (compressed) air circuit. Install an additional suction filter.
	Clogging of nozzle or diffuser	Remove foreign objects. Add a filter to supply (compressed) air circuit. Install an additional suction filter.
	Vacuum pad (rubber) deterioration, cracking, etc.	Replace vacuum pads. Confirm compatibility of vacuum pad material and workpiece.
Workpiece is not released.	Inadequate release flow rate	Open release flow adjustment needle.
	Viscosity increase due to vacuum pad (rubber) wear	Replace vacuum pads. Confirm compatibility of vacuum pad material and workpiece.
	Vacuum pressure is too high.	Set vacuum pressure to minimum necessary value.
	Effects due to static electricity	Use a conductive pad.

Model Selection

●Non-conformance Examples

Phenomenon	Possible causes	Countermeasure
No problem occurred during the test, but adsorption becomes unstable after starting operation.	- Setting of the vacuum switch is not appropriate. Supply pressure is unstable. Vacuum pressure does not reach the set pressure. - There is leakage between the workpiece and the vacuum pad.	1) Set the pressure for the vacuum equipment (supply pressure, if using an ejector) to the necessary vacuum pressure during the adsorption of the workpieces. And set the set pressure for the vacuum switch to the necessary vacuum pressure for adsorption. 2) It is presumed that there was leakage during the test, but it was not serious enough to prevent adsorption. Revise the vacuum ejector and the shape, diameter, and material of the vacuum pad. Revise the vacuum pad.
Adsorption becomes unstable after replacing the pad.	- Initial setting conditions (vacuum pressure, vacuum switch setting, height of the pad) have changed. Settings have changed because the pad was worn out or had permanent setting due to the operating environment. - When the pad was replaced, leakage was generated from the screw connection part, or the engagement between the pad and the adapter.	1) Revise the operating conditions including vacuum pressure, the set pressure of the vacuum switch, and the height of the pad. 2) Revise the engagement.
Identical pads are used to adsorb identical workpieces, but some of the pads cannot adsorb the workpieces.	- There is leakage between the workpiece and the vacuum pad. - The supply circuit for the cylinder, the solenoid valve and the ejector is in the same pneumatic circuit system. The supply pressure decreases when they are used simultaneously. (Vacuum pressure does not increase) - There is leakage from the screw connection part or the engagement between the pad and the adapter.	1) Revise the pad diameter, shape, material, vacuum ejector (suction flow rate), etc. 2) Revise the pneumatic circuit. 3) Revise the engagement.
The workpiece cannot be separated from the pad. The workpiece sticks to the rubber part of the bellows.	- The adhesiveness of the rubber material is high. Adhesiveness increases due to the operating environment (wearing of the pad, etc.). - Vacuum pressure is higher than necessary, so excessive force (adhesiveness of the rubber + vacuum pressure) is applied to the pad (rubber part).	1) Revise the shape, material, and quantity of vacuum pads. 2) Reduce the vacuum pressure. If inadequate lifting force causes a problem in transferring the workpieces due to the reduction of vacuum pressure, increase the number of pads, or select pads with larger diameter.

■ When mounted with the nut, sometimes the buffer operation is not smooth, or the buffer does not slide.

[Possible causes]

- The tightening torque of the nut for mounting the buffer is too high.
- Particles stuck to the sliding surface, or it is scratched.
- Lateral load applied to the piston rod, causing eccentric wearing.

[Remedy]

Tighten the nut to the recommended tightening torque.

The nut may become loose depending on the operating conditions and environment. Be sure to perform regular maintenance.

General Purpose

Product specifications			Nut tightening torque
Pad diameter	Product part no.	Mounting thread size	
Ø 1.5 to Ø 3.5	ZP3-*(015 to 035) U*	M6 x 0.75	1.5 to 1.8 N·m
		M8 x 0.75	2.0 to 2.5 N·m
Ø 4 to Ø 16	ZP3-*(04 to 16) UM, B* ZP3-*(10 to 16) UM, B*	M8 x 0.75	2.0 to 2.5 N·m

● Time of Replacement of Vacuum Pad

The vacuum pad is disposable. Replace it on a regular basis.

Continued use of the vacuum pad will cause wear and tear on the adsorption surface, and the exterior dimensions will gradually get smaller and smaller. As the pad diameter gets smaller, lifting force will decrease, though adsorption is possible.

It is extremely difficult to provide advice on the frequency of vacuum pad exchange. This is because there are numerous factors at work, including surface roughness, operationg environment (temperature, humidity, ozone, solvents, etc.), and operating conditions (vacuum pressure, workpiece weight, pressing force of the vacuum pad on the workpiece, presence or absence of a buffer, etc.).

Thus, the customer should decide when the vacuum pad should be exchanged, based on its condition at time of initial use.

The bolt may become loose depending on the operating conditions and environment. Be sure to perform regular maintenance.

Compact Type *ZP3 Series* Specifications

Pad Material

Material	NBR (Nitrile rubber)	Silicone rubber *1*2	Urethane rubber	FKM (Fluoro rubber)	Conductive NBR (Nitrile rubber)	Conductive silicone rubber	Semiconductive silicone rubber	Semiconductive HNBR
Color of rubber	Black	White	Navy blue	Black				Blue
Rubber hardness (Shore A: ±5°)	60		50	60	60 to 70	60	55	60

*1 Uses a material compliant with a dissolution test of the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.2600 for "Rubber articles intended for repeated use."

*2 Uses a material compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D3) (Partial revision: Japanese Ministry of Health, Labour, and Welfare Notification No. 595, 2012) in Section 3 "Apparatus and Containers/Packaging" of the Japan Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Japanese Ministry of Health and Welfare Notification No. 370, 1959)

Adapter Specifications

Vacuum Inlet Direction **Vertical** T Type/ZP3-T

Connection		Male thread						Female thread	
Pad diameter		ø1.5 to ø3.5		ø4 to ø8		ø10 to ø16		ø1.5 to ø3.5	ø4 to ø16
Connection thread		M3 x 0.5	M6 x 0.75	M5 x 0.8	M10 x 1	M5 x 0.8	M12 x 1	M3 x 0.5	M5 x 0.8
Vacuum inlet	Female thread	Use the connection thread.	M3 x 0.5	Use the connection thread.	M5 x 0.8	Use the connection thread.	M5 x 0.8	Use the connection thread.	Use the connection thread.
	One-touch fitting		ø2, ø4		ø2, ø4		ø2, ø4, ø6		
	Barb fitting*1		ø2, ø4		ø2, ø4		ø2, ø4, ø6		

*1 ø2 polyurethane tubing, ø4, ø6 soft tubing

Vacuum Inlet Direction **Lateral** Y Type/ZP3-Y

Connection		Female thread		
Pad diameter		ø1.5 to ø3.5	ø4 to ø8	ø10 to ø16
Connection thread		M3 x 0.5	M5 x 0.8	M5 x 0.8
Vacuum inlet	Female thread	M3 x 0.5	M5 x 0.8	M5 x 0.8
	One-touch fitting	ø2, ø4	ø2, ø4	ø2, ø4, ø6
	Barb fitting*1	ø2, ø4	ø2, ø4	ø2, ø4, ø6

*1 ø2 polyurethane tubing, ø4, ø6 soft tubing

Buffer Specifications

Pad diameter		ø1.5 to ø3.5		ø4 to ø16		
Non-rotating specification		J: Rotating	K: Non-rotating	J: Rotating	JB: Rotating, With bushing	K: Non-rotating
Stroke [mm]		3, 6		3, 6, 10	15, 20	3, 6, 10, 15, 20
Connection thread		M6 x 0.75	M8 x 0.75	M8 x 0.75		
Spring reactive force [N]	At 0 stroke	0.2		0.2		
	At full stroke	0.4	0.5	0.5		



Compact Type

Flat Type

ZP3 Series

Pad diameter: Ø1.5, Ø2, Ø3.5



How to Order

Pad unit	ZP3	—	015	U	N					p. 3	p. 26	From p. 28			
* Pad unit's sales unit: 10 pcs.															
With adapter	ZP3		—	T	015	U	N		—	A3			From p. 3	p. 26	From p. 28
With buffer	ZP3		—	T	015	U	N	J	3						
		1		2	3		4	5	6		7		8		

1 Adapter material

—	Brass
S*1	Stainless steel (Stainless steel 304)

*1 Only applicable to the pad with adapter

2 Vacuum inlet direction

—	Pad unit
T	Vertical
Y	Lateral

3 Pad diameter

015	Ø1.5
02	Ø2
035	Ø3.5

4 Material

N	NBR
S	Silicone rubber*1 *2
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

5 Buffer specification

J	Rotating
K	Non-rotating

6 Buffer stroke

Stroke [mm]	Pad diameter	
	All sizes	
3	●	
6	●	

*1 Uses a material compliant with a dissolution test of the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.2600 for "Rubber articles intended for repeated use."

*2 Uses a material compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D3) (Partial revision: Japanese Ministry of Health, Labour, and Welfare Notification No. 595, 2012) in Section 3 "Apparatus and Containers/Packaging" of the Japan Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Japanese Ministry of Health and Welfare Notification No. 370, 1959)

With adapter						
7 Connection thread/ 8 Vacuum inlet			○: ZP3□-T/Vertical ●: ZP3□-Y/Lateral			
Type	Symbol	Size	Type	Symbol	Size	Pad diameter
Male thread	A3	M3 x 0.5	—	—	—*1	○
			Female thread	B3	M3 x 0.5	○
	A6	M6 x 0.75	One-touch fitting*4	02	Ø2	○
			Barb fitting*4	04	Ø4	○
				U2	For Ø2 polyurethane tubing*2	○
Female thread	B3	M3 x 0.5	—	—	—*1	○
			Female thread	B3	M3 x 0.5	●
			One-touch fitting*4	02	Ø2	●
			Barb fitting*4	04	Ø4	●
				U2	For Ø2 polyurethane tubing	●
				U4	For Ø4 soft tubing	●

*1 Use the connection thread.

*2 Polyurethane tube piping

*3 Soft nylon/Polyurethane tube piping

*4 Not compatible with stainless steel materials


With buffer				
8 Vacuum inlet				
○: ZP3-T/Vertical ●: ZP3-Y/Lateral				
Type	Symbol	Size	Pad diameter	
Female thread	B3	M3 x 0.5	All sizes	
			○●	
One-touch fitting	02	Ø2	○●	
			○●	
Barb fitting	U2	For Ø2 polyurethane tubing	○●	
			○●	
	U4	For Ø4 soft tubing	○●	

* It is not necessary to select a connection thread.

* The pad, mounting nut, and fitting are shipped together but do not come assembled.

Dimensions/Models

Single unit $\varnothing 1.5$ to $\varnothing 3.5$

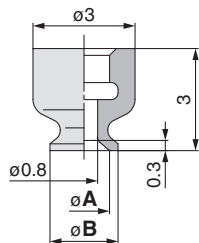

Construction p. 26

Mounting Bracket Assembly From p. 28


ZP3 - **015** U **N**

① ②

Model				A	B
①	②	③	④		
Pad dia.	Form	Material			
015	U	N	S U F GN GS	1.5	2
02		S		2	2.5
035		F		3.5	4

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

With adapter $\varnothing 1.5$ to $\varnothing 3.5$

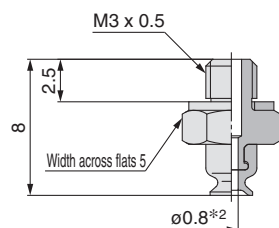

Construction p. 26

Adapter Assembly p. 28

ZP3 - T **015** U **N** - **A3**

① ② ③ ④

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)


④ Connection thread (Male thread)

A3	M3 x 0.5
----	----------

Model						
	①	Vacuum inlet direction	②	Form	③	④
	Adapter material		Pad dia.		Material	Connection thread
ZP3	— S	T	015 02 035	U	N S U F GN GS	A3

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

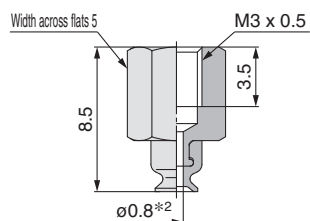

Construction p. 26

Adapter Assembly p. 28

ZP3 - T **015** U **N** - **B3**

① ② ③ ④

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Female thread)

B3	M3 x 0.5
----	----------


Model						
	①	Vacuum inlet direction	②	Form	③	④
	Adapter material		Pad dia.		Material	Connection thread
ZP3	— S	T	015 02 035	U	N S U F GN GS	B3

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber


*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models


With adapter $\varnothing 1.5$ to $\varnothing 3.5$

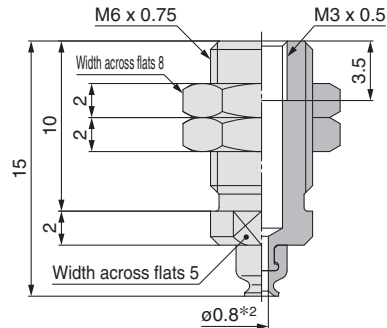

Vacuum inlet: One-touch fitting

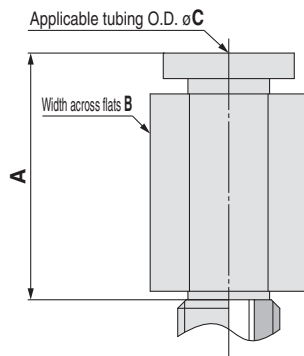

Vacuum inlet: Barb fitting

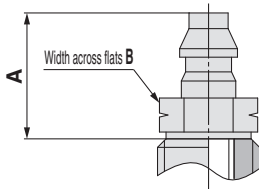

Construction p. 26

Adapter Assembly p. 29

ZP3 1 - T 015 U N - A6 - B3

1 Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

4 Connection thread (Male thread)

A6	M6 x 0.75
----	-----------

5 Vacuum inlet

B3	M3 x 0.5	Female thread
02	$\varnothing 2$	One-touch fitting*1
04	$\varnothing 4$	
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting*1
U4	For $\varnothing 4$ soft tubing	

*1 Not compatible with stainless steel materials

Model						
	1 Adapter material	Vacuum inlet direction	2 Pad dia.	Form	3 Material	4 Connection thread
ZP3	— S	T	015 02 035	U	N S U F GN GS	A6 B3

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	C	Fitting part min. hole size	Fitting part no.
	1 Adapter material	Vacuum inlet direction	2 Pad dia.	Form	3 Material	4 Connection thread					
ZP3	—	T	015 02 035	U	N S U F GN GS	A6					
							02	13	5.5	2	KQ2H02-M3G
							04	14.5	8	4	KQ2H04-M3G

Dimensions Per Vacuum Inlet: Barb Fitting

Model							A	B	Fitting part min. hole size	Fitting part no.	
	❶ Adapter material	Vacuum inlet direction	❷ Pad dia.	Form	❸ ^{#1} Material	❹ Connection thread					❺ Vacuum inlet
ZP3	—	T	015 02 035	U	N S U F GN GS	A6	U2	6.5	4.5	ø0.9	M-3AU-2
							U4	7.4	5	ø1.2	M-3AU-4-X83

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber


*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models


With adapter $\varnothing 1.5$ to $\varnothing 3.5$

ZP3 - Y 015 U N - B3 - B3


① ② ③ ④ ⑤

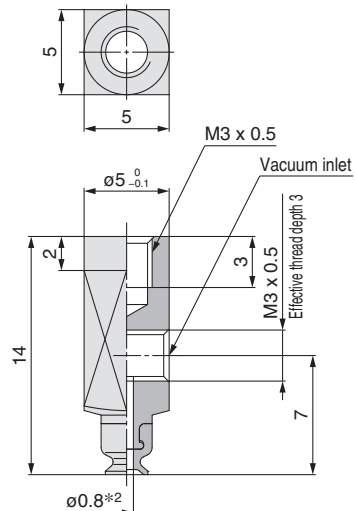

Vacuum inlet: One-touch fitting

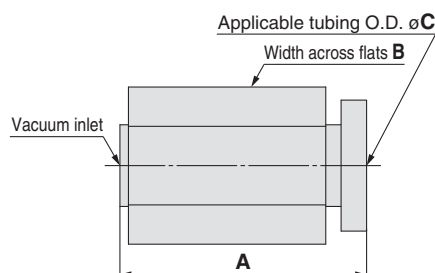

Vacuum inlet: Barb fitting

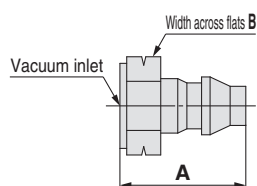

Construction p. 26

Adapter Assembly p. 28

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Female thread)

B3	M3 x 0.5
----	----------

⑤ Vacuum inlet

B3	M3 x 0.5	Female thread
02	$\varnothing 2$	One-touch fitting*1
04	$\varnothing 4$	
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting*1
U4	For $\varnothing 4$ soft tubing	

*1 Not compatible with stainless steel materials

Model						
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material *1	④ Connection thread
ZP3	— S	Y	015 02 035	U	N S U F GN GS	B3 B3

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	C	Fitting part min. hole size	Fitting part no.	
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ ^{※1} Material	④ Connection thread						⑤ Vacuum inlet
ZP3	—	Y	015 02 035	U	N S U F GN GS	B3	02	13	5.5	2	ø1.2	KQ2H02-M3G
							04	14.5	8	4		KQ2H04-M3G

Dimensions Per Vacuum Inlet: Barb Fitting


Model							A	B	Fitting part min. hole size	Fitting part no.	
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material	④ Connection thread	⑤ Vacuum inlet					
ZP3	—	Y	015 02 035	U	N S U F GN GS	B3	U2	6.5	4.5	ø0.9	M-3AU-2
							U4	7.4	5	ø1.2	M-3AU-4-X83

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber


*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models


With buffer $\varnothing 1.5$ to $\varnothing 3.5$

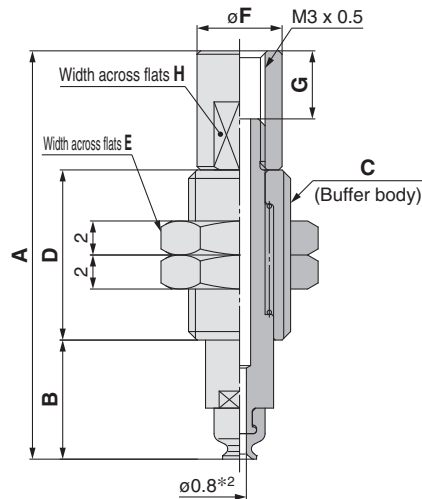

Vacuum inlet: One-touch fitting

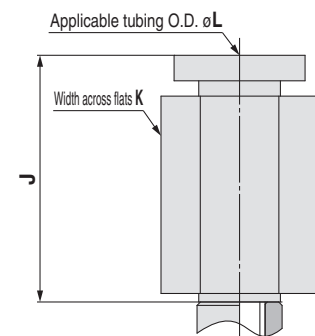

Vacuum inlet: Barb fitting

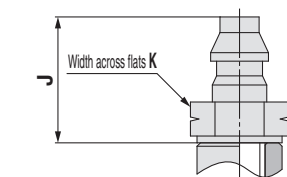

ZP3 - T **015** U **N** **J** **3** - **B3**

①

②

④

⑤ Vacuum inlet

Buffer specification ③

J	Rotating
K	Non-rotating

B3	M3 x 0.5	Female thread
02	$\varnothing 2$	One-touch fitting
04	$\varnothing 4$	One-touch fitting
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting
U4	For $\varnothing 4$ soft tubing	Barb fitting

Model							A	B	C	D	E	F	G	H	
Vacuum inlet direction	① Pad dia.	Form	② Material ^{*1}	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet									
ZP3	T	015 02 035	U	N S U F GN GS	J	3	B3	24	7	M6 x 0.75	10	8	5	4	4
						6		31	10		14				
					K	3		26.5	8	M8 x 0.75	11	10	7	3	6
						6		33	11		14.5				

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							J	K	L	Fitting part min. hole size	Fitting part no.	
	Vacuum inlet direction	① Pad dia.	Form	② ^{*1} Material	③ Buffer spec.	④ Buffer stroke						⑤ Vacuum inlet
ZP3	T	015 02 035	U	N S U F GN GS	J K	3 6	02	13	5.5	2	ø1.2	KQ2H02-M3G
							04	14.5	8	4		KQ2H04-M3G

Dimensions Per Vacuum Inlet: Barb Fitting

Model							J	K	Fitting part min. hole size	Fitting part no.	
	Vacuum inlet direction	① Pad dia.	Form	② ^{*1} Material	③ Buffer spec.	④ Buffer stroke					⑤ Vacuum inlet
ZP3	T	015 02 035	U	N S U F GN GS	J K	3 6	U2	6.5	4.5	ø0.9	M-3AU-2
							U4	7.4	5	ø1.2	M-3AU-4-X83


*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Construction	p. 27
Buffer Assembly	p. 30

Dimensions/Models

With buffer $\varnothing 1.5$ to $\varnothing 3.5$

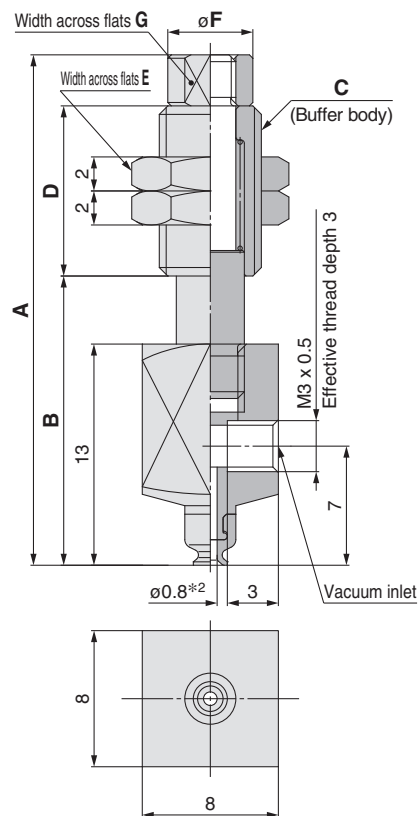

ZP3 - Y **015** U **N** **J** **3** - **B3**

1	2	3	4	5
015	U	N	J	3
02	035	U	N	J
04	04	U	N	J
06	06	U	N	J
08	08	U	N	J
10	10	U	N	J
12	12	U	N	J
14	14	U	N	J
16	16	U	N	J
18	18	U	N	J
20	20	U	N	J
22	22	U	N	J
24	24	U	N	J
26	26	U	N	J
28	28	U	N	J
30	30	U	N	J
32	32	U	N	J
34	34	U	N	J
36	36	U	N	J
38	38	U	N	J
40	40	U	N	J
42	42	U	N	J
44	44	U	N	J
46	46	U	N	J
48	48	U	N	J
50	50	U	N	J
52	52	U	N	J
54	54	U	N	J
56	56	U	N	J
58	58	U	N	J
60	60	U	N	J
62	62	U	N	J
64	64	U	N	J
66	66	U	N	J
68	68	U	N	J
70	70	U	N	J
72	72	U	N	J
74	74	U	N	J
76	76	U	N	J
78	78	U	N	J
80	80	U	N	J
82	82	U	N	J
84	84	U	N	J
86	86	U	N	J
88	88	U	N	J
90	90	U	N	J
92	92	U	N	J
94	94	U	N	J
96	96	U	N	J
98	98	U	N	J
100	100	U	N	J

5 Vacuum inlet

B3	M3 x 0.5	Female thread
02	$\varnothing 2$	One-touch fitting
04	$\varnothing 4$	One-touch fitting
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting
U4	For $\varnothing 4$ soft tubing	Barb fitting

Model							A	B	C	D	E	F	G	
Vacuum inlet direction	① Pad dia.	Form	② ^{#1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet								
ZP3	Y	015 02 035	U	N S U F	J	3	B3	30	17	M6 x 0.75	10	8	5	4
						6		37	20		14			
				GN GS	K	3		34	17	M8 x 0.75	11	10	7	6
						6		40.5	20		14.5			

Dimensions Per Vacuum Inlet: One-touch Fitting

Model						H	J	K	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	1 Pad dia.	2 Form	3 Material	4 Buffer spec.	5 Vacuum inlet					
ZP3	Y	015 02 035	U	N S U F GN GS	J K 3 6	02	13	5.5	$\varnothing 1.2$	KQ2H02-M3G
							14.5	8		KQ2H04-M3G


Dimensions Per Vacuum Inlet: Barb Fitting

Model							H	J	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	① Pad dia.	Form	② Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet				
ZP3	Y	015 02 035	U	N S U F GN GS	J K 3 6	U2	6.5	4.5	ø0.9	M-3AU-2
						U4	7.4	5	ø1.2	M-3AU-4-X83


*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Vacuum inlet: One-touch fitting

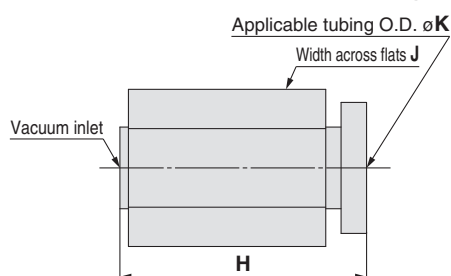

Vacuum inlet: Barb fitting

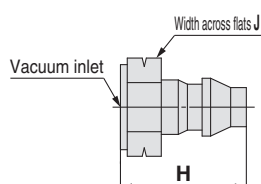

Construction	p. 27
Buffer Assembly	p. 30



Compact Type

Flat Type with Groove

ZP3 Series

Pad diameter: Ø4, Ø6, Ø8, Ø10, Ø13, Ø16



How to Order

Pad unit ZP3 - 04 UM N

* Pad unit's sales unit: 10 pcs. (Except material HS)

With adapter ZP3 - T 04 UM N - A5

With buffer ZP3 - T 04 UM N J 3 - B5

Dimensions/Models Construction Mounting Bracket Assembly

..... p. 9 p. 26 From p. 28

..... From p. 9 p. 26 From p. 28

..... From p. 12 p. 27 p. 30

① ② ③ ④ ⑤ ⑥ ⑦ ⑧

• Flat type with groove

1 Adapter material

—	Brass
S*1	Stainless steel (Stainless steel 304)

*1 Only applicable to the pad with adapter

2 Vacuum inlet direction

—	Pad unit
T	Vertical
Y	Lateral

3 Pad diameter

04	ø4
06	ø6
08	ø8
10	ø10
13	ø13
16	ø16

④ Material

N	NBR
S	Silicone rubber*1*2
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber
HS	Semiconductive silicone rubber
HHN	Semiconductive HNBR

5 Buffer specification

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

6 Buffer stroke

Stroke [mm]	Buffer specification		
	J	JB	K
3	●	—	●
6	●	—	●
10	●	—	●
15	—	●	●
20	—	●	●

*1 Uses a material compliant with a dissolution test of the FDA (U.S. Food and Drug Administration) regulation 21CFR§177.2600 for "Rubber articles intended for repeated use."

*2 Uses a material compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D3) (Partial revision: Japanese Ministry of Health, Labour, and Welfare Notification No. 595, 2012) in Section 3 "Apparatus and Containers/Packaging" of the Japan Food Sanitation Act, Article 1 8 "Specifications and Standards for Food and Food Additives, etc." (Japanese Ministry of Health and Welfare Notification No. 370, 1959)

With adapter

7 Connection thread/ 8 Vacuum inlet ○: ZP3□-T/Vertical ●: ZP3□-Y/Lateral

⑦ Connection thread			⑧ Vacuum inlet			Pad diameter [mm]	
Type	Symbol	Size	Type	Symbol	Size	ø4 to ø8	ø10 to ø16
Male thread	A5	M5 x 0.8	—	—	Use the connection thread.	○	○
	A10	M10 x 1	Female thread	B5	M5 x 0.8	○	—
			One-touch fitting	02*3	ø2	○	—
				04	ø4	○	—
			Barb fitting*3	U2 U4	For ø2 polyurethane tubing*1 For ø4 soft tubing*2	○	—
	A12	M12 x 1	Female thread	B5	M5 x 0.8	—	○
			One-touch fitting	02*3	ø2	—	○
				04	ø4	—	○
				06	ø6	—	○
			Barb fitting*3	U2 U4 U6	For ø2 polyurethane tubing*1 For ø4 soft tubing*2 For ø6 soft tubing*2	—	○
						—	○
	Female thread	B5	M5 x 0.8	—	—	Use the connection thread.	○
Female thread				B5	M5 x 0.8	●	●
One-touch fitting*3				02	ø2	●	●
				04	ø4	●	●
				06	ø6	—	●
Barb fitting*3				U2	For ø2 polyurethane tubing*1	●	●
				U4	For ø4 soft tubing*2	●	●
				U6	For ø6 soft tubing*2	—	●

With buffer

8 Vacuum inlet ○: ZP3-T/Vertical ●: ZP3-Y/Lateral

Type	Symbol	Size	Pad diameter [mm]	
			ø4 to ø8	ø10 to ø16
Female thread	B5	M5 x 0.8		
One-touch fitting	02	ø2		
	04	ø4		
	06	ø6	—	
Barb fitting	U2	For ø2 polyurethane tubing*1		
	U4	For ø4 soft tubing*2		
	U6	For ø6 soft tubing*2	—	

*1 Polyurethane tube piping

*2 Soft nylon/Polyurethane tube piping


*3 Not compatible with stainless steel materials

* It is not necessary to select a connection thread.

* The pad, mounting nut, and fitting are shipped together but do not come assembled.

Dimensions/Models

Single unit $\varnothing 4$ to $\varnothing 16$

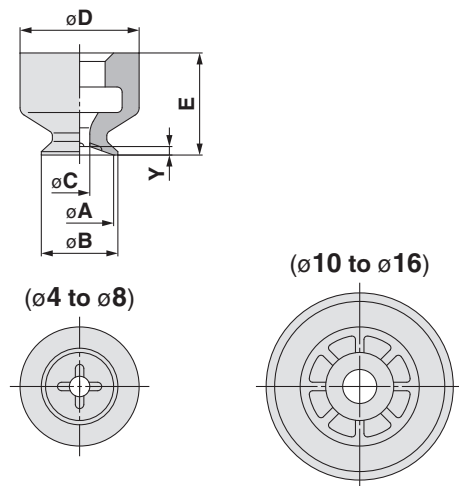

ZP3 - **04** UM **N**

① ②


Model				A	B	C	D	E	Y		
① Pad dia.	Form	② Material ^①									
ZP3	04	UM	N	4	4.5	1.2	7	6	0.5		
	06		S	6	6.5	2			9	7	0.8
	08		U	8	8.5						1
	10		F	10	11		1.2				
	13		GN	13	14						
	16		GS	16	17						

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR

Construction p. 26

Mounting Bracket Assembly From p. 28

With adapter $\varnothing 4$ to $\varnothing 16$

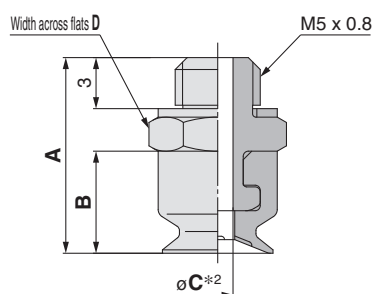

Construction p. 26

Adapter Assembly p. 28

ZP3 - T **04** UM **N** - **A5**

① ② ③ ④

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)


④ Connection thread (Male thread)

A5	M5 x 0.8
----	----------

Model							A	B	C*2	D
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material*1	④ Connection thread					
ZP3	— S	T	04	N S U F G N G S H S H N	A5	11.5	6	1.2	7	
			06 08					1.8		
			10 13 16			12.5	7		10	

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR
*2 Indicates the minimum hole size of the adapter or vacuum pad

With adapter $\varnothing 4$ to $\varnothing 16$

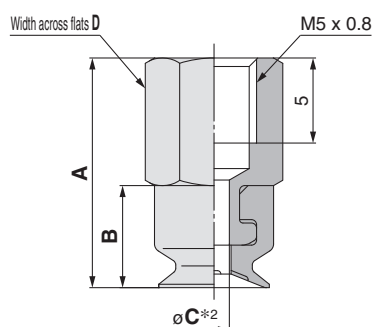

Construction p. 26

Adapter Assembly p. 28

ZP3 - T **04** UM **N** - **B5**

① ② ③ ④

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Female thread)

B5	M5 x 0.8
----	----------


Model						A	B	C*2	D
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material*1	④ Connection thread				
ZP3	— S	T	04	N S U F G N S H S H H	B5	13.5	6	1.2	7
			06 08					1.8	
			10 13 16			14.5	7		10

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR
*2 Indicates the minimum hole size of the adapter or vacuum pad


Dimensions/Models

With adapter $\varnothing 4$ to $\varnothing 16$


Pad diameter: $\varnothing 4$ to $\varnothing 6$

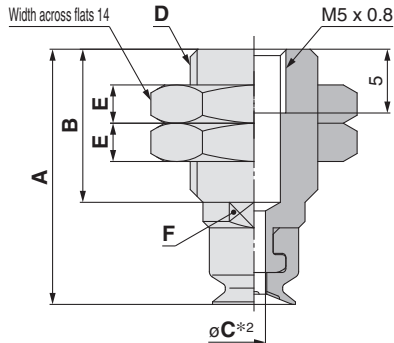


Pad diameter: $\varnothing 10$ to $\varnothing 16$

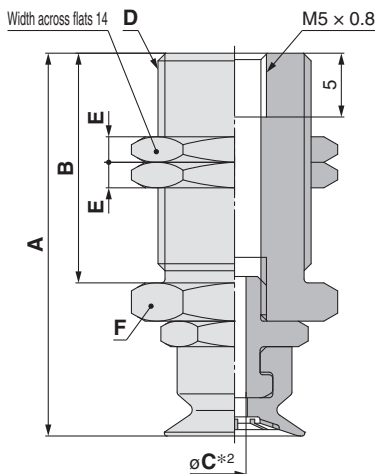


Vacuum inlet: One-touch fitting ($\varnothing 2$)

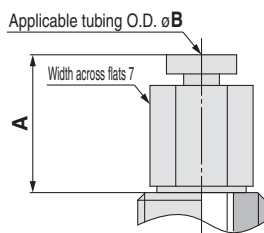

 Vacuum inlet: Built-in One-touch fitting ($\varnothing 4$, $\varnothing 6$)



Vacuum inlet: Barb fitting

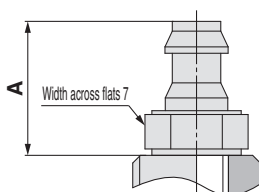

ZP3 1 - T 04 UM N - A10 - B5

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Male thread)

A10	M10 x 1
A12	M12 x 1

⑤ Vacuum inlet

B5	M5 x 0.8	Female thread
02	$\varnothing 2$	One-touch fitting
04	$\varnothing 4$	
06	$\varnothing 6$	
U2*1	For $\varnothing 2$ polyurethane tubing	Barb fitting
U4*1	For $\varnothing 4$ soft tubing	
U6*1	For $\varnothing 6$ soft tubing	

*1 Not compatible with stainless steel materials

Model							A	B	C*2	D	E	F
①	Vacuum inlet direction	②	Form	③	④	⑤						
ZP3	S	T	UM	N S F GN GS HS HHN	A10	B5	20	12	1.2	M10 x 1	3	Width across flats 7
							30	18	1.8	M12 x 1	2	Width across flats 14

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	Fitting part min. hole size	Fitting part no.
①	Vacuum inlet direction	②	Form	③	④	⑤				
ZP3	S	T	UM	N S F GN GS HS HHN	A10	02*3	10.8	2	$\varnothing 1.4$	KQ2H02-M5N
						04	3	4	$\varnothing 1.8$	
						02	10.8	2	$\varnothing 1.4$	KQ2H02-M5N
						04	3	4	$\varnothing 1.8$	
						06	3.2	6		

*3 Not compatible with stainless steel materials

Dimensions Per Vacuum Inlet: Barb Fitting

Model							A	Fitting part min. hole size	Fitting part no.
①	Vacuum inlet direction	②	Form	③	④	⑤			
ZP3	—	T	UM	N S F GN GS HS HHN	A10	U2	6.5	$\varnothing 0.9$	M-5AU-2
						U4	8.5	$\varnothing 1.8$	M-5AU-4
						U2	6.5	$\varnothing 0.9$	M-5AU-2
					A12	U4	8.5	$\varnothing 1.8$	M-5AU-4
						U2	6.5	$\varnothing 0.9$	M-5AU-2
						U6	10.5	$\varnothing 2.5$	M-5AU-6

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR
*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models

With adapter $\varnothing 4$ to $\varnothing 16$

ZP3 - Y 04 UM N - B5 - B5

①

②

③

④

⑤

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)


④ Connection thread (Female thread)

B5	M5 x 0.8
----	----------

⑤ Vacuum inlet


B5	M5 x 0.8	Female thread
02	$\varnothing 2$	One-touch fitting*1
04	$\varnothing 4$	
06	$\varnothing 6$	
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting*1
U4	For $\varnothing 4$ soft tubing	
U6	For $\varnothing 6$ soft tubing	

*1 Not compatible with stainless steel materials

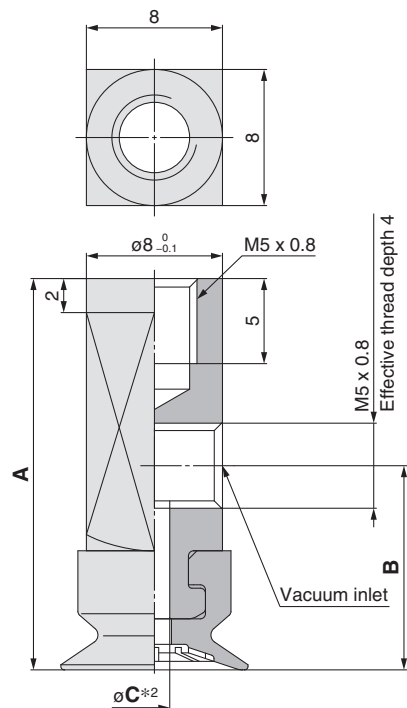

Model							A	B	C*2
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material*1	④ Connection thread	⑤ Vacuum inlet			
ZP3	—	Y	UM	N S U F GN GS HS HHN	B5	B5	22	11	1.2
							23	12	2


Vacuum inlet: One-touch fitting

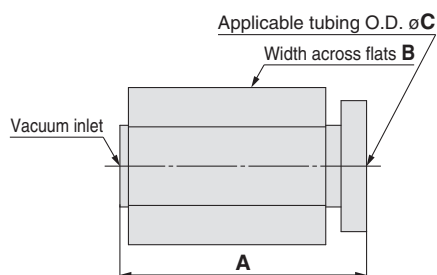

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	C	Fitting part min. hole size	Fitting part no.
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material*1	④ Connection thread	⑤ Vacuum inlet					
ZP3	—	Y	UM	N S U F GN GS HS HHN	B5	02	10.8	7	2	$\varnothing 1.4$	KQ2H02-M5N
						04	14.7	8	4	$\varnothing 2.5$	KQ2H04-M5N
						02	10.8	7	2	$\varnothing 1.4$	KQ2H02-M5N
						04	14.7	8	4	$\varnothing 2.5$	KQ2H04-M5N
						06	14.7	10	6	$\varnothing 2.5$	KQ2H06-M5N
						06					

Vacuum inlet: Barb fitting

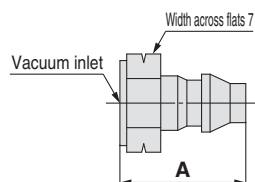

Dimensions Per Vacuum Inlet: Barb Fitting

Model							A	Fitting part min. hole size	Fitting part no.
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material*1	④ Connection thread	⑤ Vacuum inlet			
ZP3	—	Y	UM	N S U F GN GS HS HHN	B5	U2	6.5	$\varnothing 0.9$	M-5AU-2
						U4	8.5	$\varnothing 1.8$	M-5AU-4
						U2	6.5	$\varnothing 0.9$	M-5AU-2
						U4	8.5	$\varnothing 1.8$	M-5AU-4
						U6	10.5	$\varnothing 2.5$	M-5AU-6
						U6			


*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR
*2 Indicates the minimum hole size of the adapter or vacuum pad

Construction p. 26


Adapter Assembly p. 28

Dimensions/Models


With buffer Ø4 to Ø16

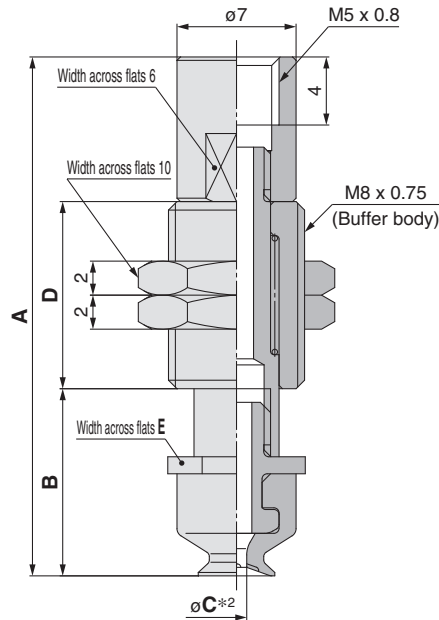

Vacuum inlet: One-touch fitting

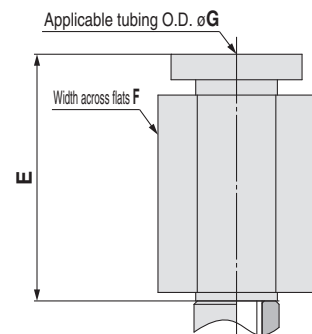

Vacuum inlet: Barb fitting

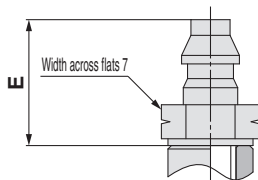

Construction	p. 27
Buffer Assembly	p. 30

ZP3 - T 04 UM N J 3 - B5

1

2

4

5 Vacuum inlet

Buffer specification 3

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

B5	M5 x 0.8	Female thread
02	ø2	One-touch fitting
04	ø4	
06	ø6	
U2	For ø2 polyurethane tubing	Barb fitting
U4	For ø4 soft tubing	
U6	For ø6 soft tubing	

Model							A	B	C*2	D	E	
Vacuum inlet direction	① Pad dia.	Form	② #1 Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet						
ZP3	T	UM	N S U F GN GS HS HHN	J K	3	B5	30.5	11	1.2	11	7	
					6		37	14		14.5		
					10		47	18		20.5		
					3		30.5	11	11			
					6		37	14	14.5			
					10		47	18	20.5			
				JB K	15		55	36.5	1.2	10		
					20		62.5	44				
					15		55	36.5				1.8
					20		62.5	44				
				J K	3		31.5	12	1.8	11		10
					6		38	15		14.5		
					10		48	19		20.5		
					JB K		15	56		37.5		
				20	63.5		45					

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							E	F	G	Fitting part min. hole size	Fitting part no.	
Vacuum inlet direction	① Pad dia.	Form	② ^{s1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet						
ZP3	T	04 06 08	UM	N S U F G N G S H H N	J B K	3	02	10.8	7	2	ø1.4	KQ2H02-M5N
		6				04	14.7	8	4	ø2.5	KQ2H04-M5N	
		10				02	10.8	7	2	ø1.4	KQ2H02-M5N	
		15 20				06	14.7	8	4	ø2.5	KQ2H04-M5N KQ2H06-M5N	
16												



Dimensions Per Vacuum Inlet: Barb Fitting

Model								E	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	① Pad dia.	Form	② ^{※1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet				
ZP3	T	04	UM	N S U F GN GS HS HHN	J JB K	3	U2	6.5	ø0.9	M-5AU-2
		06				6	U4	8.5	ø1.8	M-5AU-4
		08				10	U2	6.5	ø0.9	M-5AU-2
		10				15	U4	8.5	ø1.8	M-5AU-4
		13 16				20	U6	10.5	ø2.5	M-5AU-6


*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR
*2 Indicates the minimum hole size of the adapter or vacuum pad

With buffer Ø4 to Ø16


ZP3 - Y 04 UM N J 3 - B5

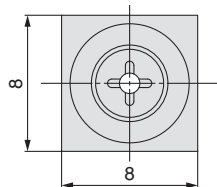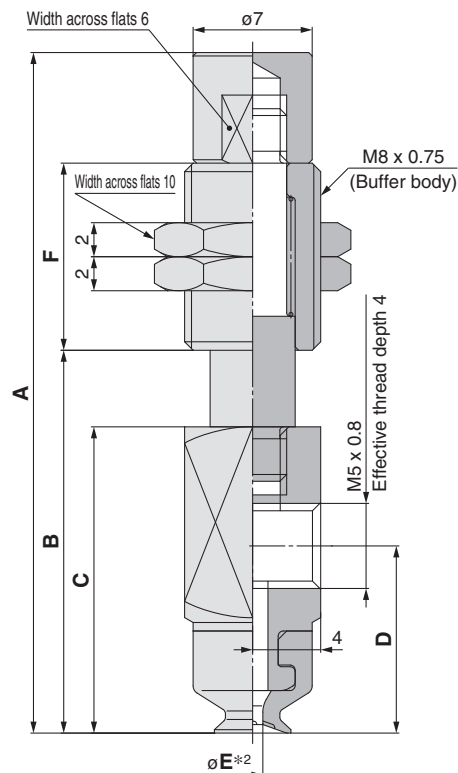

Vacuum inlet: One-touch fitting

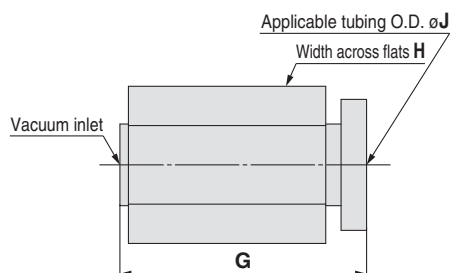

Vacuum inlet: Barb fitting

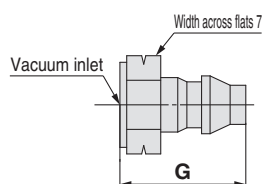

Buffer specification ③	
J	Rotating
JB	Rotating, With bushing
K	Non-rotating

5 Vacuum inlet		
B5	M5 x 0.8	Female thread
02	ø2	One-touch fitting
04	ø4	
06	ø6	
U2	For ø2 polyurethane tubing	
U4	For ø4 soft tubing	
U6	For ø6 soft tubing	

Model							A	B	C	D	E*2	F
Vacuum inlet direction	① Pad dia.	Form	② *1 Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet						
ZP3	Y	04	UM	N S U F GN GS HS HHN	J K	3	40	22.5	18	11	1.2	11
						6	46	25				14.5
		10				56	29	20.5				
		3				40	22.5	11				
		6				46	25	14.5				
		10				56	29	20.5				
		04 06 08			JB K	15	59	42.5	1.2	10		
						20	66.5	50				
						15	59	42.5				
						20	66.5	50				
		10 13 16			J K	3	41	23.5	19	12	1.8	11
						6	47	26				14.5
						10	57	30				20.5
					JB K	15	60	43.5				10
						20	67.5	57				

Dimensions Per Vacuum Inlet: One-touch Fitting

		Model						G	H	J	Fitting part min. hole size	Fitting part no.
	Vacuum inlet direction	① Pad dia.	Form	② ^{*1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet					
ZP3	Y	04 06 08 10 13 16	UM	N S U F G N G S H H N	J B K	3 6 10 15 20	02	10.8	7	2	ø1.4	KQ2H02-M5N
							04	14.7	8	4	ø2.5	KQ2H04-M5N
							02	10.8	7	2	ø1.4	KQ2H02-M5N
							04	14.7	8	4	ø2.5	KQ2H04-M5N
							06		10	6		KQ2H06-M5N

Dimensions Per Vacuum Inlet: Barb Fitting

Model							G	Fitting part min. hole size	Fitting part no.	
Vacuum inlet direction	① Pad dia.	Form	② ^{s1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet				
ZP3	Y	04	UM	N S U F GN GS HS HHN	J B K	3	U2	6.5	ø0.9	M-5AU-2
		06				6	U4	8.5	ø1.8	M-5AU-4
		08				10	U2	6.5	ø0.9	M-5AU-2
		13				15	U4	8.5	ø1.8	M-5AU-4
		16				20	U6	10.5	ø2.5	M-5AU-6

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber, HS: Semiconductive silicone rubber, HHN: Semiconductive HNBR
*2 Indicates the minimum hole size of the adapter or vacuum pad



ZP3 Series

Three types of stainless steel fittings are shown: a ball valve with a white handle, a plug, and a tee. All are made of polished stainless steel.

Pad unit ZP3 - 04 B N

With adapter ZP3 - T 04 B N - A5 -

With buffer ZP3 - T 04 B N J 3 - B5

1 2 3 4 5 6 7 8

• Bellows type

p. 15	p. 26	From p. 28
-------	-------	------------


From p. 15	p. 26	From p. 28
------------	-------	------------

From p. 18	p. 27	p. 30
------------	-------	-------

Dimensions/Models

Single unit **ø4 to ø8**

ZP3 - 04 B N
① ②

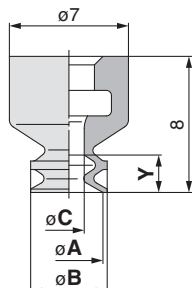

Construction p. 26


Mounting Bracket Assembly From p. 28

Model				A	B	C	Y
①	Pad dia.	Form	② Material				
ZP3	04	B	N S U F GN GS	4	4.5	1.8	2.2
	06			6	7	2	3
	08			8	9		

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

With adapter **ø4 to ø8**

ZP3 - T 04 B N - A5
① ② ③ ④

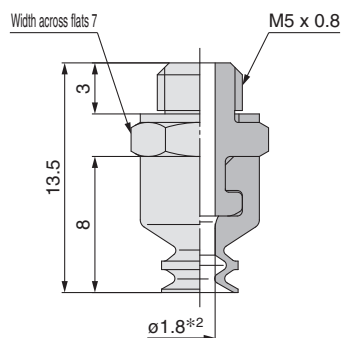

Construction p. 26

Adapter Assembly p. 28

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Male thread)


A5	M5 x 0.8
----	----------

Model					
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material
ZP3	— S	T	04 06 08	B	N S U F GN GS

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

ZP3 - T 04 B N - B5
① ② ③ ④

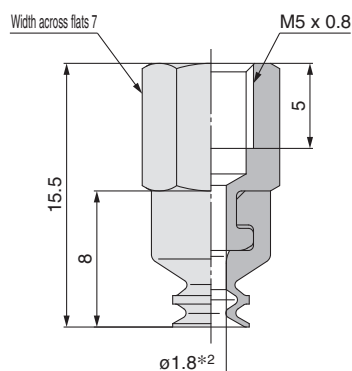

Construction p. 26

Adapter Assembly p. 28

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Female thread)

B5	M5 x 0.8
----	----------


Model					
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material
ZP3	— S	T	04 06 08	B	N S U F GN GS

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models

With adapter $\varnothing 4$ to $\varnothing 8$

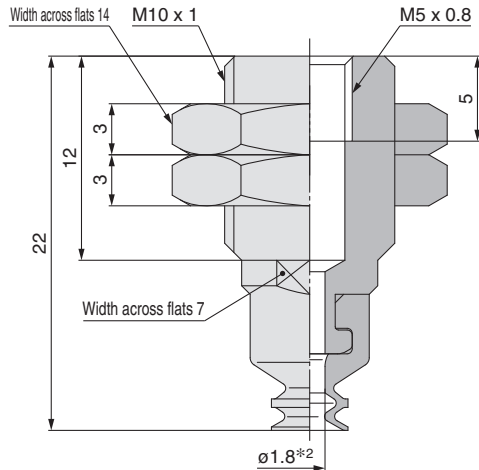

ZP3 - T 04 B N - A10 - B5
1 2 3 4 5

1 Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

4 Connection thread (Female thread)


A10	M10 x 1
-----	---------

5 Vacuum inlet


B5	M5 x 0.8	Female thread
02*1	$\varnothing 2$	One-touch fitting
04	$\varnothing 4$	Barb fitting
U2*1	For $\varnothing 2$ polyurethane tubing	Barb fitting
U4*1	For $\varnothing 4$ soft tubing	Barb fitting

*1 Not compatible with stainless steel materials


Vacuum inlet: One-touch fitting ($\varnothing 2$)

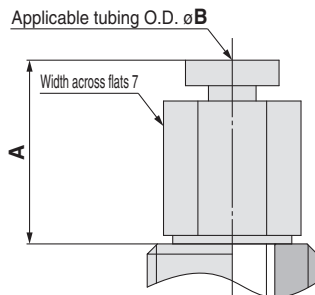

Vacuum inlet: Built-in One-touch fitting ($\varnothing 4$)

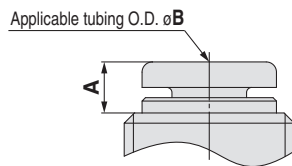

Vacuum inlet: Barb fitting

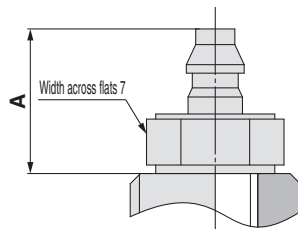

Model						
	1 Adapter material	Vacuum inlet direction	2 Pad dia.	Form	3*1 Material	4 Connection thread
ZP3	— S	T	04 06 08	B	N S U F GN GS	A10 B5

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	Fitting part min. hole size	Fitting part no.	
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ ⁺¹ Material	④ Concection thread					⑤ Vacuum inlet
ZP3	— S	T	04 06 08	B	N S U F GN GS	A10	02*3	10.8	2	ø1.4	KQ2H02-M5N
							04	3	4	ø1.8	

*3 Not compatible with stainless steel materials

Dimensions Per Vacuum Inlet: Barb Fitting

Model							A	Fitting part min. hole size	Fitting part no.	
	❶ Adapter material	Vacuum inlet direction	❷ Pad dia.	Form	❸ ^{*1} Material	❹ Connection thread				❺ Vacuum inlet
ZP3	—	T	04 06 08	B	N S U F GN GS	A10	U2	6.5	ø0.9	M-5AU-2
							U4	8.5	ø1.8	M-5AU-4

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Construction p. 26

Adapter Assembly p. 29

Dimensions/Models

With adapter $\varnothing 4$ to $\varnothing 8$

ZP3 - Y 04 B N - B5 - B5

①

②

③

④

⑤


④ Connection thread (Female thread)

B5	M5 x 0.8
-----------	----------


⑤ Vacuum inlet

B5	M5 x 0.8	Female thread
02	$\varnothing 2$	One-touch fitting*1
04	$\varnothing 4$	One-touch fitting*1
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting*1
U4	For $\varnothing 4$ soft tubing	Barb fitting*1


*1 Not compatible with stainless steel materials

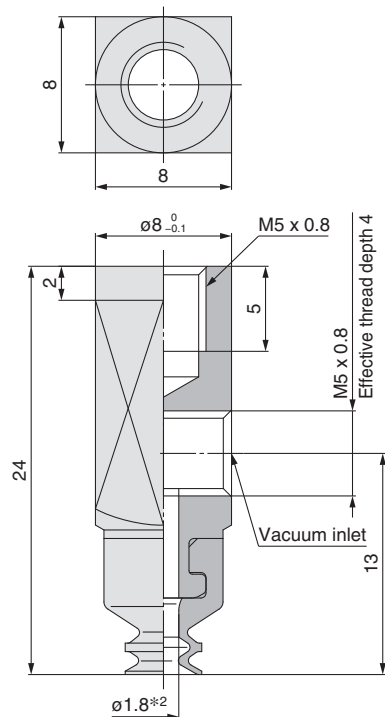

Vacuum inlet: One-touch fitting

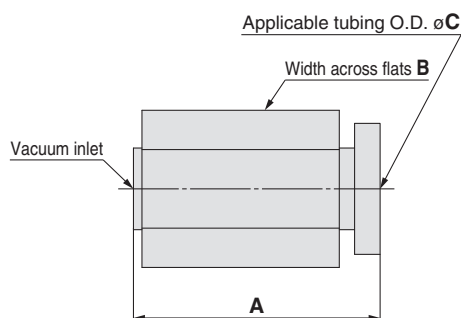

Vacuum inlet: Barb fitting

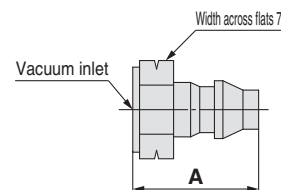

Construction p. 26

Adapter Assembly p. 28

Model						
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material *1	④ Connection thread
ZP3	— S	Y	04 06 08	B	N S U F GN GS	B5

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	C	Fitting part min. hole size	Fitting part no.	
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material *1	④ Connection thread						⑤ Vacuum inlet
ZP3	—	Y	04 06 08	B	N S U F GN GS	B5	02	10.8	7	2	ø1.4	KQ2H02-M5N
							04	14.7	8	4	ø2.5	KQ2H04-M5N

Dimensions Per Vacuum Inlet: Barb Fitting


Model							A	Fitting part min. hole size	Fitting part no.	
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material *1	④ Connection thread				⑤ Vacuum inlet
ZP3	—	Y	04 06 08	B	N S U F GN GS	B5	U2	6.5	ø0.9	M-5AU-2
							U4	8.5	ø1.8	M-5AU-4

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber


*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models


With buffer $\varnothing 4$ to $\varnothing 8$

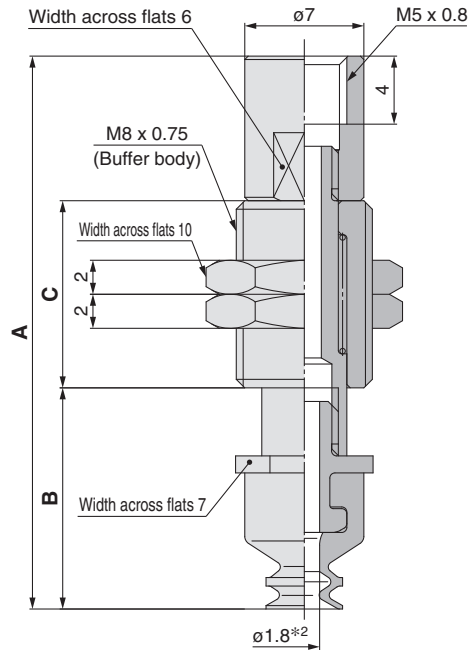

Vacuum inlet: One-touch fitting

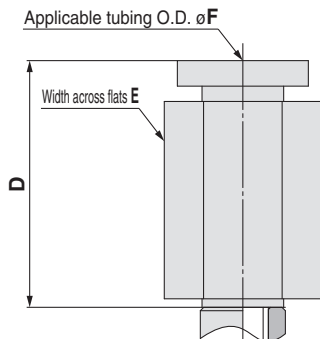

Vacuum inlet: Barb fitting

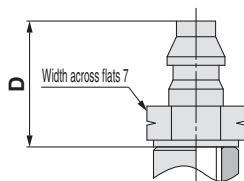

ZP3 - T 04 B N J 3 - B5

1

2

3

5 Vacuum inlet

Buffer specification 3

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

B5	M5 x 0.8	Female thread
02	$\varnothing 2$	One-touch fitting
04	$\varnothing 4$	Barb fitting
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting
U4	For $\varnothing 4$ soft tubing	Barb fitting

Model							A	B	C
Vacuum inlet direction	1 Pad dia.	Form	2 ^{*1} Material	3 Buffer spec.	4 Buffer stroke	5 Vacuum inlet			
ZP3	T	04 06 08	B	N S U F GN GS	J	3	32.5	13	11
					K	6	39	16	14.5
						10	49	20	20.5
					JB	15	57	38.5	
					K	20	64.5	46	10

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							D	E	F	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	1 Pad dia.	Form	2 ^{*1} Material	3 Buffer spec.	4 Buffer stroke	5 Vacuum inlet					
ZP3	T	04 06 08	B	N S U F GN GS	J JB K	3	10.8	7	2	$\varnothing 1.4$	KQ2H02-M5N
						02	14.7	8	4	$\varnothing 2.5$	KQ2H04-M5N

Dimensions Per Vacuum Inlet: Barb Fitting

Model							D	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	1 Pad dia.	Form	2 ^{*1} Material	3 Buffer spec.	4 Buffer stroke	5 Vacuum inlet			
ZP3	T	04 06 08	B	N S U F GN GS	J JB K	U2	6.5	$\varnothing 0.9$	M-5AU-2
						U4	8.5	$\varnothing 1.8$	M-5AU-4

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber



*2 Indicates the minimum hole size of the adapter or vacuum pad

Construction p. 27


Buffer Assembly p. 30

Dimensions/Models


With buffer ø4 to ø8

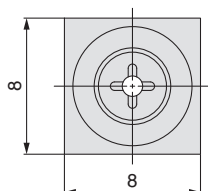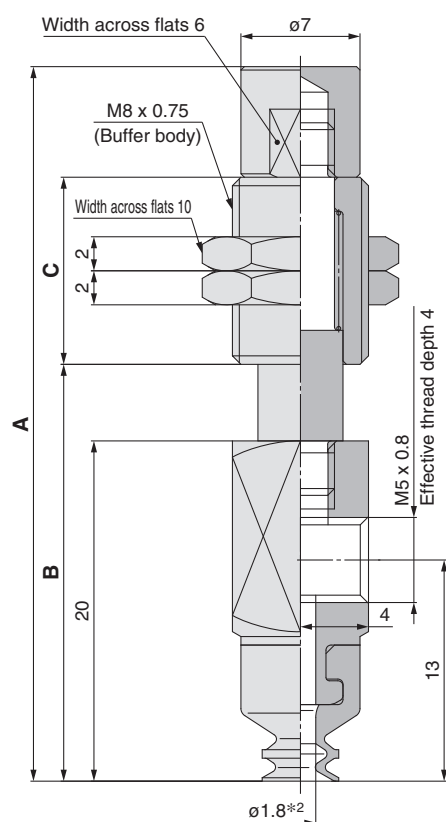

Vacuum inlet: One-touch fitting

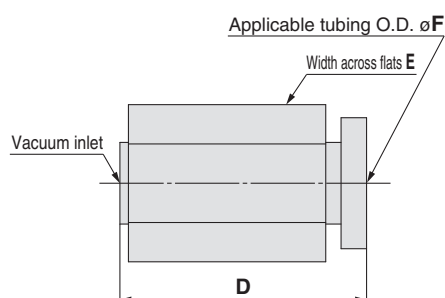

Vacuum inlet: Barb fitting

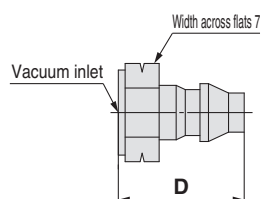

ZP3 - Y 04 B N J 3 - B5

1

2

4

5 Vacuum inlet

Buffer specification 3

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

B5	M5 x 0.8	Female thread
02	ø2	One-touch fitting
04	ø4	Barb fitting
U2	For ø2 polyurethane tubing	
U4	For ø4 soft tubing	

Model							A	B	C
Vacuum inlet direction	1 Pad dia.	Form	2 ^{*1} Material	3 Buffer spec.	4 Buffer stroke	5 Vacuum inlet			
ZP3	Y	04 06 08	B	N S U F GN GS	J	3	42	24.5	11
					K	6	48	27	14.5
						10	58	31	20.5
					JB	15	61	44.5	
					K	20	68.5	52	10
						B5			

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							D	E	F	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	1 Pad dia.	Form	2 ^{*1} Material	3 Buffer spec.	4 Buffer stroke	5 Vacuum inlet					
ZP3	Y	04 06 08	B	N S U F GN GS	J JB K	3	10.8	7	2	ø1.4	KQ2H02-M5N
						6					
						10					
						15					
						20	14.7	8	4	ø2.5	KQ2H04-M5N
						04					

Dimensions Per Vacuum Inlet: Barb Fitting

Model							D	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	1 Pad dia.	Form	2 ^{*1} Material	3 Buffer spec.	4 Buffer stroke	5 Vacuum inlet			
ZP3	Y	04 06 08	B	N S U F GN GS	J JB K	3	6.5	ø0.9	M-5AU-2
						6			
						10			
						15			
						20	8.5	ø1.8	M-5AU-4
						U4			

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Construction p. 27

Buffer Assembly p. 30

Compact Type

Bellows Type with Ribs

ZP3 Series

Pad diameter: $\varnothing 10$, $\varnothing 13$, $\varnothing 16$



How to Order

Pad unit	ZP3	-	10	B	N																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																										
-----------------	------------	---	-----------	----------	----------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

1 Adapter material

—	Brass
S*1	Stainless steel (Stainless steel 304)

*1 Only applicable to the pad with adapter

2 Vacuum inlet direction

—	Pad unit
T	Vertical
Y	Lateral

3 Pad diameter

10	$\varnothing 10$
13	$\varnothing 13$
16	$\varnothing 16$

4 Material

N	NBR
S	Silicone rubber*1 *2
U	Urethane rubber
F	FKM
GN	Conductive NBR
GS	Conductive silicone rubber

*1 Compliant with the FDA (USA Food and Drug Administration) regulation 21CFR§177.2600 for "Rubber articles intended for repeated use"

*2 Compliant with the standards for "Rubber apparatus (excluding baby drinking apparatus) and containers/packaging" (D3) (Partial revision: Ministry of Health, Labour, and Welfare Notification No. 595, 2012) in Section 3 "Apparatus and Containers/Packaging" of the Japan Food Sanitation Act, Article 18 "Specifications and Standards for Food and Food Additives, etc." (Ministry of Health and Welfare Notification No. 370, 1959)

5 Buffer specification

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

6 Buffer stroke

Stroke [mm]	Buffer specification		
	J	JB	K
3	●	—	●
6	●	—	●
10	●	—	●
15	—	●	●
20	—	●	●

With adapter						
7 Connection thread			8 Vacuum inlet			Pad diameter
Type	Symbol	Size	Type	Symbol	Size	All sizes
Male thread	A5	M5 x 0.8	—	—	Use the connection thread.	○
			Female thread	B5	M5 x 0.8	○
			One-touch fitting	02*3	$\varnothing 2$	○
				04	$\varnothing 4$	○
	A12	M12 x 1	Barb fitting*3	06	$\varnothing 6$	○
				U2	For $\varnothing 2$ polyurethane tubing	○
				U4	For $\varnothing 4$ soft tubing	○
				U6	For $\varnothing 6$ soft tubing	○
Female thread	B5	M5 x 0.8	—	—	Use the connection thread.	○
			Female thread	B5	M5 x 0.8	●
			One-touch fitting*3	02	$\varnothing 2$	●
				04	$\varnothing 4$	●
				06	$\varnothing 6$	●
			Barb fitting*3	U2	For $\varnothing 2$ polyurethane tubing*1	●
				U4	For $\varnothing 4$ soft tubing*2	●
				U6	For $\varnothing 6$ soft tubing*2	●

*1 Polyurethane tube piping

*2 Soft nylon/Polyurethane tube piping

*3 Not compatible with stainless steel materials


With buffer			
8 Vacuum inlet ○: ZP3-T/Vertical ●: ZP3-Y/Lateral			
Type	Symbol	Size	Pad diameter
Female thread	B5	M5 x 0.8	○●
One-touch fitting	02	$\varnothing 2$	○●
	04	$\varnothing 4$	○●
	06	$\varnothing 6$	○●
Barb fitting	U2	For $\varnothing 2$ polyurethane tubing	○●
	U4	For $\varnothing 4$ soft tubing	○●
	U6	For $\varnothing 6$ soft tubing	○●

* It is not necessary to select a connection thread.

* The pad, mounting nut, and fitting are shipped together but do not come assembled.

Dimensions/Models

Single unit $\phi 10$ to $\phi 16$

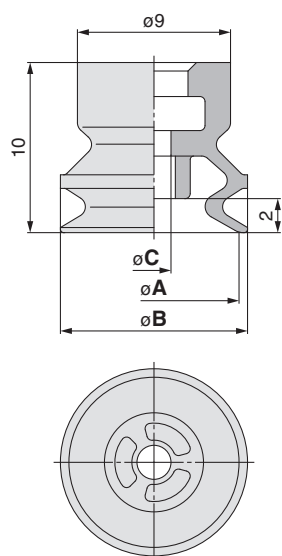

ZP3 - 10 B N
① ②


Model				A	B	C
①	②	③	④			
Pad dia.	Form	Material				
10	B	N	S U F GN GS	10	11	2
13		S		13	14	3
16		U		16	17	

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

Construction p. 26


Mounting Bracket Assembly From p. 28

With adapter $\phi 10$ to $\phi 16$

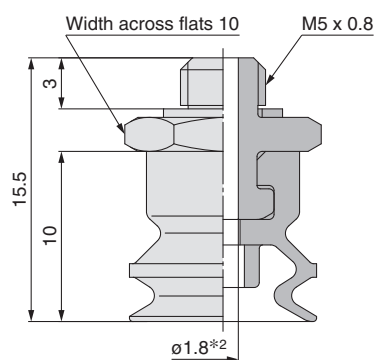

Construction p. 26

Adapter Assembly p. 28

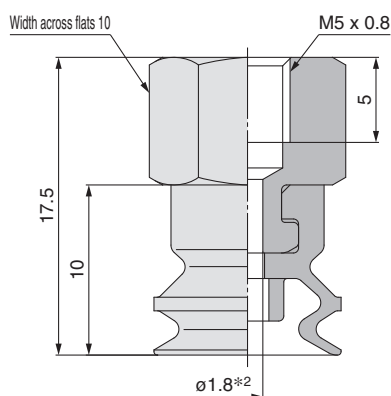

Construction p. 26

Adapter Assembly p. 28

ZP3 - T 10 B N - A5
① ② ③ ④

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Male thread)

A5	M5 x 0.8
----	----------

Model					
①	②	③	④	⑤	⑥
Adapter material	Vacuum inlet direction	Pad dia.	Form	Material	Connection thread
—	T	10 13 16	B	N S U F GN GS	A5

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

ZP3 - T 10 B N - B5
① ② ③ ④

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

④ Connection thread (Female thread)

B5	M5 x 0.8
----	----------


Model					
①	②	③	④	⑤	⑥
Adapter material	Vacuum inlet direction	Pad dia.	Form	Material	Connection thread
—	T	10 13 16	B	N S U F GN GS	B5

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Dimensions/Models

With adapter $\varnothing 10$ to $\varnothing 16$

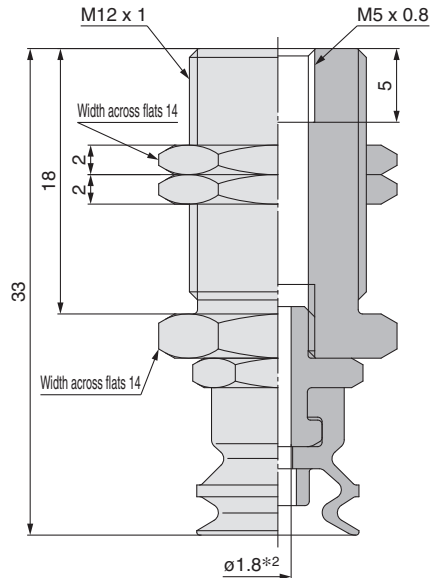

ZP3 - T 10 B N - A12 - B5

1 2 3 4 5

1 Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)

4 Connection thread (Male thread)

A12	M12 x 1
-----	---------


5 Vacuum inlet

B5	M5 x 0.8	Female thread
02*1	$\varnothing 2$	One-touch fitting
04	$\varnothing 4$	
06	$\varnothing 6$	
U2*1	For $\varnothing 2$ polyurethane tubing	Barb fitting
U4*1	For $\varnothing 4$ soft tubing	
U6*1	For $\varnothing 6$ soft tubing	

*1 Not compatible with stainless steel materials

Model						
	1 Adapter material	2 Vacuum inlet direction	3 Pad dia.	4 Form	5 Material	6 Connection thread
ZP3	— S	T	10 13 16	B	N S U F GN GS	A12 B5

Vacuum inlet: One-touch fitting ($\varnothing 2$)

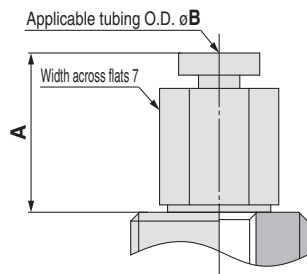


Dimensions Per Vacuum Inlet: One-touch Fitting


Model							A	B	Fitting part min. hole size	Fitting part no.
	1 Adapter material	2 Vacuum inlet direction	3 Pad dia.	4 Form	5 Material	6 Connection thread				
ZP3	— S	T	10 13 16	B	N S U F GN GS	A12	02*3	10.8	2	$\varnothing 1.4$
							04	3	4	$\varnothing 1.8$
							06	3.2	6	

*3 Not compatible with stainless steel materials

Vacuum inlet: Built-in One-touch fitting ($\varnothing 4$, $\varnothing 6$)

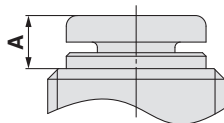

Vacuum inlet: Barb fitting

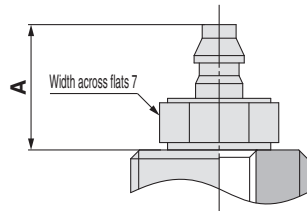

Dimensions Per Vacuum Inlet: Barb Fitting

Model							A	Fitting part min. hole size	Fitting part no.
	1 Adapter material	2 Vacuum inlet direction	3 Pad dia.	4 Form	5 Material	6 Connection thread			
ZP3	—	T	10 13 16	B	N S U F GN GS	A12	U2	$\varnothing 0.9$	M-5AU-2
							U4	$\varnothing 1.8$	M-5AU-4
							U6	$\varnothing 2.5$	M-5AU-6

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

Construction p. 26

Adapter Assembly p. 29

Dimensions/Models

With adapter $\varnothing 10$ to $\varnothing 16$

ZP3 1 - Y 10 B N - B5 - B5

① Adapter material

—	Brass
S	Stainless steel (Stainless steel 304)


④ Connection thread (Female thread)

B5	M5 x 0.8
-----------	----------


⑤ Vacuum inlet

B5	M5 x 0.8	Female thread
02	$\varnothing 2$	One-touch fitting*1
04	$\varnothing 4$	
06	$\varnothing 6$	
U2	For $\varnothing 2$ polyurethane tubing	Barb fitting*1
U4	For $\varnothing 4$ soft tubing	
U6	For $\varnothing 6$ soft tubing	


*1 Not compatible with stainless steel materials

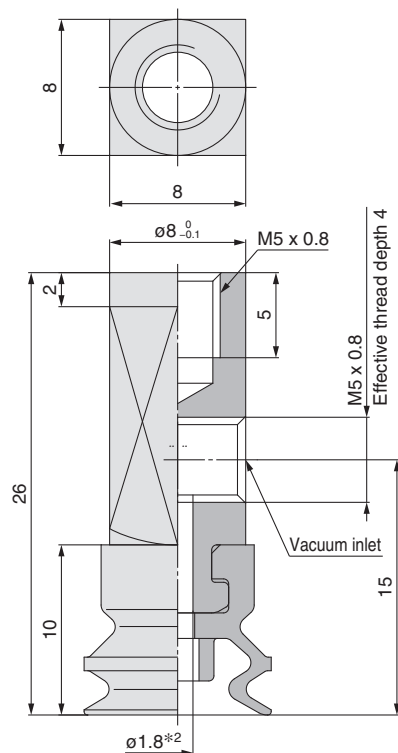

Vacuum inlet: One-touch fitting

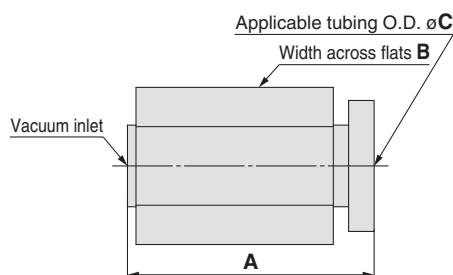

Vacuum inlet: Barb fitting

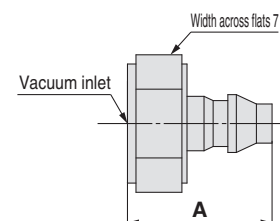

Model						
	① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material*1	④ Connection thread
ZP3	— S	Y	10 13 16	B	N S U F GN GS	B5 B5

Dimensions Per Vacuum Inlet: One-touch Fitting

Model							A	B	C	Fitting part min. hole size	Fitting part no.	
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material ^{*1}	④ Connection thread	⑤ Vacuum inlet						
ZP3	—	Y	10 13 16	B	N S U F GN GS	B5	02	10.8	7	2	ø1.4	KQ2H02-M5N
							04	14.7	8	4	ø2.5	KQ2H04-M5N
							06		10	6		KQ2H06-M5N

Dimensions Per Vacuum Inlet: Barb Fitting

Model							A	Fitting part min. hole size	Fitting part no.	
① Adapter material	Vacuum inlet direction	② Pad dia.	Form	③ Material *1	④ Connection thread	⑤ Vacuum inlet				
ZP3	—	Y	10 13 16	B	N S U F GN GS	B5	U2	6.5	ø0.9	M-5AU-2
							U4	8.5	ø1.8	M-5AU-4
							U6	10.5	ø2.5	M-5AU-6


*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad


Construction p. 26

Adapter Assembly p. 28


With buffer Ø10 to Ø16

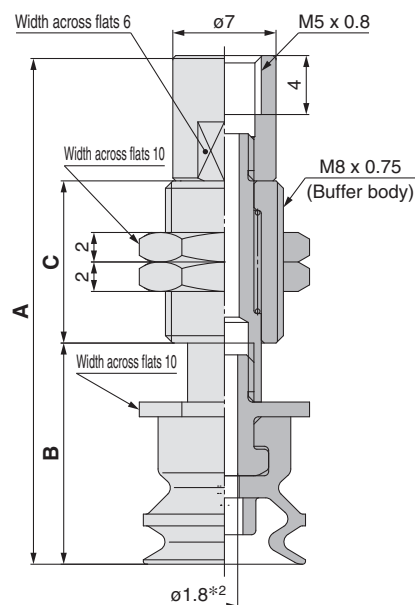

Vacuum inlet: One-touch fitting

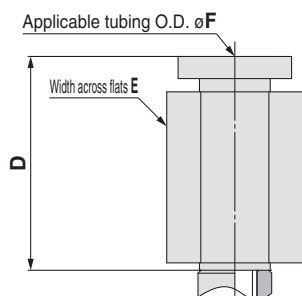

Vacuum inlet: Barb fitting

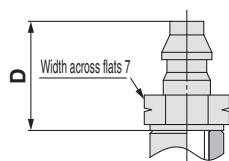

Construction	p. 27
Buffer Assembly	p. 28

ZP3-T **10** **B** **N** **J** **3** - **B5**

Buffer specification 3

J	Rotating
JB	Rotating, With bushing
K	Non-rotating

5 Vacuum inlet

B5	M5 x 0.8	Female thread
02	ø2	One-touch fitting
04	ø4	
06	ø6	
U2	For ø2 polyurethane tubing	Barb fitting
U4	For ø4 soft tubing	
U6	For ø6 soft tubing	

Model							A	B	C
Vacuum inlet direction	① Pad dia.	Form	② ^{※1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet			
ZP3	T	10 13 16	B	N S U F G N S	J K	3	34.5	15	11
						6	41	18	14.5
					JB K	10	51	22	20.5
						15	59	40.5	10
						B5	20	66.5	

Dimensions Per Vacuum Inlet: One-touch Fitting

Model								D	E	F	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	① Pad dia.	Form	② ^{*1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet						
ZP3	T	10 13 16	B	N S U F G N G S	J B K	3 6 10 15 20	02	10.8	7	2	ø1.4	KQ2H02-M5N
							04	14.7	8	4	ø2.5	KQ2H04-M5N
							06		10	6		KQ2H06-M5N

Dimensions Per Vacuum Inlet: Barb Fitting

Model							D	Fitting part min. hole size	Fitting part no.	
Vacuum inlet direction	① Pad dia.	Form	② ^{※1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet				
ZP3	T	10 13 16	B	N S U F G N S	J B K	3 6 10 15 20	U2	6.5	ø0.9	M-5AU-2
							U4	8.5	ø1.8	M-5AU-4
							U6	10.5	ø2.5	M-5AU-6

*1 N: NBR, S: Silicone rubber, U: Urethane rubber, F: FKM, GN: Conductive NBR, GS: Conductive silicone rubber

*2 Indicates the minimum hole size of the adapter or vacuum pad

With buffer Ø10 to Ø16

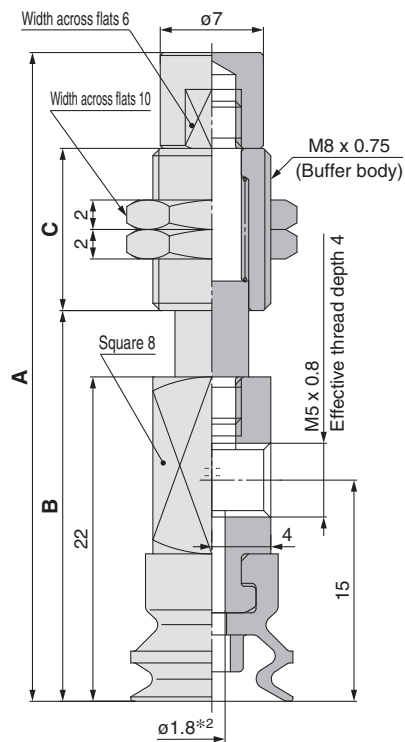


Diagram illustrating the dimensions of the vacuum chamber assembly:

- D**: Overall diameter of the chamber.
- E**: Width across flats of the chamber.
- F**: Applicable tubing O.D. (Outer Diameter).
- Vacuum inlet**: Indicated on the left side of the chamber.

Buffer Assembly p. 30

① ② ④

Buffer specification 3

B5	M5 x 0.8	Female thread
02	ø2	One-touch fitting
04	ø4	
06	ø6	
U2	For ø2 polyurethane tubing	
U4	For ø4 soft tubing	
U6	For ø6 soft tubing	

Model							A	B	C	
Vacuum inlet direction	① Pad dia.	Form	② ^{※1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet				
ZP3	Y	10 13 16	B	N S U F GN GS	J K	3	B5	44	26.5	11
						6		50	29	14.5
					JB K	10		60	33	20.5
						15		63	46.5	10
						20		70.5	54	

Model								D	E	F	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	① Pad dia.	Form	② ^{*1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet						
ZP3	Y	10 13 16	B	N S U F G N G S	J B K	3 6 10 15 20	02	10.8	7	2	ø1.4	KQ2H02-M5N
							04	14.7	8	4	ø2.5	KQ2H04-M5N
							06		10	6		KQ2H06-M5N

Model								D	Fitting part min. hole size	Fitting part no.
Vacuum inlet direction	① Pad dia.	Form	② ^{*1} Material	③ Buffer spec.	④ Buffer stroke	⑤ Vacuum inlet				
ZP3	Y	10 13 16	B	N S U F G N G S	J B K	3 6 10 15 20	U2	6.5	ø0.9	M-5AU-2
							U4	8.5	ø1.8	M-5AU-4
							U6	10.5	ø2.5	M-5AU-6

*2 Indicates the minimum hole size of the adapter or vacuum pad

Compact Type **ZP3 Series** Construction

With adapter

Flat type: $\phi 1.5$ to $\phi 3.5$


Flat type with groove: $\phi 4$ to $\phi 16$

Bellows type: $\phi 4$ to $\phi 8$


Bellows type with ribs: $\phi 10$ to $\phi 16$

Vacuum inlet direction **Vertical** T Type/ZP3□-T


ZP3□-T□-A□

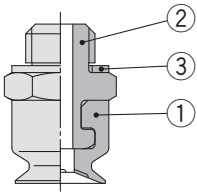


ZP3□-T□-B□

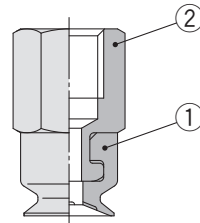


ZP3□-T□-A□-B□

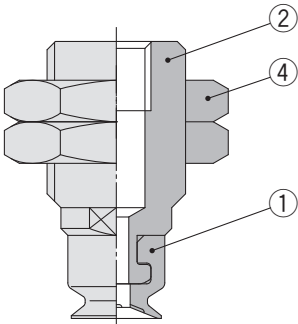


ZP3-T□-A□-(02/04)

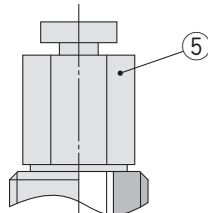

ZP3-T□-A□-(U2/U4/U6)

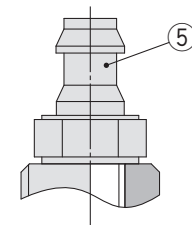

ZP3□-T□-A10-04
ZP3□-T□-A12-(04/06)

 


Component Parts


No.	Description	Material	Note
1	Pad	NBR, Silicone rubber, Urethane rubber, FKM, Conductive NBR, Conductive silicone rubber	Flat type Flat type with groove Bellows type Bellows type with ribs
		Semiconductive silicone rubber	Flat type with groove
		Semiconductive HNBR	
2	Adapter	Brass (Electroless nickel plating)	ZP3-T□
		Stainless steel	ZP3S-T□
3	Gasket	Stainless steel/NBR	ZP3-T□
		Stainless steel/FKM	ZP3S-T□
4	Nut	Structural steel (Trivalent chromated)	M6 x 0.75 M12 x 1
		Steel (Trivalent zinc chromated)	M10 x 1
		Stainless steel	ZP3S-T□
5	Fitting	—	
6	Cassette	—	

Vacuum inlet direction **Lateral** Y Type/ZP3-Y


ZP3□-Y□-B□-B□

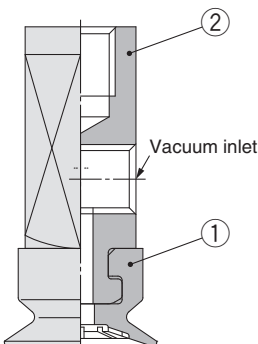

ZP3-Y□-B□-(02/04/06)

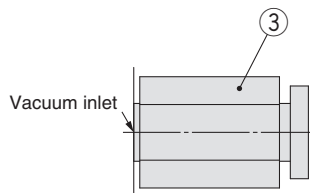

ZP3-Y□-B□-(U2/U4/U6)

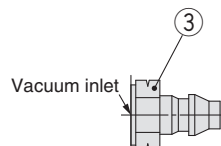

Component Parts

No.	Description	Material	Note
1	Pad	NBR, Silicone rubber, Urethane rubber, FKM, Conductive NBR, Conductive silicone rubber	Flat type Flat type with groove Bellows type Bellows type with ribs
		Semiconductive silicone rubber	Flat type with groove
		Semiconductive HNBR	
2	Adapter	Brass (Electroless nickel plating)	ZP3-Y□
		Stainless steel	ZP3S-Y□
3	Fitting	—	

With buffer

Flat type: $\phi 1.5$ to $\phi 3.5$

Flat type with groove: $\phi 4$ to $\phi 16$

Bellows type: $\phi 4$ to $\phi 8$

Bellows type with ribs: $\phi 10$ to $\phi 16$

Vacuum inlet direction **Vertical** T Type/ZP3-T


ZP3-T□(J/K)□-B□

ZP3-T□JB□-B□

ZP3-T□K(15/20)□-B□

ZP3-T□-(02/04/06)

ZP3-T□-(U2/U4/U6)

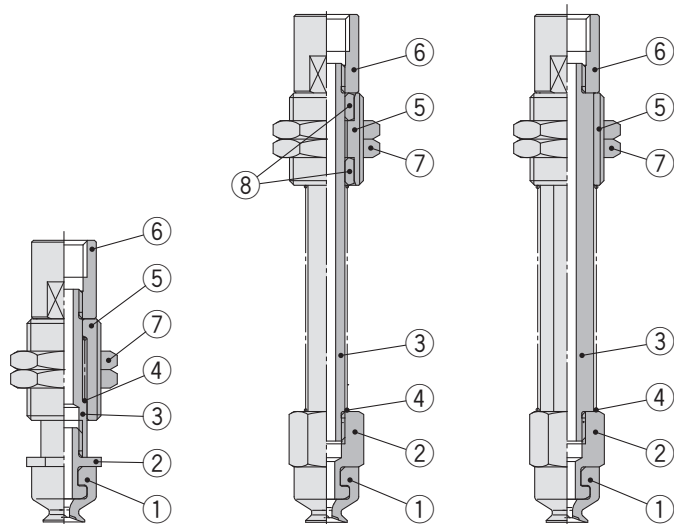

Component Parts

No.	Description	Material	Note
1	Pad	NBR, Silicone rubber, Urethane rubber, FKM, Conductive NBR, Conductive silicone rubber	Flat type Flat type with groove Bellows type Bellows type with ribs
		Semiconductive silicone rubber Semiconductive HNBR	Flat type with groove
2	Adapter	Brass (Electroless nickel plating)	
3	Piston rod	Stainless steel	
4	Return spring	Stainless steel	
5	Buffer body	Brass (Electroless nickel plating)	
6	Buffer adapter	Brass (Electroless nickel plating)	
7	Nut	Structural steel (Trivalent chromated)	M6 x 0.75 M8 x 0.75
8	Bushing	—	
9	Fitting	—	

Vacuum inlet direction **Lateral** Y Type/ZP3-Y


ZP3-Y□(J/K)□-B□

ZP3-Y□JP□-B□

ZP3-Y□K(15/20)□-B□

ZP3-Y□-(02/04/06)

ZP3-Y□-(U2/U4/U6)

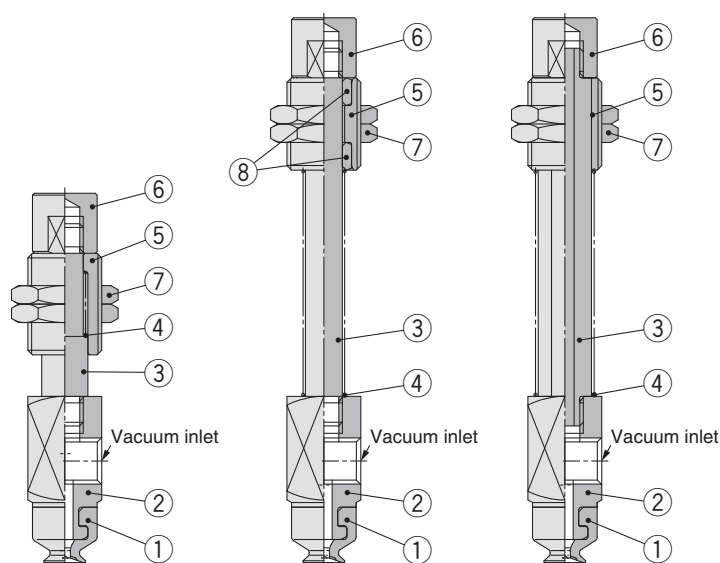

Component Parts

No.	Description	Material	Note
1	Pad	NBR, Silicone rubber, Urethane rubber, FKM, Conductive NBR, Conductive silicone rubber	Flat type Flat type with groove Bellows type Bellows type with ribs
		Semiconductive silicone rubber Semiconductive HNBR	Flat type with groove
2	Adapter	Brass (Electroless nickel plating)	
3	Piston rod	Stainless steel	
4	Return spring	Stainless steel	
5	Buffer body	Brass (Electroless nickel plating)	
6	Buffer adapter	Brass (Electroless nickel plating)	
7	Nut	Structural steel (Trivalent chromated)	M6 x 0.75 M8 x 0.75
8	Bushing	—	
9	Fitting	—	



Basic/Compact Type Specific Product Precautions

Be sure to read this before handling the products.

For safety instructions, refer to the “Handling Precautions for SMC Products” and the “Operation Manual” on the SMC website: <https://www.smcworld.com>

Mounting

1. Tighten the screw within the specified torque range when mounting the buffer.

Tightening with a torque outside of the specified range may cause malfunction.

Basic Type ZP Series

Product part number	Connection thread	Tightening torque [N·m]
ZP□(2 to 8)□(J/K)□-□-A8	M8 x 1	1.5 to 2.0
ZP□(10 to 32)□(J/K)□-□-A10	M10 x 1	2.5 to 3.5
ZP□(40/50)□(J/K)□-□-A14	M14 x 1	6.5 to 7.5

Compact Type ZP3 Series

Product part number	Connection thread	Tightening torque [N·m]
ZP3□-□(015 to 035)□J□-□	M6 x 0.75	1.5 to 1.8
ZP3□-□(015 to 035)□K□-□	M8 x 0.75	2.0 to 2.5
ZP3□-□(04 to 16)□(J/JB/K)□-□		

2. When mounting the product, tighten with the tightening torque shown in the table below. If excessive or insufficient tightening torque is applied, sealing failure or loose screws may result.

Basic Type ZP Series

Product part number	Connection thread	Tightening torque [N·m]
ZP□T□□-A5	M5 x 0.8	1.3 to 1.7
ZP□T□□-AS5		
ZP□T□□-A6	M6 x 1	1.6 to 2
ZP□T□□-AS6		
ZP□T□□-AG01	G1/8	3 to 5
ZP□T□□-AG02	G1/4	8 to 12

Compact Type ZP3 Series


Product part number	Connection thread	Tightening torque [N·m]
ZP3□-T(015 to 035)U□-A3	M3 x 0.5	0.2 to 0.25
ZP3□-T(04 to 16)□□-A5	M5 x 0.8	1.3 to 1.7

Product part number	Connection thread	Tightening torque [N·m]
ZP□T□□-BG01	G1/8	3 to 5
ZP□T□□-BG02	G1/4	8 to 12

How to Replace the Pad

1. How to replace the pad of the basic type ZP series


- 1 Pull the lock ring upward, and, after lifting it up to the adapter, remove the old pad by pulling it downward.
- 2 While holding the lock ring in the raised position, place a new pad onto the adapter.
- 3 Confirm that the pad is securely in place, and then return the lock ring to its original position.

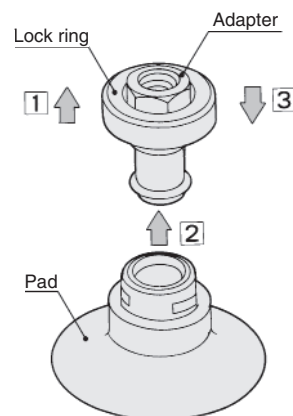

2. How to replace the pad of the basic (ball joint) type ZP series


Pad diameter: ø10 to ø32

- 1 Insert a hexagon wrench into the bottom of the pad, loosen the screw, and remove the old pad from the adapter.
- 2 Place a new pad on the adapter, and, after confirming that the O-ring is in place, retighten the screw with the hexagon wrench.

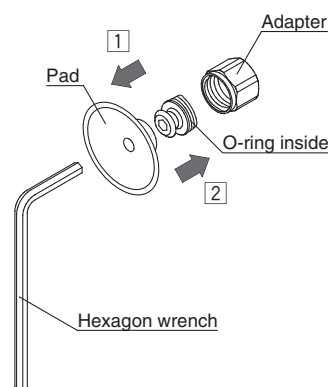

Pad diameter: ø40, ø50


- 1 Pull the lock ring upward, and, after lifting it up to the adapter, remove the old pad by pulling it downward.
- 2 While holding the lock ring in the raised position, place a new pad onto the adapter.
- 3 Confirm that the pad is securely in place, and then return the lock ring to its original position.

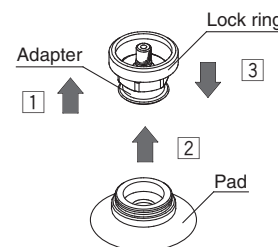

Series ZP3 Construction

Component Parts List


Pad with adapter

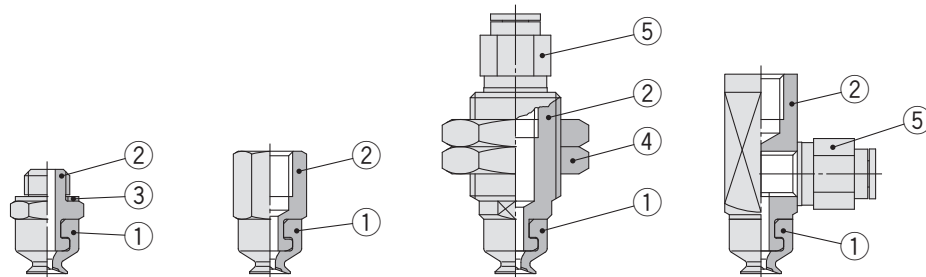

Component Parts

No.	Description	Material (Surface treatment)	Note
1	Pad	NBR/Silicone rubber Urethane rubber/FKM Conductive NBR/Conductive silicone rubber	
2	Adapter	Brass(Electroless nickel plated)	
3	Gasket	Stainless steel 304/NBR	
4	Nut	Structural steel(Trivalent chromated)	M6 x 0.75 M8 x 0.75 M12 x 1
5	Fitting	Brass(Nickel plated)	M10 x 1

Pad with buffer

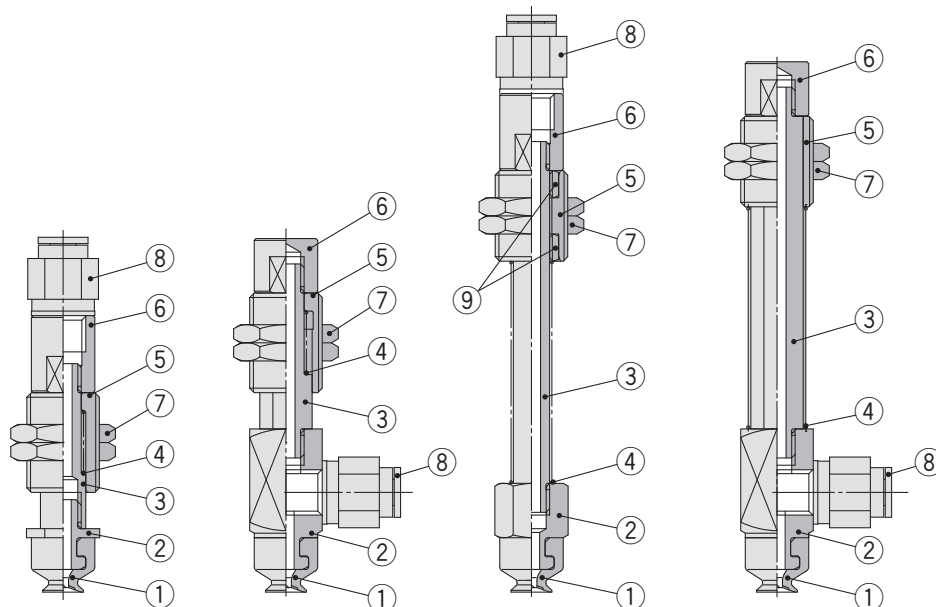


Component Parts

No.	Description	Material (Surface treatment)
1	Pad	NBR/Silicone rubber Urethane rubber/FKM Conductive NBR/Conductive silicone rubber
2	Adapter	Brass(Electroless nickel plated)
3	Piston rod	Stainless steel
4	Return spring	Stainless steel
5	Buffer body	Brass(Electroless nickel plated)
6	Buffer adapter	Brass(Electroless nickel plated)
7	Nut	Structural steel(Trivalent chromated)
8	Fitting	—
9	Bushing	—

Adapter Applicable Pad List

 Series ZP3 Mounting Adapter Part No.

Adapter part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3A-T1-A3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.35
ZP3A-T1-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.35
ZP3A-T1-A6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.35
ZP3A-T2-A5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.35
ZP3A-T2-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.35
ZP3A-T2-A10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.35
ZP3A-T2-A10-04		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.35
ZP3A-T3-A5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.35
ZP3A-T3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.36

Adapter part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3A-T3-A12-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.36
ZP3A-T3-A12-04		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.36
ZP3A-T3-A12-06		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.36
ZP3A-Y1-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.36
ZP3A-Y2-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.36
ZP3A-Y3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.36

Buffer Applicable Pad List

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-T1J3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.37
ZP3B-T1J6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.37
ZP3B-T1K3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.37
ZP3B-T1K6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.37
ZP3B-T2AJ3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AJ6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AJ10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-T2AK3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AK6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AK10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AJB15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AJB20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AK15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37
ZP3B-T2AK20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.37

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3B-T2BJ3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BJ6-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BJ10-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BK3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BK6-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BK10-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BJB15-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BJB20-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38

Buffer assembly part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3B-T2BK15-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-T2BK20-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.38
ZP3B-Y1J3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.39
ZP3B-Y1J6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.39
ZP3B-Y1K3-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.39
ZP3B-Y1K6-B3		ZP3-015U□ ZP3-02U□ ZP3-035U□	P.39

Series ZP3

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3B-Y2AJ3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AJ6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AJ10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AK3-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AK6-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AK10-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39

Buffer assembly part no.		Applicable pad part no.	Page
		Series ZP3	
ZP3B-Y2AJB15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AJB20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AK15-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
ZP3B-Y2AK20-B5		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39
		ZP3-04UM□ ZP3-06UM□ ZP3-08UM□ ZP3-04B□ ZP3-06B□ ZP3-08B□	P.39

Buffer Assembly Part No.

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-Y2BJ3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BJ6-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BJ10-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BK3-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BK6-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BK10-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40

Buffer assembly part no.		Applicable pad part no. Series ZP3	Page
ZP3B-Y2BJB15-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BJB20-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BK15-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40
ZP3B-Y2BK20-B5		ZP3-10UM□ ZP3-13UM□ ZP3-16UM□ ZP3-10B□ ZP3-13B□ ZP3-16B□	P.40

Mounting Adapter Part No.

Vacuum Inlet Direction **Vertical**

Adapter part no.	ZP3A-T1-A3 [Weight: 0.5 g]
Applicable pad part no. ZP3-015U ZP3-02U ZP3-035U	

Adapter part no.	ZP3A-T2-B5 [Weight: 2.0 g]
Applicable pad part no. ZP3-04UM ZP3-06UM ZP3-08UM ZP3-04B ZP3-06B ZP3-08B	

Adapter part no.	ZP3A-T1-B3 [Weight: 0.8 g]
Applicable pad part no. ZP3-015U ZP3-02U ZP3-035U	

Adapter part no.	ZP3A-T2-A10-B5 [Weight: 10.7 g]
Applicable pad part no. ZP3-04UM ZP3-06UM ZP3-08UM ZP3-04B ZP3-06B ZP3-08B	


Adapter part no.	ZP3A-T1-A6-B3 [Weight: 2.7 g]
Applicable pad part no. ZP3-015U ZP3-02U ZP3-035U	


Adapter part no.	ZP3A-T2-A10-04 [Weight: 9.9 g]
Applicable pad part no. ZP3-04UM ZP3-06UM ZP3-08UM ZP3-04B ZP3-06B ZP3-08B	


Adapter part no.	ZP3A-T2-A5 [Weight: 1.4 g]
Applicable pad part no. ZP3-04UM ZP3-06UM ZP3-08UM ZP3-04B ZP3-06B ZP3-08B	


Adapter part no.	ZP3A-T3-A5 [Weight: 2.4 g]
Applicable pad part no. ZP3-10UM ZP3-13UM ZP3-16UM ZP3-10B ZP3-13B ZP3-16B	

Vacuum Inlet Direction **Vertical**

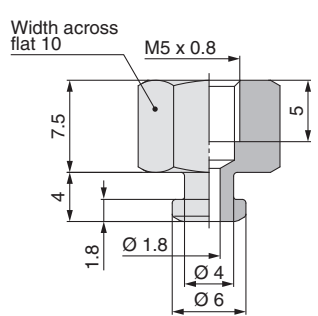
Adapter part no.	ZP3A-T3-B5 [Weight: 5.1 g]
	
Applicable pad part no.	ZP3-10UM ZP3-13UM ZP3-16UM ZP3-10B ZP3-13B ZP3-16B

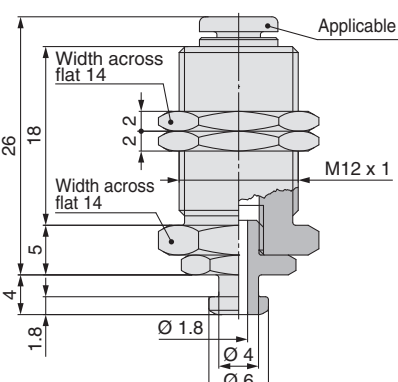
Adapter part no.	ZP3A-T3-A12-04 [Weight: 19.6 g]
	
Applicable pad part no.	ZP3-10UM ZP3-13UM ZP3-16UM ZP3-10B ZP3-13B ZP3-16B

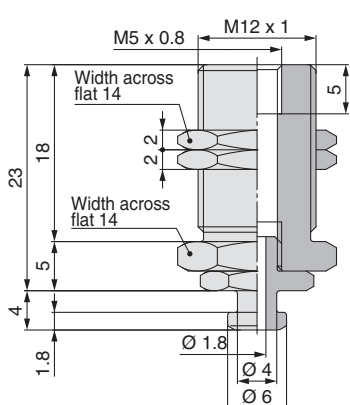
Adapter part no.	ZP3A-T3-A12-B5 [Weight: 18.2 g]
	
Applicable pad part no.	ZP3-10UM ZP3-13UM ZP3-16UM ZP3-10B ZP3-13B ZP3-16B

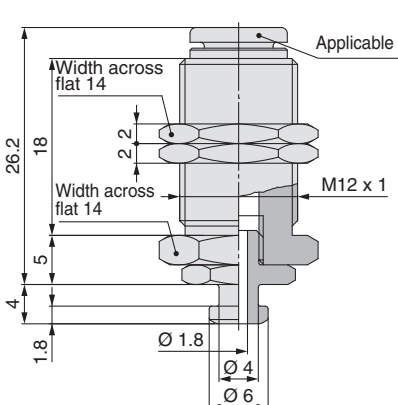Adapter part no.	ZP3A-T3-A12-06 [Weight: 17.5 g]
	
Applicable pad part no.	ZP3-10UM ZP3-13UM ZP3-16UM ZP3-10B ZP3-13B ZP3-16B

Vacuum Inlet Direction **Lateral**

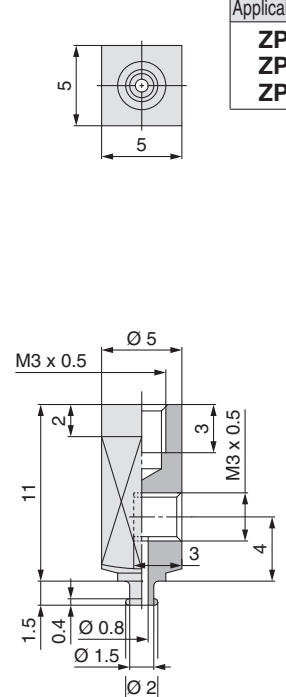Adapter part no.	ZP3A-Y1-B3 [Weight: 1.8 g]
	
Applicable pad part no.	ZP3-015U ZP3-02U ZP3-035U

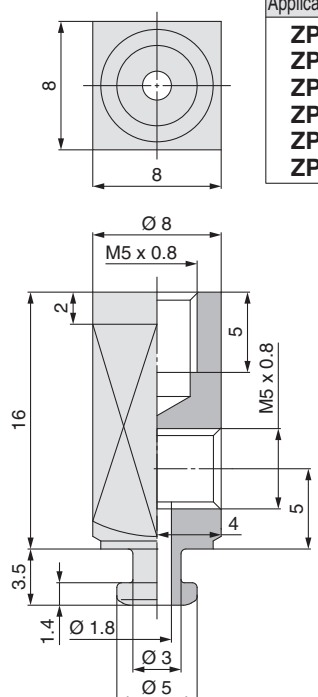Adapter part no.	ZP3A-Y2-B5 [Weight: 6.7 g]
	
Applicable pad part no.	ZP3-04UM ZP3-06UM ZP3-08UM ZP3-04B ZP3-06B ZP3-08B

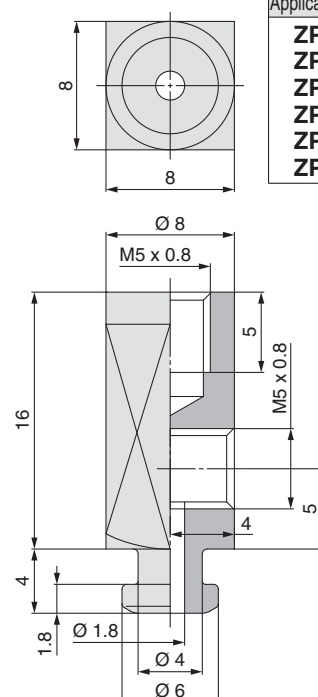
Adapter part no.	ZP3A-Y3-B5 [Weight: 7.1 g]
	
Applicable pad part no.	ZP3-10UM ZP3-13UM ZP3-16UM ZP3-10B ZP3-13B ZP3-16B

Vacuum Inlet Direction


Vertical

Buffer assembly part no.	Weight[g]
ZP3B-T1J3-B3	3.5
ZP3B-T1J6-B3	4.3
ZP3B-T1K3-B3	6.7
ZP3B-T1K6-B3	8.1

ZP3B-T1J-B3

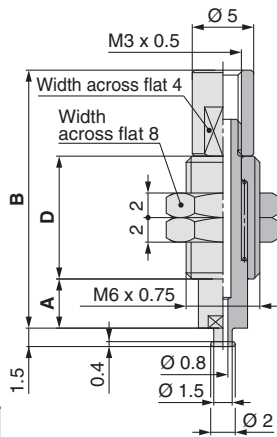

ZP3B-T1K-B3

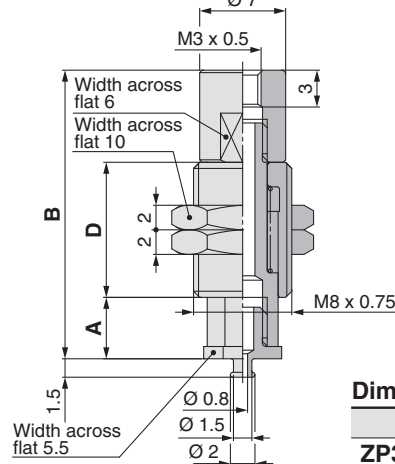

Applicable pad part no.
ZP3-015U
ZP3-02U
ZP3-035U

Dimensions (per stroke)


Model	A	B	D
ZP3B-T1J3-B3	4	21	10
ZP3B-T1J6-B3	7	28	14

Dimensions (per stroke)


Model	A	B	D
ZP3B-T1K3-B3	5	23.5	11
ZP3B-T1K6-B3	8	30	14.5

Buffer assembly part no.	Weight[g]
ZP3B-T2AJ3-B5	7.1
ZP3B-T2AJ6-B5	8.3
ZP3B-T2AJ10-B5	10.2
ZP3B-T2AK3-B5	7.0
ZP3B-T2AK6-B5	8.3
ZP3B-T2AK10-B5	10.2

ZP3B-T2AJ-B5

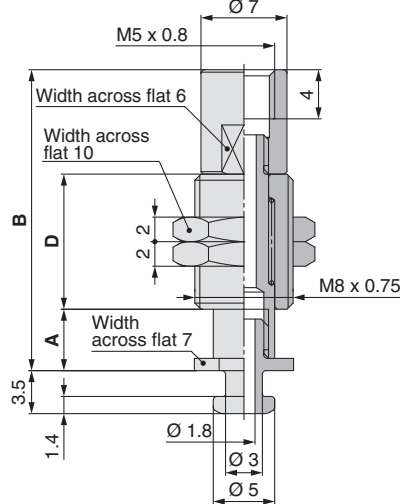

ZP3B-T2AK-B5

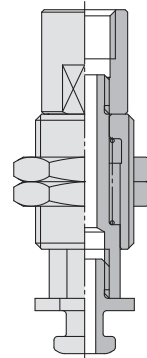

Applicable pad part no.
ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B


Dimensions (per stroke)

Model	A	B	D
ZP3B-T2A☆3-B5	5	24.5	11
ZP3B-T2A☆6-B5	8	31	14.5
ZP3B-T2A☆10-B5	12	41	20.5


Note) The symbol "☆" indicates buffer type "J" or "K".

Buffer assembly part no.	Weight[g]
ZP3B-T2AJB15-B5	10.0
ZP3B-T2AJB20-B5	10.6
ZP3B-T2AK15-B5	12.0
ZP3B-T2AK20-B5	13.1

ZP3B-T2AJB-B5

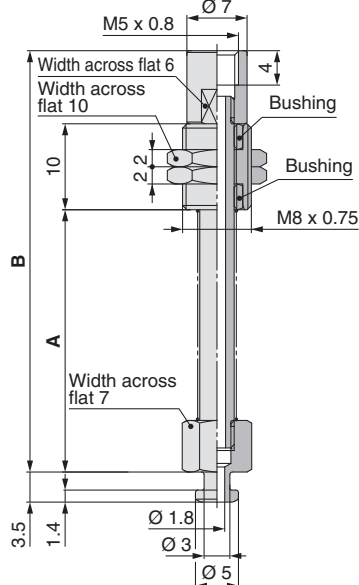

ZP3B-T2AK-B5

 

Applicable pad part no.
ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B

Dimensions (per stroke)


Model	A	B
ZP3B-T2A☆15-B5	30.5	49
ZP3B-T2A☆20-B5	38	56.5

Note) The symbol "☆" indicates buffer type "JB" or "K".


* Refer to the front matter 25 for nut tightening torque.

Vacuum Inlet Direction **Vertical**

Buffer assembly part no.	Weight[g]
ZP3B-T2BJ3-B5	7.8
ZP3B-T2BJ6-B5	8.9
ZP3B-T2BJ10-B5	10.9
ZP3B-T2BK3-B5	7.7
ZP3B-T2BK6-B5	8.9
ZP3B-T2BK10-B5	10.9

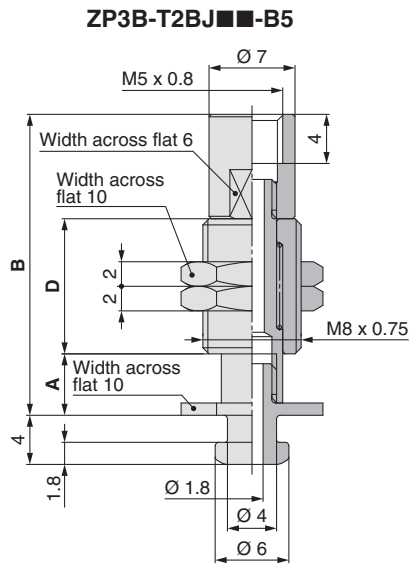

ZP3B-T2BK■■-B5

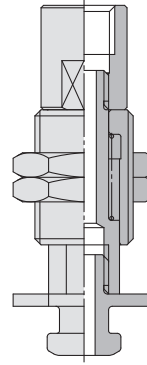


Applicable pad part no.
ZP3-10UM
ZP3-13UM
ZP3-16UM
ZP3-10B
ZP3-13B
ZP3-16B

Dimensions (per stroke)


Model	A	B	D
ZP3B-T2B☆3-B5	5	24.5	11
ZP3B-T2B☆6-B5	8	31	14.5
ZP3B-T2B☆10-B5	12	41	20.5

Note) The symbol "☆" indicates buffer type "J" or "K".

Buffer assembly part no.	Weight[g]
ZP3B-T2BJB15-B5	12.5
ZP3B-T2BJB20-B5	15.6
ZP3B-T2BK15-B5	14.5
ZP3B-T2BK20-B5	15.6

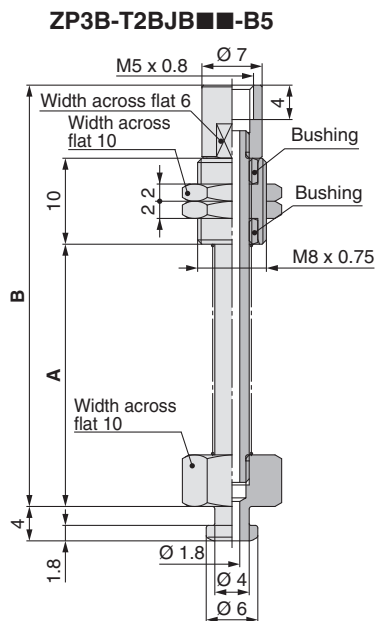

ZP3B-T2BK■■-B5

 

Applicable pad part no.
ZP3-10UM
ZP3-13UM
ZP3-16UM
ZP3-10B
ZP3-13B
ZP3-16B

Dimensions (per stroke)

Model	A	B
ZP3B-T2B☆15-B5	30.5	49
ZP3B-T2B☆20-B5	38	56.5


Note) The symbol "☆" indicates buffer type "JB" or "K".

Series ZP3


Vacuum Inlet Direction **Lateral**

Buffer assembly part no.	Weight[g]
ZP3B-Y1J3-B3	7.6
ZP3B-Y1J6-B3	8.5
ZP3B-Y1K3-B3	10.9
ZP3B-Y1K6-B3	12.1

ZP3B-Y1J■-B3

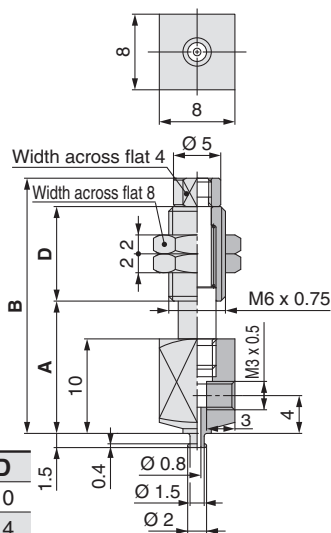

ZP3B-Y1K■-B3

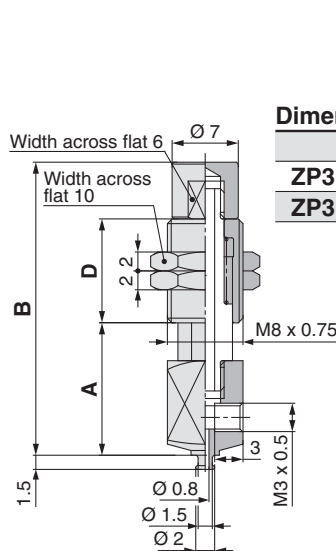

Dimensions (per stroke)

Model	A	B	D
ZP3B-Y1K3-B3	14	31	11
ZP3B-Y1K6-B3	17	37.5	14.5


Dimensions (per stroke)

Model	A	B	D
ZP3B-Y1J3-B3	14	27	10
ZP3B-Y1J6-B3	17	34	14


Applicable pad part no.
ZP3-015U
ZP3-02U
ZP3-035U

Buffer assembly part no.	Weight[g]
ZP3B-Y2AJ3-B5	12.5
ZP3B-Y2AJ6-B5	13.9
ZP3B-Y2AJ10-B5	16.3
ZP3B-Y2AK3-B5	11.9
ZP3B-Y2AK6-B5	13.1
ZP3B-Y2AK10-B5	15.1

ZP3B-Y2AJ■-B5

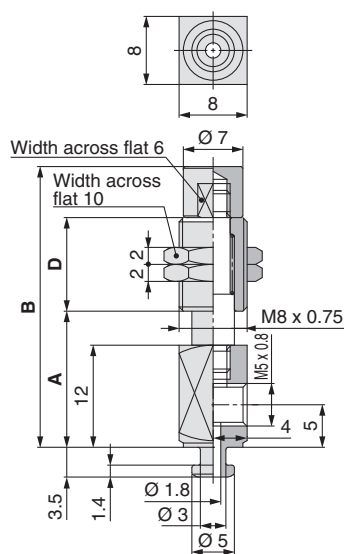

ZP3B-Y2AK■-B5

 

Dimensions (per stroke)


Model	A	B	D
ZP3B-Y2A☆3-B5	16.5	34	11
ZP3B-Y2A☆6-B5	19	40	14.5
ZP3B-Y2A☆10-B5	23	50	20.5

Note) The symbol "☆" indicates buffer type "J" or "K".


Applicable pad part no.
ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B

Buffer assembly part no.	Weight[g]
ZP3B-Y2AJB15-B5	14.0
ZP3B-Y2AJB20-B5	14.8
ZP3B-Y2AK15-B5	15.2
ZP3B-Y2AK20-B5	16.3

ZP3B-Y2AJB■-B5

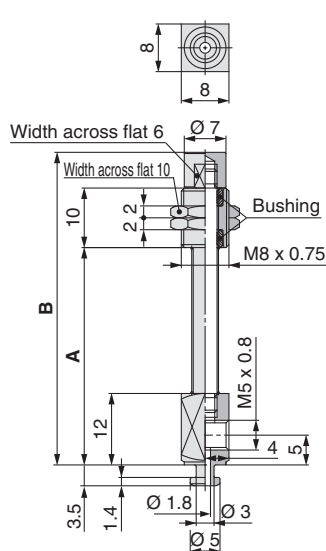

ZP3B-Y2AK■-B5

 

Dimensions (per stroke)

Model	A	B
ZP3B-Y2A☆15-B5	36.5	53
ZP3B-Y2A☆20-B5	44	60.5

Note) The symbol "☆" indicates buffer type "JB" or "K".

Applicable pad part no.
ZP3-04UM
ZP3-06UM
ZP3-08UM
ZP3-04B
ZP3-06B
ZP3-08B



*** Refer to the front matter 25 for nut tightening torque.**

Vacuum Inlet Direction **Lateral**

Buffer assembly part no.	Weight[g]
ZP3B-Y2BJ3-B5	13.0
ZP3B-Y2BJ6-B5	14.3
ZP3B-Y2BJ10-B5	16.7
ZP3B-Y2BK3-B5	12.4
ZP3B-Y2BK6-B5	13.6
ZP3B-Y2BK10-B5	15.5

ZP3B-Y2BJB■■-B5

 ZP3B-Y2BK■■-B5

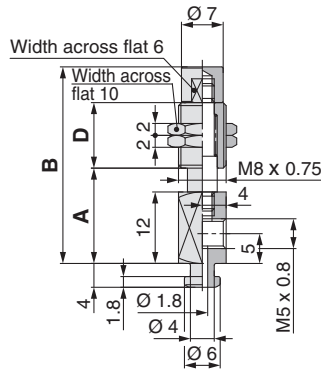

Dimensions (per stroke)



Model	A	B	D
3P3B-Y2B☆3-B5	16.5	34	11
3P3B-Y2B☆6-B5	19	40	14.5
3P3B-Y2B☆10-B5	23	50	20.5

Note) The symbol "☆" indicates buffer type "J" or "K".

Buffer assembly part no.	Weight[g]
ZP3B-Y2BJB15-B5	14.4
ZP3B-Y2BJB20-B5	15.2
ZP3B-Y2BK15-B5	15.6
ZP3B-Y2BK20-B5	16.7

ZP3B-Y2BJB■■-B5

 ZP3B-Y2BK■■-B5

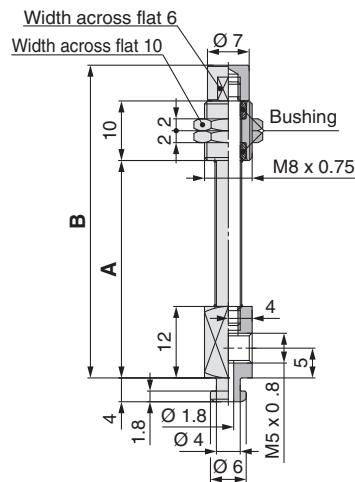

Dimensions (per stroke)

Model	A	B
ZP3B-Y2B☆15-B5	36.5	53
ZP3B-Y2B☆20-B5	44	60.5

Note) The symbol "☆" indicates buffer type "JB" or "K".



Vacuum Equipment Precautions 1

Be sure to read this before handling.

Design/Selection

Warning

1. Confirm the specifications.

Products represented in this catalogue are designed only for use in compressed air systems (including vacuum). Do not operate at pressures or temperatures, etc., beyond the range of specifications, as this can cause damage or malfunction. (Refer to the specifications.) Please contact SMC when using a fluid other than compressed air (including vacuum). We do not guarantee against any damage if the product is used outside of the specification range.

2. Safe designs should be developed, which account for the possibility of accidents resulting from a drop in vacuum pressure due to power failure or trouble with the air supply, etc.

If vacuum pressure drops and there is a loss of vacuum pad adsorption force, workpieces being carried may fall, causing human injury or damage to machinery. Sufficient safety measures should be implemented, such as drop prevention, to avoid any accidents.

3. Follow vacuum specifications for vacuum switching valves and vacuum release valves.

If non-vacuum equipment is installed in a vacuum piping, vacuum leakage will occur. Therefore, select only equipment for vacuum specifications.

4. Select an ejector which has a suitable suction flow rate.

<When there is vacuum leakage from the workpiece or the piping>
If the ejector's suction flow rate is too low, the adsorption will be poor.
<When piping is long or the diameter is large>
The adsorption response time will delay due to the increased volume of the piping.
Select an ejector with a suitable suction flow rate by referring to the technical data.

5. If the suction flow rate is too high, setting of vacuum switch will become difficult.

Setting the vacuum switch when absorbing a small (few millimeter) workpiece will sometimes become difficult, if the selected ejector has a high suction rate and there is a small pressure difference when absorbing and releasing the workpiece.

6. When two or more pads are piped to one ejector, if one pad releases its workpiece, the other pads will also release.

When one pad releases its workpiece, there is a drop in vacuum pressure which causes the other pad to release its workpiece as well.

7. When separating the pad from the workpiece, break the vacuum and confirm that the pressure is atmospheric pressure.

Do not separate them forcibly while vacuum pressure exists between them. This may cause cracking, tearing, or distortion of the pad, or cause the pad to come off the adapter.

8. Do not apply lateral load (force) such as rotation or sliding force of the workpiece to the adsorption surface of the pad during adsorption of the workpiece.

This may cause deformation, cracking, tearing, or distortion of the pad, or cause the pad to come off the adapter.

9. Do not disassemble the product or make any modifications, including additional machining.

It may cause human injury and/or an accident. When disassembling or assembling the product for the purpose of replacing parts, etc., be certain to follow the operation manual or catalogues.

10. Check valve

SMC can issue no guarantees regarding the maintenance of workpiece adsorption when using check valves. Take separate safety measures to prevent workpieces from dropping in the case of an electrical power outage, etc. Please consult with SMC when using check valves as a means of preventing interference caused by the exhaust from nearby ejectors.

Caution

1. Mounting the suction filter

Because the suction of vacuum equipment acts not only on workpieces but also on dust or water droplets in the surrounding atmosphere, steps must be taken to prevent their penetration into the equipment's interior.

Even when using equipment equipped with filters, if there is a considerable amount of dust in the environment, use a separately ordered large-size filter as well.

If there is a possibility of water droplets being sucked in by the vacuum, use a drain separator for vacuum.

2. The maximum vacuum pressure of the vacuum ejector is affected by the atmospheric pressure of the operating environment.

As atmospheric pressure changes based on altitude, climate, etc., the actual maximum vacuum pressure may not reach the value listed in the specifications.

3. For information on related items, such as directional control equipment and drive equipment, refer to the caution sections in each respective catalogue.

4. Do not use the product in an environment that exposes it to vibration. If the product is used in such an environment, we can offer a lock nut type product to prevent it from loosening. Please contact SMC for model number.

Mounting

Warning

1. Operation manual

Install the products and operate them only after reading the operation manual carefully and understanding its contents. Also, keep the manual available whenever necessary.

2. Ensure sufficient space for maintenance activities.

When installing the products, allow access for maintenance.

3. Tighten threads with the proper tightening torque.

When installing the products, follow the listed torque specifications.

4. Do not obstruct the exhaust port of the ejector.

If the exhaust port is obstructed when mounted, a vacuum will not be generated. Also, do not obstruct the exhaust port with the goal of removing the workpiece. It may cause damage to the equipment.



Vacuum Equipment Precautions 2

Be sure to read this before handling.

Piping

⚠ Caution


1. Refer to the Fittings and Tubing Precautions (www.smc.eu) for handling onetouch fittings.

2. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

3. Wrapping of pipe tape

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if pipe tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.

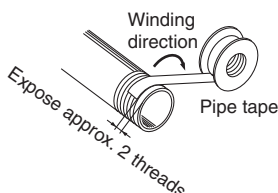

4. Use piping with an adequate conductance.

Select equipment and piping for the vacuum side which has an adequate conductance so that the ejector's maximum suction flow rate can be accommodated by the piping. Also, make sure that there are no unnecessary restrictions or leaks, etc., along the course of the piping. Furthermore, design the air supply taking into consideration the ejector's maximum air consumption and the air consumption of other pneumatic circuits.

5. Avoid disorganized piping.

Used direct piping with the shortest possible length should be used for both the vacuum and supply sides.

Disorganized piping should be avoided. Unnecessary length increases the piping volume, and thus increases the response time.

6. Use piping with a large conductance on the exhaust side of the ejector.

If the exhaust piping is restrictive, there will be a decline in the ejector's performance.

7. Be certain that there are no crushed areas in the piping due to damage or bending.

Air Supply

⚠ Warning

1. Type of fluids

Please consult with SMC when using the product in applications other than compressed air.

2. When there is a large amount of drainage.

Compressed air containing a large amount of drainage can cause malfunction of pneumatic equipment. An air dryer or water separator should be installed upstream from filters.

Air Supply

⚠ Warning

3. Drain flushing

If condensation in the water separator and drain bowl is not emptied on a regular basis, the bowl will overflow and allow the condensation to enter the compressed air lines. It causes malfunction of pneumatic equipment.

If the drain bowl is difficult to check and remove, installation of a drain bowl with an auto drain option is recommended.

For compressed air quality, refer to website www.smc.eu

4. Use clean air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause damage or malfunction.

Operating Environment

⚠ Warning

1. Do not use in an atmosphere having corrosive gases, chemicals, sea water, water, water steam, or where there is direct contact with any of these substances.
2. Do not use in a place subject to heavy vibration and/or shock.
3. Do not use in an environment where flammable gas or explosive gas exists. Usage may cause fire or explosion. The products do not have an explosion proof construction.
4. The valve should not be exposed to prolonged sunlight. Use a protective cover.
5. Remove any sources of excessive heat.
6. In locations where there is contact with spatter from water, oil, solder, take suitable protective measures.
7. In cases where the vacuum unit is surrounded by other equipment, etc., or the unit is energized for an extended time, take measures to exhaust excess heat so that the temperature is within specifications.

⚠ Caution

1. Under certain conditions, the exhaust of the vacuum ejector may generate intermittent noises, and vacuum pressure may be uneven.

Using the ejector under these conditions will not result in decreased performance, but if the intermittent noise becomes a nuisance, or if there is an adverse effect on the operation of the vacuum pressure switch, try lowering or raising the supply pressure of the vacuum ejector to find a supply pressure level at which the intermittent noise ceases.



Vacuum Equipment Precautions 3

Be sure to read this before handling.

Maintenance

Warning

1. Perform maintenance inspection according to the procedures indicated in the operation manual.

If handled improperly, malfunction and damage of machinery or equipment may occur.

2. Maintenance work

If handled improperly, compressed air can be dangerous. Assembly, handling, repair and element replacement of pneumatic systems should be performed by a knowledgeable and experienced person.

3. Drain flushing

Remove drainage regularly from the water separator, air filters, vacuum drain separator, etc.

4. Removal of equipment, and supply/exhaust of compressed air

When components are removed, first confirm that measures are in place to prevent workpieces from dropping, run-away equipment, etc. Then, cut off the supply pressure and electric power, and exhaust all compressed air from the system using the residual pressure release function.

When machinery is restarted after remounting or replacement, first confirm that measures are in place to prevent lurching of actuators. Then, confirm that the equipment is operating normally.

5. Clean suction filters and silencers on a regular basis.

The performance of an ejector will deteriorate due to clogged filters and silencers. High flow filters should be used, especially in dusty locations.

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)¹⁾, and other safety regulations.

-  **Danger:** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.
-  **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

- 1) ISO 4414: Pneumatic fluid power – General rules and safety requirements for systems and their components.
ISO 4413: Hydraulic fluid power – General rules and safety requirements for systems and their components.
IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1: Robots and robotic devices - Safety requirements for industrial robots - Part 1: Robots.
etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. SMC products cannot be used beyond their specifications. They are not developed, designed, and manufactured to be used under the following conditions or environments.

Use under such conditions or environments is not allowed.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Use for nuclear power, railways, aviation, space equipment, ships, vehicles, military application, equipment affecting human life, body, and property, combustion equipment, entertainment equipment, emergency shut-off circuits, press clutches, brake circuits, safety equipment, etc., and use for applications that do not conform to standard specifications such as catalogues and operation manuals.
3. Use for interlock circuits, except for use with double interlock such as installing a mechanical protection function in case of failure. Please periodically inspect the product to confirm that the product is operating properly.

Caution

SMC develops, designs, and manufactures products to be used for automatic control equipment, and provides them for peaceful use in manufacturing industries.

Use in non-manufacturing industries is not allowed.

Products SMC manufactures and sells cannot be used for the purpose of transactions or certification specified in the Measurement Act of each country.

The new Measurement Act prohibits use of any unit other than SI units in Japan.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.²⁾ Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

2) Suction cups (Vacuum pads) are excluded from this 1 year warranty.

A suction cup (vacuum pad) is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the suction cup (vacuum pad) or failure due to the deterioration of rubber material are not allowed by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Safety Instructions

Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.

SMC Corporation (Europe)

Austria	+43 (0)2262622800	www.smc.at	office.at@smc.com
Belgium	+32 (0)33551464	www.smc.be	info@smc.be
Bulgaria	+359 (0)2807670	www.smc.bg	sales.bg@smc.com
Croatia	+385 (0)13707288	www.smc.hr	sales.hr@smc.com
Czech Republic	+420 541424611	www.smc.cz	office.at@smc.com
Denmark	+45 70252900	www.smc.dk.com	smc.dk@smc.com
Estonia	+372 651 0370	www.smcee.ee	info.ee@smc.com
Finland	+358 207513513	www.smc.fi	smc.fi@smc.com
France	+33 (0)164761000	www.smc-france.fr	supportclient.fr@smc.com
Germany	+49 (0)61034020	www.smc.de	info.de@smc.com
Greece	+30 210 2717265	www.smchellas.gr	sales@smchellas.gr
Hungary	+36 23513000	www.smc.hu	office.hu@smc.com
Ireland	+353 (0)14039000	www.smcautomation.ie	technical.ie@smc.com
Italy	+39 03990691	www.smcitalia.it	mailbox.it@smc.com
Latvia	+371 67817700	www.smc.lv	info.lv@smc.com

Lithuania	+370 5 2308118	www.smclt.lt	info.lt@smc.com
Netherlands	+31 (0)205318888	www.smc.nl	info@smc.nl
Norway	+47 67129020	www.smc-norge.no	post.no@smc.com
Poland	+48 22 344 40 00	www.smc.pl	office.pl@smc.com
Portugal	+351 214724500	www.smc.eu	apoiocliente.pt@smc.com
Romania	+40 213205111	www.smcromania.ro	office.ro@smc.com
Russia	+7 (812)3036600	www.smc.eu	sales@smcru.com
Slovakia	+421 (0)413213212	www.smc.sk	sales.sk@smc.com
Slovenia	+386 (0)73885412	www.smc.si	office.si@smc.com
Spain	+34 945184100	www.smc.eu	post.es@smc.com
Sweden	+46 (0)86031240	www.smc.nu	order.se@smc.com
Switzerland	+41 (0)523963131	www.smc.ch	helpcenter.ch@smc.com
Turkey	+90 212 489 0 440	www.smcturkey.com.tr	satis.tr@smc.com
UK	+44 (0)845 121 5122	www.smc.uk	sales.gb@smc.com
South Africa	+27 10 900 1233	www.smcza.co.za	Sales.za@smc.com