


3361479 HGPL-14-20-A-B Parallel gripper - Series: All

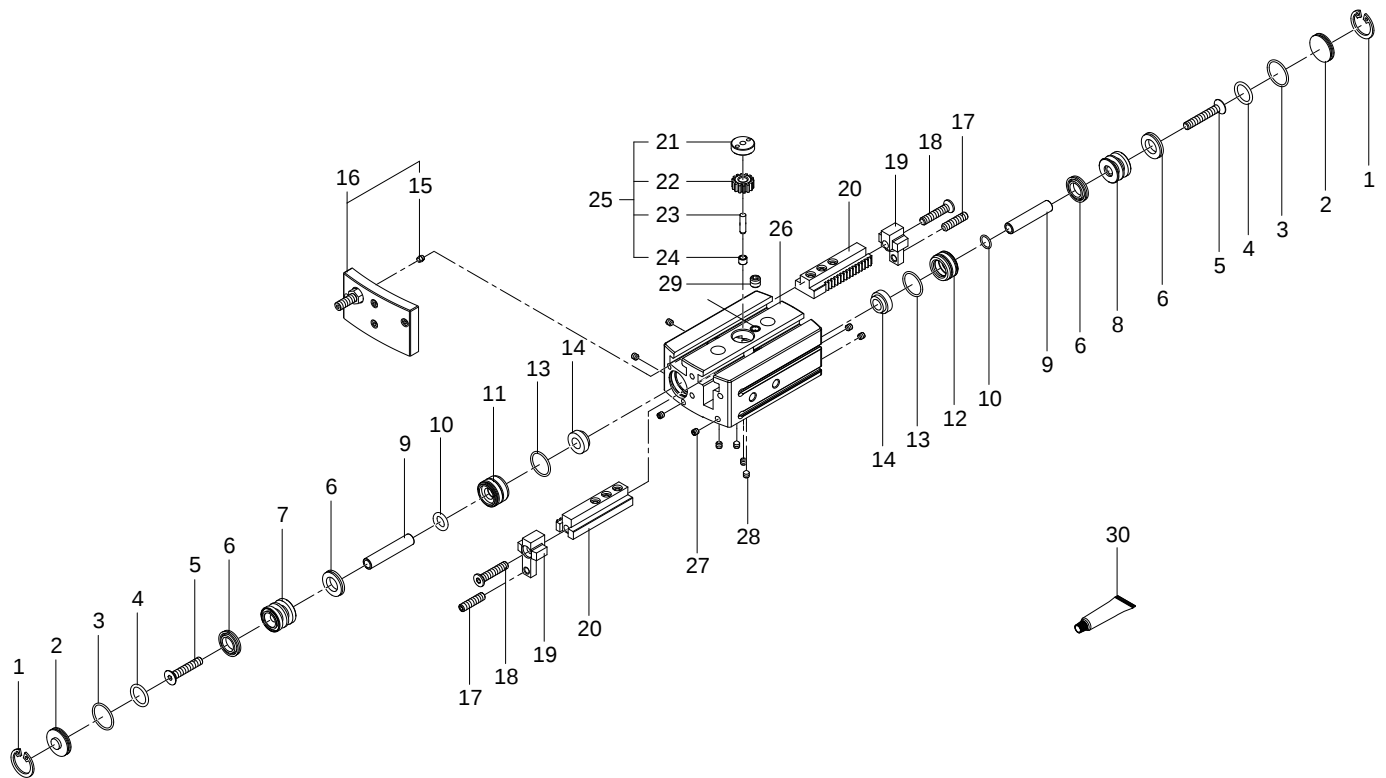

3361479 HGPL-14-20-A-B Parallel gripper - Series: All

Pos.	Part no.	Type	Note	Qty.	Unit
A	701585	HGPL-14-A Set of wearing parts	Spare parts: 1, 3, 4, 6, 10, 13, 14, 30	1	PC
1			Not available separately, see position A	2	PC
2			Not available	2	PC
3			Not available separately, see position A Grease using during assembly. See position 30	2	PC
4			Not available separately, see position A Grease using during assembly. See position 30	2	PC
5			Not available	2	PC
6			Not available separately, see position A Grease using during assembly. See position 30	4	PC
7			Not available	1	PC
8			Not available	1	PC
9			Not available	2	PC
10			Not available separately, see position A Grease using during assembly. See position 30	2	PC
11			Not available	1	PC
12			Not available	1	PC
13			Not available separately, see position A Grease using during assembly. See position 30	2	PC
14			Not available separately, see position A Grease using during assembly. See position 30	2	PC
15	373996	4,1X6,8 Buffer element		1	PC
16	539092	HGPL-HR-14 Stroke reduction		1	PC
17			Not available	2	PC
18			Not available	2	PC
19			Not available	2	PC
20			Not available	2	PC
21			Not available	1	PC
22			Not available	1	PC
23			Not available	1	PC
24			Not available	1	PC
25	3836187	HGPL-14-...-A / -B Assortment of spare parts		1	PC
26			Not available	1	PC
27			Not available	8	PC
28			Not available Tighten screw slightly and then unscrew it by a quarter turn	2	PC
29			Not available Lubricate with Molykote BR2 Plus during assembly	1	PC
30	665354	LUB-KB1-SILIKONFREI-20ML Lubricating grease	Only for piston chamber!	1	PC