



FEATURES

- USB to RS485 with 5V supply from USB. Used with EA HMI displays for project update from PC.



ORDERING CODE

USB to RS485 with PSU (from USB)

EA 9785-1USB