

Soldering Iron Spares

Spare Description	TCP	TCP-3m	TCP-Z	TCP-12v	W60D	W60E	W100D	W100E	W201D	W201E	EC1201A	EC1301A	WSTA-1	WSTA-2	WSTA-3	WSTA-4
Barrel Assembly	BA60	BA60	BA60	BA60-(12v)	-	-	-	-	-	-	BA60	MBA-H	WP72-M	-	WP72-M	-
Capacitor	SK1603	SK1603	SK1603	SK1603	SK1603	SK1603	SK1603	SK1603	SK1603	SK1603	-	-	-	-	-	-
Connector Assembly	510738	510738	-	510738	510738	510738	510738	510738	-	-	-	-	-	-	-	-
Cord Clamp Holder	-	-	510836	-	-	-	-	-	-	-	-	-	-	-	-	-
Cord Clamp Lock	-	-	510837	-	-	-	-	-	-	-	-	-	-	-	-	-
Cord Set	-	-	-	-	-	-	-	-	-	-	-	511536	-	-	-	-
Gas Refill	-	-	-	-	-	-	-	-	-	-	-	-	PGR1	PGR1	PGR1	PGR1
Flange Insulator	510729	510729	510832	510729	510729	510729	510729	510729	-	-	-	-	-	-	-	-
Foam Sleeve	511017	511017	511017	511017	511017	511017	511017	511017	-	-	511017	511019	-	-	-	-
Handle	511013	511013	510776	511012	511009	511010	511007	511008	SK1896A	SK1896A	SK1023B	-	-	-	-	-
Heating Element	HE-1	HE-1	HE-10	HE-1 (12v)	HEW60D	HEW60E	HEW100D	HEW100E	HEW201D	HEW201E	HE1	SK312	-	-	-	-
Heating Element Screw	511002	511002	510842	511002	511002	511002	511002	511002	511002	511002	511002	-	-	-	-	-
Lead	-	-	-	510743	510781	510781	510781	510781	-	-	-	-	-	-	-	-
Lead and Plug	510742	510780	510827	-	-	-	-	-	-	-	-	-	-	-	-	-
PCB/Switch/Assembly	-	-	SW9	-	-	-	-	-	-	-	-	-	-	-	-	-
Plug	SK353	SK353	SK353	-	-	-	-	-	-	-	-	-	-	-	-	-
Switch Assembly/Sensor	SW1	SW1	SW1	SW1	SW1	SW1	SW8	SW8	SW3	SW3	SW5	SK311	-	-	-	-
Switch Spring	SK1590	SK1590	SK1590	SK1590	SK1590	SK1590	SK1590	SK1590	SK1590	SK1590	-	-	-	-	-	-
Tip Nut	-	-	-	-	KN60A	KN60A	KN100A	KN100A	KN200A	KN200A	-	-	-	WP7114	-	-

N.B Contact the Service Department for advice on any spare part not listed above. Telephone (091)-4166062

Fax (091) 4169286

Fume Extraction Spares

Spare Description	TCP-FE	TCP-3m-FE	TCP-Z-FE	PS-2D-FE	PS-2E-FE	PS-3D-FE	PS-3E-FE	EC2100A-FE	EC-FE	W60D-FE	W60E-FE
Brush	SK385	SK385	SK385	SK385	SK385	SK385	SK385	SK385	SK385	SK385	SK385
Case Bottom	-	-	-	511041	511041	511041	511041	-	-	-	-
Case Top	-	-	-	511045	511047	511044	511046	-	-	-	-
ESP 4 mm Socket	-	-	-	511053	511053	-	-	-	-	-	-
Front Panel	-	-	-	511049	511049	511048	511048	-	-	-	-
Fume Extraction Tube	FE-T	FE-T	FE-T	-	-	-	-	FE-T	FE-T	FE-T	FE-T
Funnel	-	-	-	510186	510186	510186	510186	-	-	-	-
Fuse	-	-	-	511511	511656	511511	511656	-	-	-	-
Fuse Holder	-	-	-	511059	511059	511059	511059	-	-	-	-
Handle	FE-H	FE-H	FE-H	-	-	-	-	FE-H	FE-H	FE-H	FE-H
Heating Element	HE-FE	HE-FE	HE-FE	-	-	-	-	HE-FE	HE-FE	HE60D-FE	HE60E-FE
Mains Lead	-	-	-	511050	511050	511051	511051	-	-	-	-
Power Unit Socket	-	-	-	510352	510352	510352	510352	-	-	-	-
'S' Clip	510945	510945	510945	-	-	-	-	-	-	510945	510945
Sponge	-	-	-	511518	511518	511518	511518	-	-	-	-
Spring	-	-	-	511060	511060	511060	511060	-	-	-	-
Strap	-	-	-	511058	511058	511058	511058	-	-	-	-
Switch Illuminated	-	-	-	511512	511512	511512	511512	-	-	-	-
Transformer	-	-	-	511502	511503	511502	511503	-	-	-	-
Transformer Mounting Screw	-	-	-	511052	511052	511052	511052	-	-	-	-

N.B Contact the Service Department for advice on any spare part not listed above. Telephone (091)-4166062

Fax (091) 4169286

Desoldering Station Spares

Spare Description	DS701D	DS701E	DS801	DS811	DS900	DS900P
Aluminium Baffle	510974	510974	510974	510974	-	-
Clean Out Tool	DS205	DS205	DS205	DS205	DS205	DS205
Desoldering Headset	DS123	DS123	DS122	DS122	DS121	DS121
Filter Cartridge	SK1307	SK1307	SK1307	SK1307	-	-
Filter Cartridge Disc	SK1308	SK1308	SK1308	SK1308	-	-
Finger Switch	510992	510992	510992	510992	-	-
Foam Sleeve	DS3-105	511017	511017	511017	511017	-
Footswitch	-	-	DS109	DS109	DS109	DS109
Gaskets	G3104	G3104	G3104	G3104	F49	F49
Glass Tube	DS203	DS203	DS203	DS203	DS103	DS103
Heating Element	510744	510744	510744	510744	HE-1	HE-1
Mineral Wool	MW100	MW100	MW100	MW100	MW100	MW100
Pump	5871170S	5871170S	5871170S	5871170S	-	5111560
Solenoid	-	-	-	-	SK910	-
Sponge	511518	511518	511518	511518	511518	511518
Switch Assembly/Sensor	SW5	SW5	SW5	SW5	SW1	SW1
Switch Button	5109931	5109931	5109931	5109931	-	-
Vacuum Tube	VT1	VT1	VT1	VT1	VT1	VT1
Vanes x 3	513619	513619	513619	513619	-	-
Venturi	-	-	-	-	SK912	-

N.B Contact the Service Department for advice on any spare part not listed above. Telephone (091)-4166062

Fax (091) 4169286

Power Unit Spares

Spare Description	DS701D	DS701E	DS801	DS811
Case Bottom	511041	511041	511041	511041
Case Top	511045	511047	511044	511046
ESP 4 mm Socket	511053	511053	-	-
Front Panel	511049	511049	511048	511048
Funnel	510185	510185	510185	510185
Fuse	511511	511656	511511	511656
Fuse Holder	511059	511059	511059	511059
illuminated Switch	511512	511512	511512	511512
Mains Lead	511050	511050	511051	511051
Power Unit Socket	510352	510352	510352	510352
Sponge	511518	511518	511518	511518
Spring	511060	511060	511060	511060
Strap	511058	511058	511058	511058
Transformer	511502	511503	511502	511503
Transformer Mounting Screw	511052	511052	511052	511052

N.B Contact the Service Department for advice on any spare part not listed above. Telephone (091)-4166062

Fax (091) 4169286