



Level the mount and mark.




Drill the mounting holes.

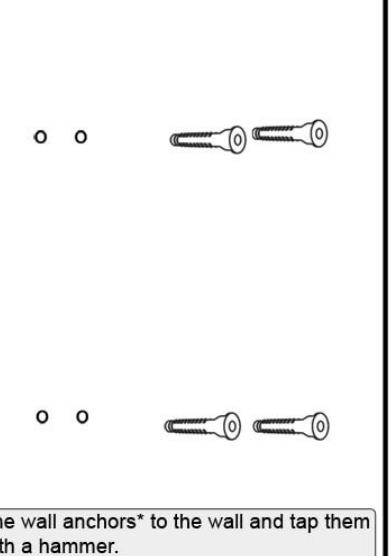


Insert the wall anchors* to the wall and tap them flush with a hammer.
*Never use wall anchors on drywall

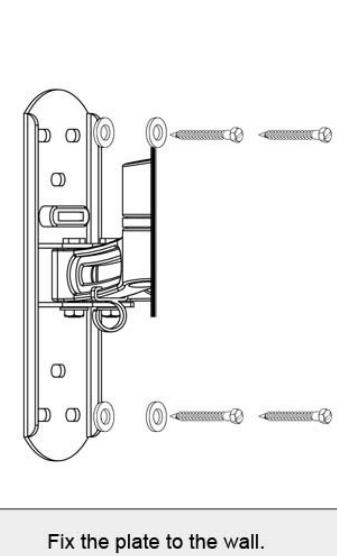


Fix the plate to the wall.

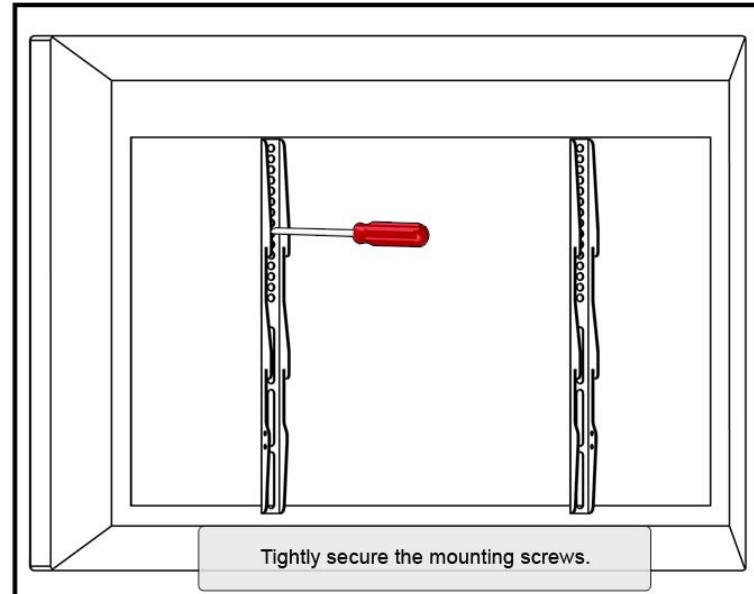


Tightly secure the mounting screws.

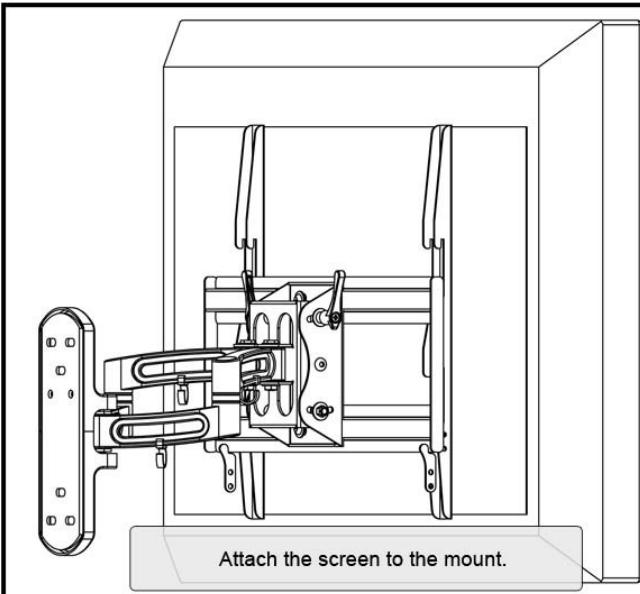

Attach the screen to the mount.

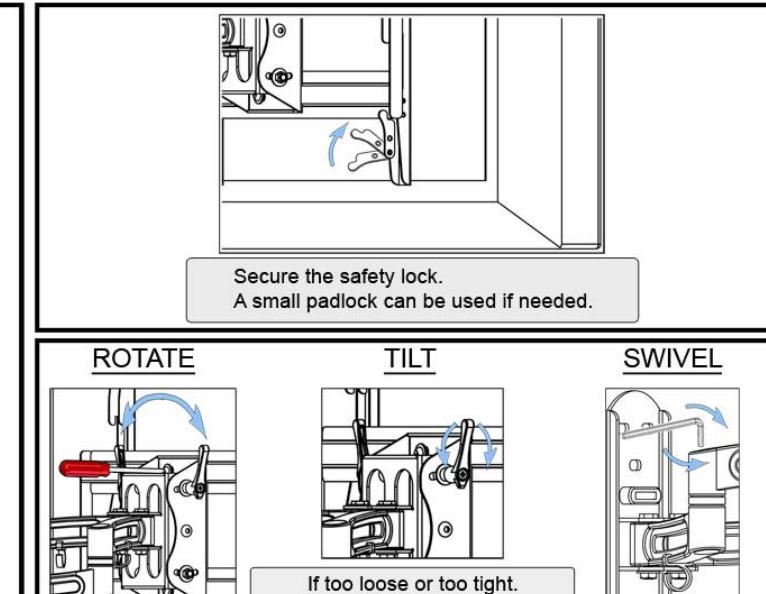

Secure the safety lock.
A small padlock can be used if needed.

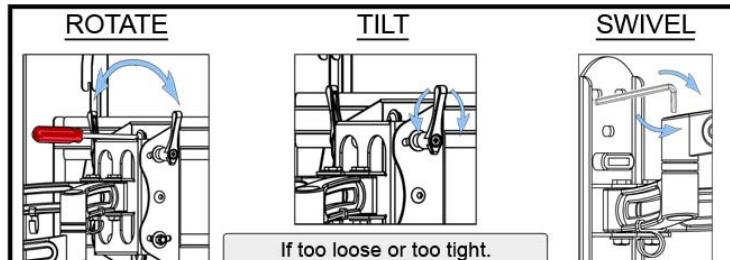

If too loose or too tight.

HARDWARE KIT



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x4



x1

SONOROUS®
SOUND AND VISION IN STYLE