



Electronic Combination Lock



User Instructions

LOWE & FLETCHER LTD
MOORCROFT DRIVE, WEDNESBURY
WEST MIDLANDS WS10 7DE

TEL: +44 (0)121 505 0400
FAX: +44 (0)121 505 0420
EMAIL: sales@lowe-and-fletcher.co.uk
www.lowe-and-fletcher.co.uk

UI-1000LF-V02



OPERATING INSTRUCTIONS

Note: The Electronic Combination Lock has a 10 button keypad and a # button. The # button is hidden beneath the handle when in the locked position. The lock requires a 4 digit code to operate.

The lock has two operating modes:

This lock is currently set to work in the following modes (see tick box below).

☐ **Multi Code Mode**

Note: In this mode the selected code will repeatedly open the lock.

The Multi Code for this lock is

To change the user code, refer to the instructions on the next page.

☐ **One Time Code Mode**

Note: In this mode, the 4 digit randomly selected code will open the lock once and then be erased.

Procedure as follows:

- Enter 4 digit code > close cabinet which will now be locked.
- Enter same 4 digit code > lock will open and code will be erased.

Note: When locked in this mode the red ● LED will flash every 5 seconds to indicate locker/cabinet is locked.


Penalty time

- Entering three incorrect codes will cause the lock to shutdown for 10 seconds.

USER INFORMATION

Battery Power

The Electronic Combination Lock should provide well in excess of 15,000 openings, of 4 seconds each, from 2 x AAA 1.5v cells.

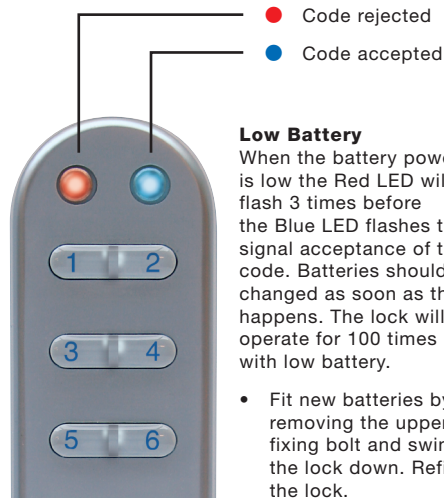

CHANGING USER CODE

Key Sequence

#User Code ● New User Code ● New User Code ● ●
Example: #2244 ● 6688 ● 6688 ● ●

Result

User Code now 6688