




# **Cordless Window Cleaner**

RS Stock Numbers **913-2462 & 913-2471**

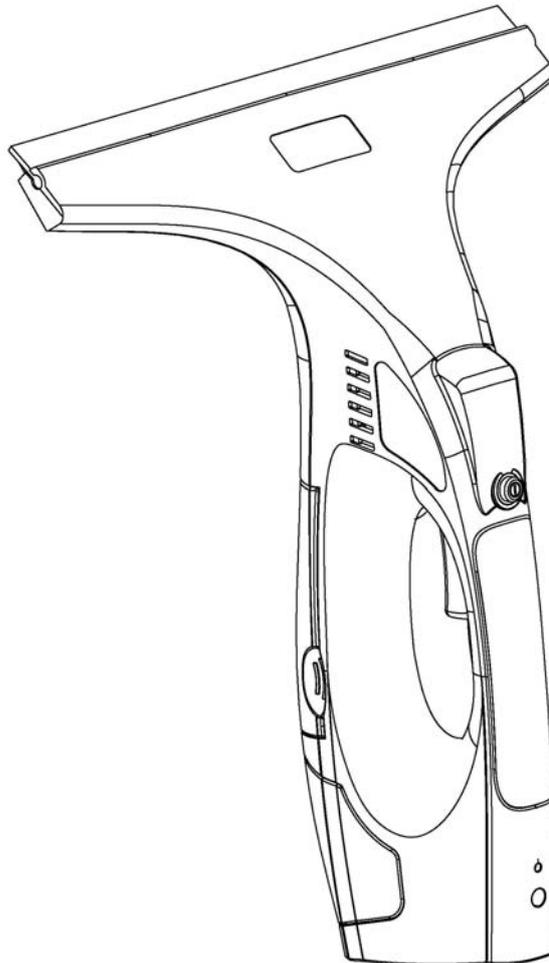

**Thank you for purchase of this product. This manual describes how to use your window cleaner. Be sure that you have read and understood its contents before using our products.**

**PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON**

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

## **Dear customers:**

Please read and comply with these original instructions prior to the initial operation of your appliance and store them for later use or subsequent owners.

### **1.1 Proper use**

- Use this battery operated appliance only for personal use, for cleaning moist, smooth surfaces such as windows, mirrors or tiles. Not meant for the vacuum of dust.
- The appliance is not intended to vacuum up larger amounts of fluids from horizontal surfaces such as from a tipped drinking glass (max. 25ml).
- Only use this appliance with conventional window cleaners (no spirit, no foam cleaners).
- Please use this appliance only with accessories and spare parts approved by our company.
- Any use extending beyond this is not considered as proper use. The manufacturer is not liable for any losses resulting from this; the user alone bears the risk for this.

### **1.2 Safety instructions**

- This device is not intended for use by persons (including children) with reduced physical, sensory or mental abilities or lacking experience and/or knowledge, unless they are supervised by a person responsible for their safety or are instructed by these persons on the use of the device. Children should be supervised to ensure that they do not play with the device.
- Do not put anything into the air louvers.
- Do not spray into eyes.
- Do not spray directly to the electrical components, such as the inside of oven.
- Try to use the microfiber woven one inconspicuous position first before you clean the whole equipment on the sensitive (high shine) surface.

### **1.3 Information regarding the battery**

- Short circuit hazard! Do not insert conductive objects (such as screwdrivers of similar ) into the charger plug.
- You may recharge the battery using only the original charger provided with the appliance or a charger approved by our company.

### **1.4 Tips for using the battery charger**

In case of visual damage, replace the charger with charger cable immediately by original parts.

The voltage indicated on the type plate must correspond to the supply voltage.

Only use and store the charger in dry rooms, ambient temperature 5-40°C.

Never touch the mains plug with wet hands.

The battery has been tested as per the relevant directives for international transport and can be transported / shipped.

## 1.5 Explain the symbol:



This tool conforms to all applicable European Directives



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.




“WARNING – To reduce the risk of injury, user must read instruction manual”

## Method of operating

### 2.1 Description of the appliance

When unpacking the product, make sure that no accessories are missing and that none of the package contents have been damaged. If you detect any transport damages, please contact your dealer.

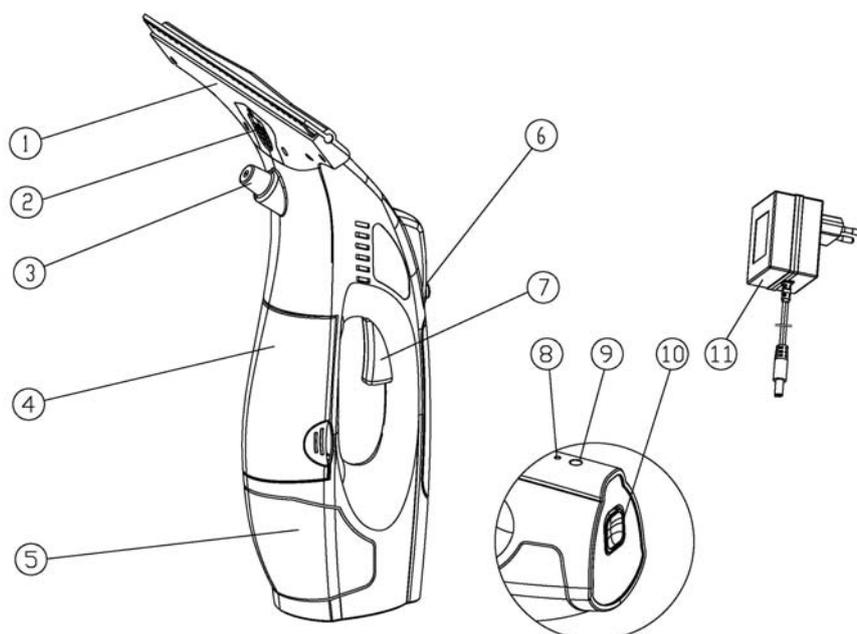


1. Suction wiper
3. Spray nozzle
5. Sanitary water tank
7. Spray switch
9. Charging socket
11. Charger


2. Suction wiper clip
4. Sewage water tank
6. Suction switch
8. Charging indicator
10. Press button

## 2.2 Assemble the appliance

- Place the suction wiper on the suction inlet until you hear click in sound.

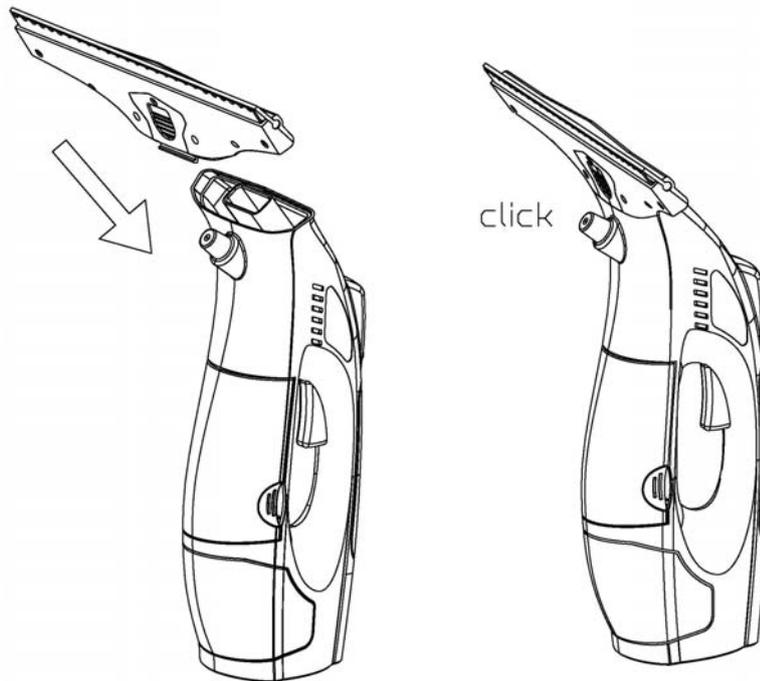

- Press the press-button, remove the sanitary water tank.

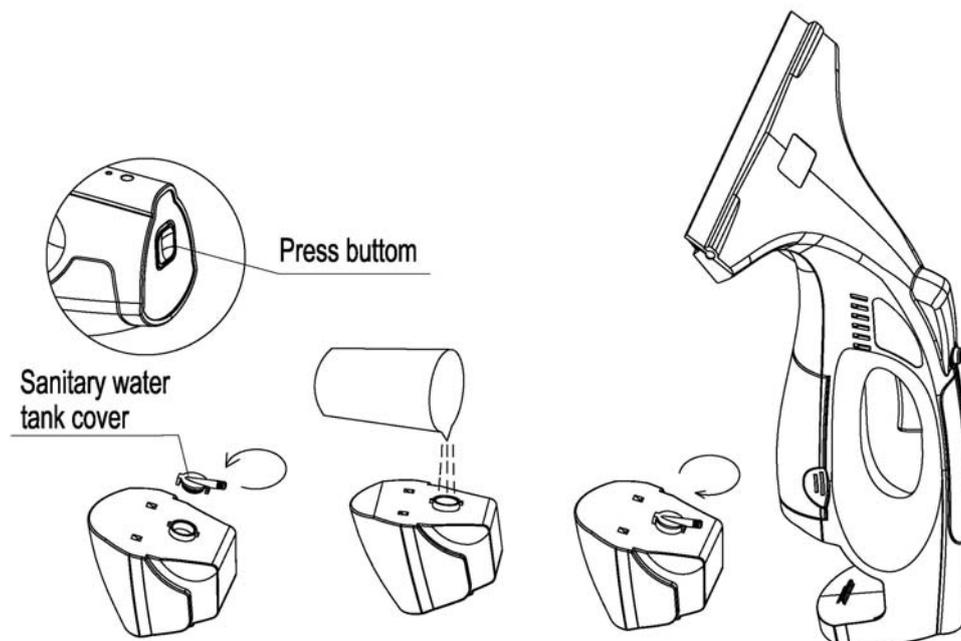


- Remove the sanitary water tank cover, fill sanitary water into the water tank, then close the sanitary water tank cover. Pay attention to the direction of the cover.

Note: please do not fill water higher than the maximum water level.

## 2.3 Charge the battery

- Insert the cable plug of the charger into charging socket of the appliance.
- Insert the charger plug into a proper socket.

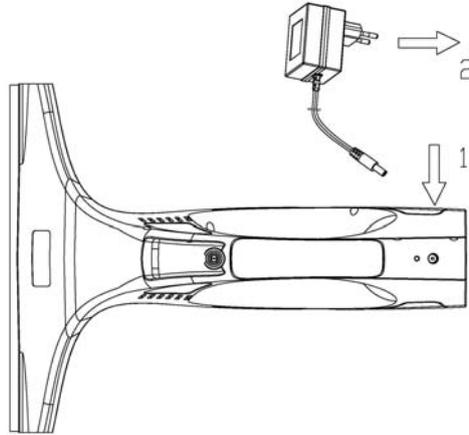


**Note:** during the charging process, the charge indicator is red, once the battery is fully charged it will turn blue.

**Recharge the battery after finishing your work.**

## 2.4 Start working

- Press the spray switch to spray the water on the surface evenly

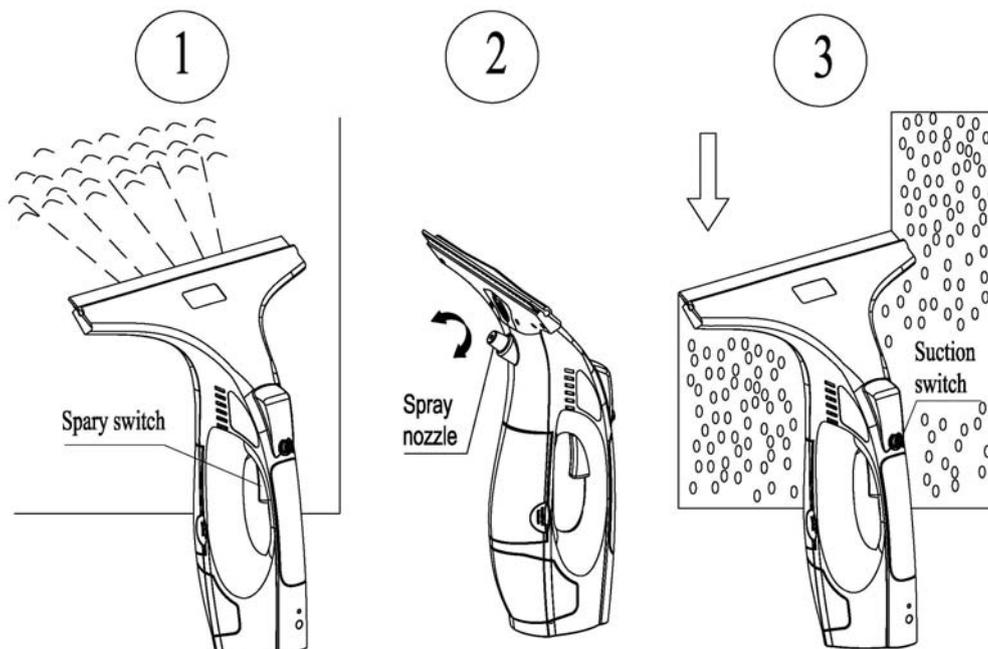

- Adjust the spray nozzle to adjust the area of the spraying water.
- Press the suction switch, switch the appliance on.
- Hold the appliance against the dirty surface from the top to the bottom to scrape and vacuum the dirty water.

Note: Hard to reach areas can be vacuumed vertically or horizontally (limited areas).

Notes:

- If the appliance is in the low battery situation, the appliance will shut off after a certain time, you will recharge the battery.
- Switch the appliance off after each cleaned surface. This will increase your operating time per battery charge.

## 2.5 Working interruption

Switch off the suction switch, put the appliance vertical position.

## 2.6 Finish working

- Remove the Sewage water tank and empty the water tank.



- Close the Sewage water tank

**Caution : Due to the appliance body is assembled by electrical components; please do not clean the appliance body by water!**

## 2.7 Storing the appliance

- Storing the appliance upright in a dry room.

## Troubleshooting

### 3.1 Spray nozzle does not spray

- There is no water in the water tank, refill with water.
- Spray nozzle is screwed too tight, adjust the tightness of spray nozzle.
- Spray nozzle is blocked, remove the spray nozzle and clean the internal parts.
- Pump mechanism in spray defective, contact the dealer.

### 3.2 Mechine does not start.

- Charge your appliance.
- Contact the dealer.

### 3.3 Streaks ehile cleaning

- Clean the removable rubber strip.
- Reverse the used removable rubber strip.
- Undo screw and pull the removable rubber strip out of the suction wiper toward the side. Moisten the rubber strip rounded side with water or detergent. Reinstall the rubber strip into the holder with the reverse side first.

#### **Replace the removable rubber strip if necessary.**

If bothe edges are worn after the rubber strip was reversed, you will need to install new strip. Replace the removable rubber strip as described above.

### Technical specifications

Type of protection	IPX4
Nominal battery voltage	3.6V
Rated power of appliance	12W
Charging time for empty battery	3-5h
Volume of the battery	1500mAh
Battery type	Li-ion