

SAFETY WARNING

Please read carefully and use in accordance with our safety instructions below.

- ✔ **DO** Unplug from the mains before any inspection of the appliance.
- ✔ **DO** Keep children away from sockets and electrical appliances.
- ✔ **DO** Seek expert advice or contact the Masterplug Helpline on 0845 194 7584 if you have difficulty setting your Masterplug RCD Adaptor if your RCD repeatedly trips when in use.
- ✔ **DO** Store and use your RCD between -5°C and $+40^{\circ}\text{C}$.
- ✘ **DON'T** Use your RCD as a substitute for taking normal precautions when using mains electrical power.
- ✘ **DON'T** Use in conditions where the atmosphere is loaded with flammable vapour.
- ✘ **DON'T** Immerse in liquid or use in wet and humid conditions.
- ✘ **DON'T** Drop the unit, and stop use if the case becomes damaged.
- ✘ **DON'T** Use above an altitude of 2,000 metres above sea level.

RCD TYPE: NON LATCHING

Active (non latching) - RCD's switch off if power to them is turned off. Every time the appliance is turned off, the RCD will trip & have to be reset by going to the socket.

TECHNICAL SPECIFICATION

Rated Voltage: 240V a.c. 50Hz

Maximum Current: 13 amps

Maximum Load: 3120 watts

Rated Trip Current: 30mA

Trip Speed: 40mS (Typical-at current 150mA)

Double pole RCD contact break BS7071