

CAMEDIA C-2 Zoom OLYMPUS[®]

D-520 ZOOM

C-220 ZOOM

Quick start guide

We've included this convenient Quick start guide to show you basic functions and techniques that will help you quickly master your new camera. For more detailed descriptions of procedures, as well as for additional information on more sophisticated features not covered here, please refer to the printed "Basic Manual", or the primary "Reference Manual" on the CD-ROM.

Package contents

<input type="checkbox"/> Camera	<input type="checkbox"/> CD-ROM with Windows 98 USB driver software, Reference manual, and more.
<input type="checkbox"/> Strap	<input type="checkbox"/> Warranty card/Registration card (not provided in some areas)
<input type="checkbox"/> AA (R6) alkaline batteries (2 pieces)	<input type="checkbox"/> Safety Precautions (booklet)
<input type="checkbox"/> Video cable	<input type="checkbox"/> SmartMedia
<input type="checkbox"/> USB cable	<input type="checkbox"/> Static-free case
<input type="checkbox"/> Basic manual	<input type="checkbox"/> Index labels (2 pieces)
<input checked="" type="checkbox"/> Quick start guide	<input type="checkbox"/> Write-protect adhesive seals (4 pieces)
<input type="checkbox"/> Software installation guide (included in the CD-ROM package)	<input type="checkbox"/> SmartMedia instructions

OLYMPUS AMERICA INC.

Two Corporate Center Drive, Melville, NY 11747-3157, U.S.A. Tel. 631-844-5000
24/7 online automated help: <http://support.olympusamerica.com/>
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

OLYMPUS OPTICAL CO. (EUROPA) GMBH.

Premises/Goods delivery: Wendenstraße 14-18, 20097 Hamburg, Germany
Tel. 040-237730
Letters: Postfach 10 49 08, 20034 Hamburg, Germany

OLYMPUS[®]
<http://www.olympus.com/>


Printed in Japan

VT351301


3 Shooting/Playback

Taking still pictures


- 1 Open the lens barrier.
Slide the lens barrier open until it clicks. The flash pops up and the lens extends.

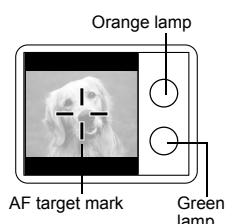


- 2 Position the AF target mark over the subject in the viewfinder.

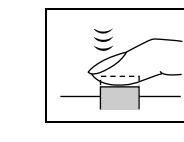

- 3 Press the shutter button gently (halfway).
The green lamp on the right of the viewfinder lights up when the focus and exposure are locked. At this time the sound of the focusing mechanism can be heard from inside the camera, but no picture is being taken.

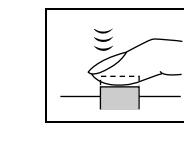


 - 4 Press the shutter button all the way (fully).
The camera takes the picture.




Playing back still pictures


- 1 Press with the lens barrier closed.
The monitor turns on and displays the last picture taken.

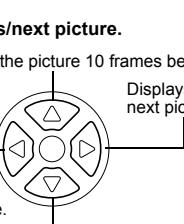

- 2 Press to display the previous/next picture.
Jumps to the picture 10 frames behind.

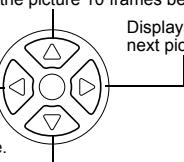

 
- 3 Press to cancel playback.
The monitor and camera turn off.




1 Getting started

Attaching the strap

- 1 Thread the short end of the strap through the strap eyelet.

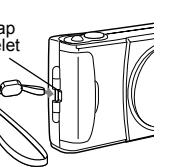


- 2 Thread the long end of the strap through the loop that has already gone through the eyelet.

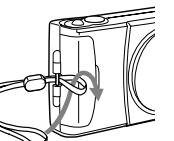


- 3 Pull the strap tight, making sure that it is securely fastened and does not come loose.

Loading the batteries


- 1 Make sure that:

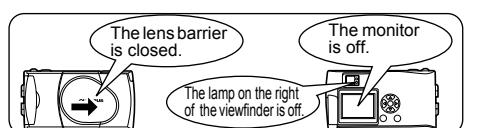

- 2 Slide the battery compartment cover in the direction of (the direction indicated by the arrow mark on the cover), and lift it up in the direction of .

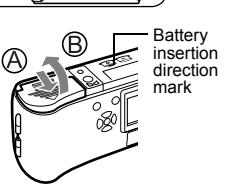

- 3 Insert the batteries, making sure that they are correctly oriented as shown in the illustration.

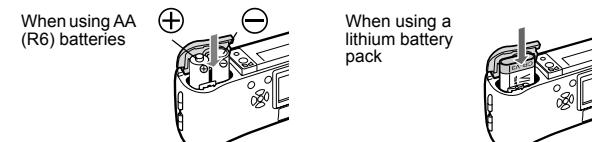


- 4 Close the card cover securely until it clicks.



Inserting the card (SmartMedia)

- 1 Make sure that:

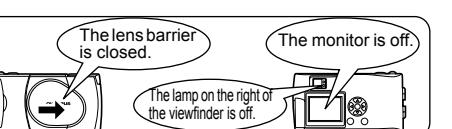


- 2 Open the card cover.




- 3 Insert the card as far as it will go in the direction shown in the illustration.



- 4 Close the card cover securely until it clicks.

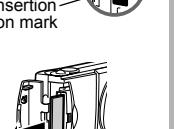

 - 5 Removing the card.
Hold the card with your fingertips and pull it out in the direction of the arrow.



- 6 Never open the card cover, or remove the card or the batteries while the camera is turned on. Doing so could destroy all data on the card. Destroyed data cannot be restored.



2 Turning the power on/off


 

When shooting pictures

Power on:
Open the lens barrier.

Power off:
Close the lens barrier slightly until it just touches the lens barrier.

The camera turns on in the shooting mode. The lens extends and the flash pops up. If the lens does not extend, the lens barrier is not fully open. Open the lens barrier until it clicks.

Wait until the lens is fully retracted, then close the lens barrier completely. The camera turns off. (The monitor also turns off.) Press the flash down manually until it locks in place.

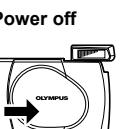
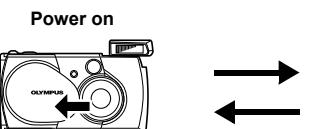


When playing back pictures

Power on:
Press the (monitor) button with the lens barrier closed.

Power off:
Press the (monitor) button.

The camera turns on in the playback mode. The monitor turns on.

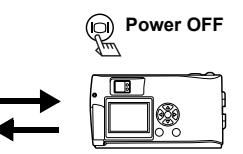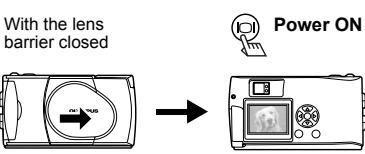

To save battery power, the camera automatically enters the sleep mode after about 3 minutes of non-operation. If the monitor is on, it will automatically turn off. The camera activates again as soon as you lightly press the shutter button or zoom lever. Whenever possible, turn the camera off when you do not intend to take any pictures for a while.

5 Protecting pictures (Protect)

You are recommended to protect important pictures to avoid accidentally erasing them.

- 1 Press with the lens barrier closed.
The monitor turns on.

- 2 Press to select the picture you want to erase.

- 3 Press .

- 3 Press , then press .

- 4 Press to select ERASE.

- 4 Press to select the PLAY tab, then press .

- 5 Press to select YES, then press .

- 5 Press to select ON, then press .

• The indicator is displayed at the top right of the protected picture.

• Protection on each picture remains even when the camera is turned off.

• Protected pictures cannot be erased by the single-frame/all-frame erase function, but they can be all erased with the format function.

• Protection cannot be applied to pictures stored on a card with a write-protect seal.

4 Erasing pictures

Single-frame erase

- 1 Press with the lens barrier closed.
The monitor turns on.

- 2 Press to select the picture you want to erase.

- 3 Press .

- 4 Press to select ERASE.



- 5 Press to select YES, then press .

- 5 Press to select YES, then press .



• Erasure is not possible if the picture you want to erase is protected or a write-protect seal is attached to the card. Before erasing, unprotect the picture or remove the write-protect seal from the card.

• Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.




- 6 Press to select ON.

- 6 Press to select ON.




Names of parts

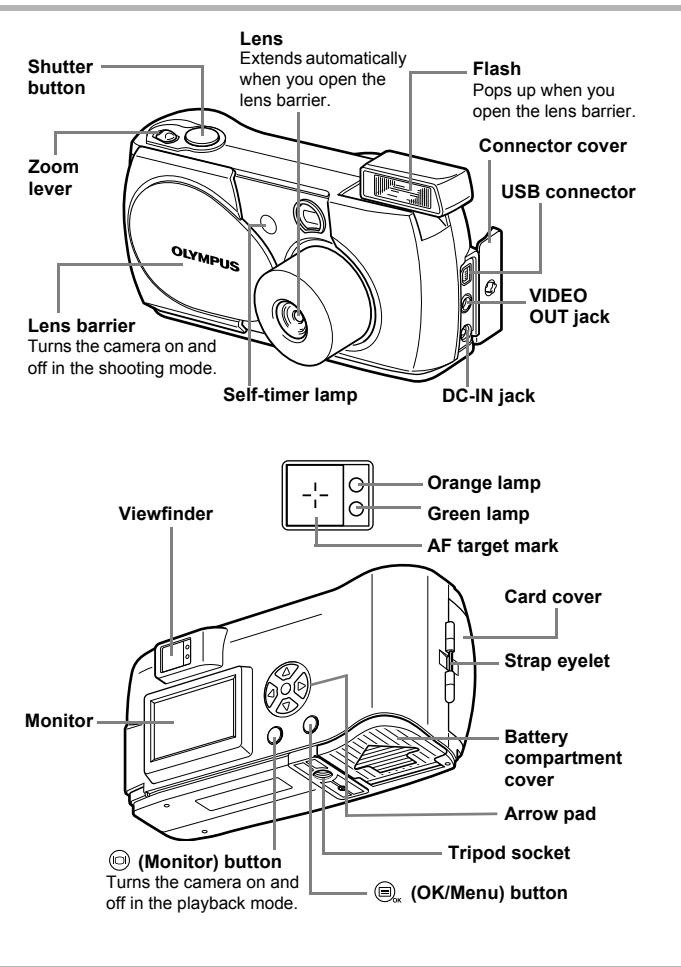

Using the menus and tabs


When you turn on the camera and press , the top menu is displayed on the monitor. The functions of this camera are set from the menus.

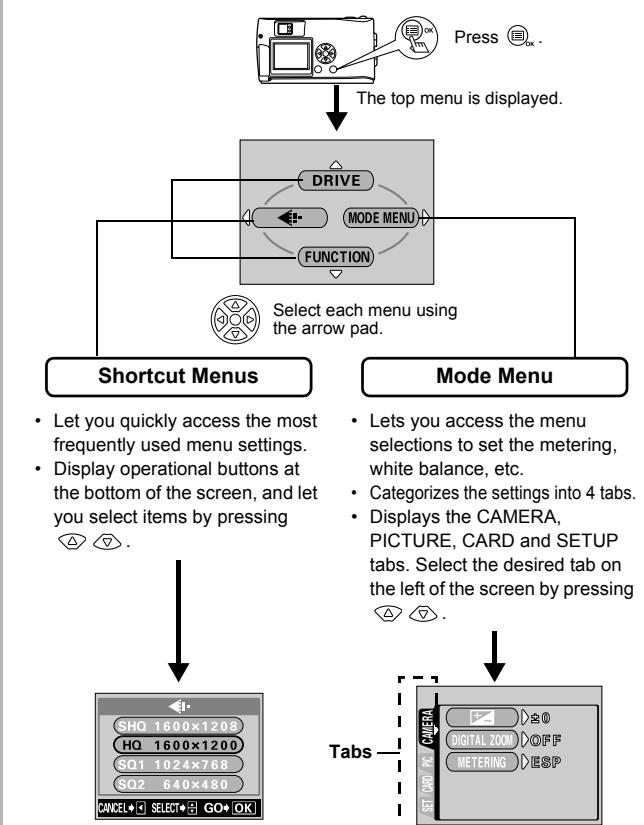


Shortcut menus

Shooting mode

When the still picture shooting mode is selected

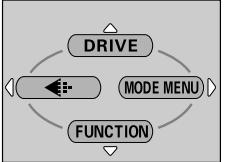

When the movie recording mode is selected

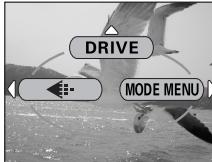

DRIVE

	Lets you shoot one frame at a time (normal shooting).
	Lets you shoot pictures in succession.
	Lets you shoot movies.

Mode Menu

Lets you select the resolution and the quality of the image.

Still picture : SHQ, HQ, SQ1 and SQ2


Movie : HQ, SQ

FUNCTION


	Lets you combine two still pictures taken in succession into one picture.
	Self-portrait mode: Lets you take a picture of yourself while holding the camera.
	Allows panorama pictures to be taken with Olympus CAMEDIA-brand SmartMedia cards.

Playback mode

When a still picture is played back

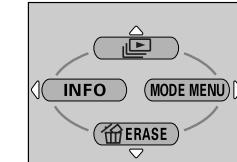

When a movie is played back

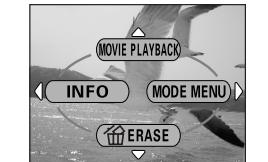

INFO

Displays all recorded pictures in slide-show fashion.

MOVIE PLAYBACK

Plays back a movie.


ERASE

Erases a selected picture.

How to use the menus


1 Press to display the top menu, then press .

Top menu

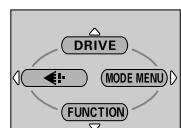


2 Press to select a tab, then press to display the menu.

CAMERA tab

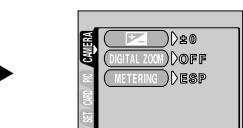

3 Press to select the desired item, then press to display the available setting selections.

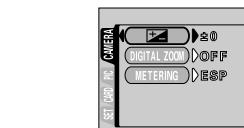

4 Press to select the setting. Setting is completed when the setting has been selected.



To return to select a tab, press .

The green frame moves to the selected item.

To return to select an item, press or .


To close the menu, press twice.

Note
If you want to save the settings after the camera is turned off, set All Reset to OFF.

Mode menus

Mode menu functions are categorized into 4 tabs. Use to select a tab and display the respective functions.

Shooting mode

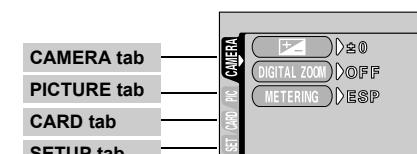

CAMERA tab

Adjusts the brightness of the image (Exposure compensation).

Extends the maximum optical zoom, making possible up to approximately 5x zoom shooting with the digital zoom function.

Selects the area of the image that will be used to determine exposure or image brightness from the two available settings: ESP or (spot metering).

PICTURE tab

Sets the appropriate white balance according to the light source.

CARD tab

Formats a card.

SETUP tab

Selects whether to save the current camera settings when you turn off the power.


Turns the beep sound (used for warnings, etc.) on and off.

Selects whether to display pictures on the monitor while saving them.

Adjusts the brightness of the monitor.

Sets the date and time.

Playback mode

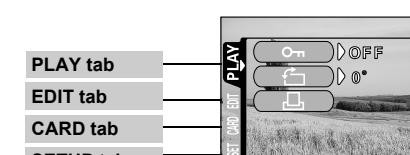

PLAY tab

Protects pictures from accidental erasure.

Rotates pictures 90 degrees clockwise or counterclockwise.

EDIT tab

Creates black and white pictures.

Creates sepia-toned pictures.

SEPIA

Makes the file size smaller.

INDEX

Creates an index picture of a movie in 9 frames.

CARD tab

Formats a card.

Erases all image data stored on the card.

SETUP tab

Selects whether to save the current camera settings when you turn off the power.

Turns the beep sound (used for warnings, etc.) on and off.

Selects the number of frames in the index display.

Adjusts the brightness of the monitor.

Sets the date and time.