

Contactors and Starters

Table 34-77. Auxiliary Contacts

	Conventional Thermal Current, Open at 60°C $I_{th} = I_e$, AC-1 in Amps	Poles	Contact Configuration	Circuit Symbol	Pkg. Qty.	Screw Terminals Catalog Number	Spring Cage Terminals Catalog Number	Price U.S. \$ ①
--	--	-------	-----------------------	----------------	-----------	-----------------------------------	---	-----------------

Frame B – C — Front (Top) Mount

	16	2	2NO		5	XTCEXFAC20	XTCEXFACC20	
	16	2	1NO-1NC		5	XTCEXFAC11	XTCEXFACC11	
	16	2	2NC		5	XTCEXFAC02	XTCEXFACC02	
	16	2	1NO _E -1NC _L		5	XTCEXFALC11 ②	XTCEXFALCC11 ②	
	16	2	1NO-1NC		5	XTCEXFDC11 ③	XTCEXFDC11 ③	
	16	2	2NC		5	XTCEXFCC02 ③	XTCEXFCC02 ③	
	16	4	4NO		5	XTCEXFAC40	XTCEXFACC40	
	16	4	3NO-1NC		5	XTCEXFAC31	XTCEXFACC31	
	16	4	2NO-2NC		5	XTCEXFAC22	XTCEXFACC22	
	16	4	1NO-3NC		5	XTCEXFAC13	XTCEXFACC13	
	16	4	4NC		5	XTCEXFAC04	XTCEXFACC04	
	16	4	1NO _E -1NC _L		5	XTCEXFCLC22 ②	XTCEXFCLCC22 ②	
	16	4	2NO-2NC		5	XTCEXFCC22 ③	XTCEXFCC22 ③	

Frame B — Side Mount

	16	1	1NO		1	XTCEXSAB10	—	
	16	1	1NC		1	XTCEXSAB01	—	

① Orders must be placed in multiples of package quantity listed.

② 1 early-make contact (1NO_E), 1 late-break contact (1NC_L).

③ To avoid duplicate terminal numbers in contact sequence, these auxiliary contacts should only be used with contactors having a built-in 1NO contact (XTCE...B10_, XTCE...C10_).