


1662/1663/1664 FC Electrical Installation Tester

Read all "Safety Information" before you use this Product.


Go to www.fluke.com to register your product and find more information.

To view, print, or download the latest manual or supplement, visit us.fluke.com/user/support/manuals.


To download the Fluke Connect™ app, go to the Apple App Store or Google Play.

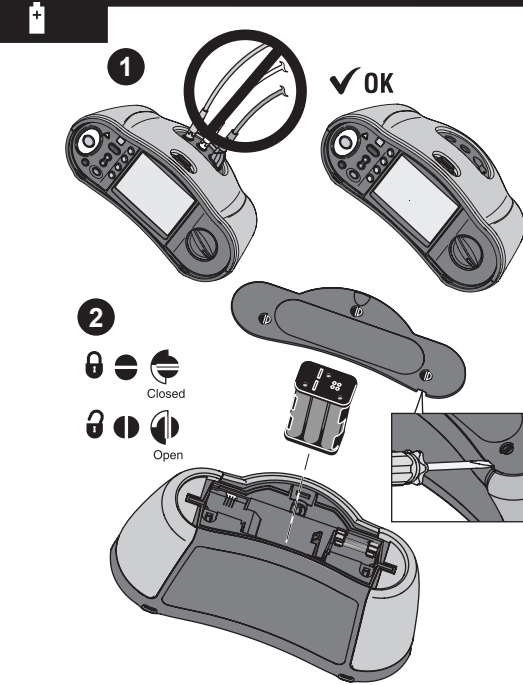


V, Hz

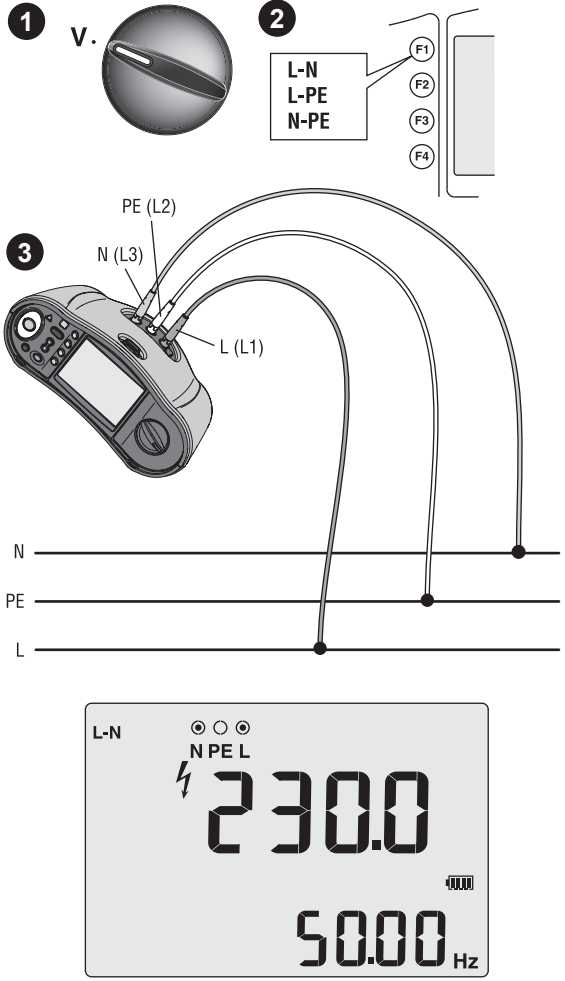


R_{ISO} Insulation · Isolement · Isolation (2-Wire)

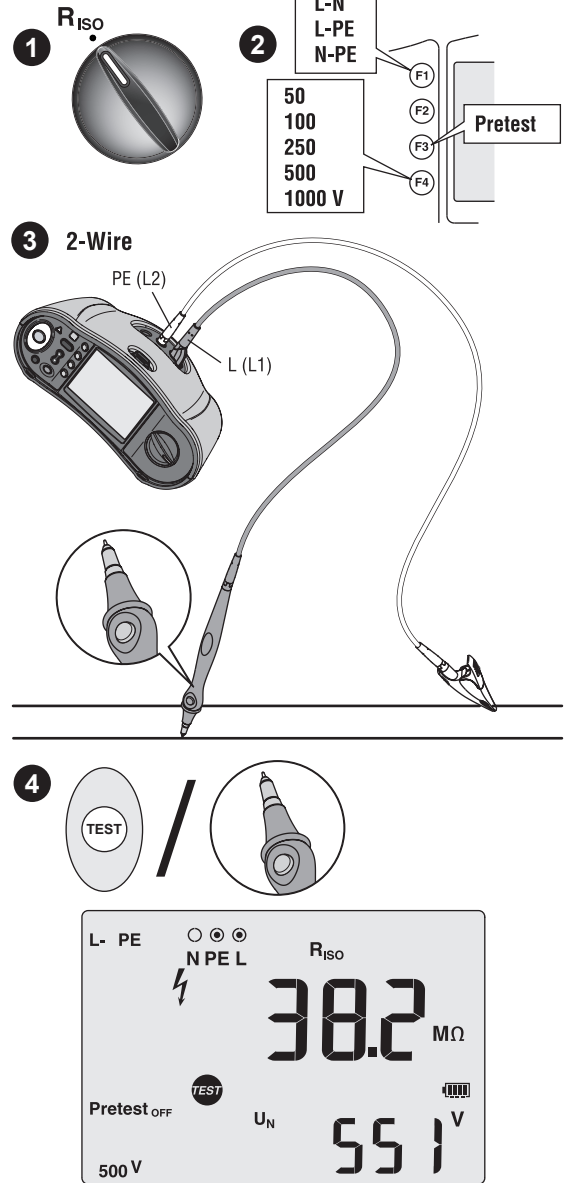


R_{ISO} Insulation · Isolement · Isolation with PRETEST (3-Wire)

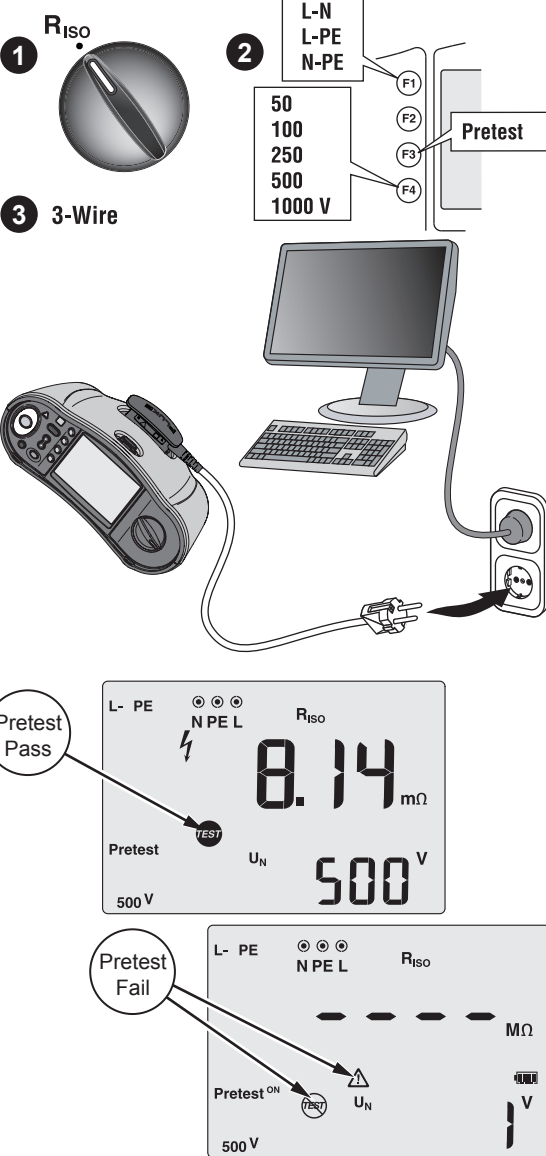

R_{LO} Continuity · Continuité · Niederohm

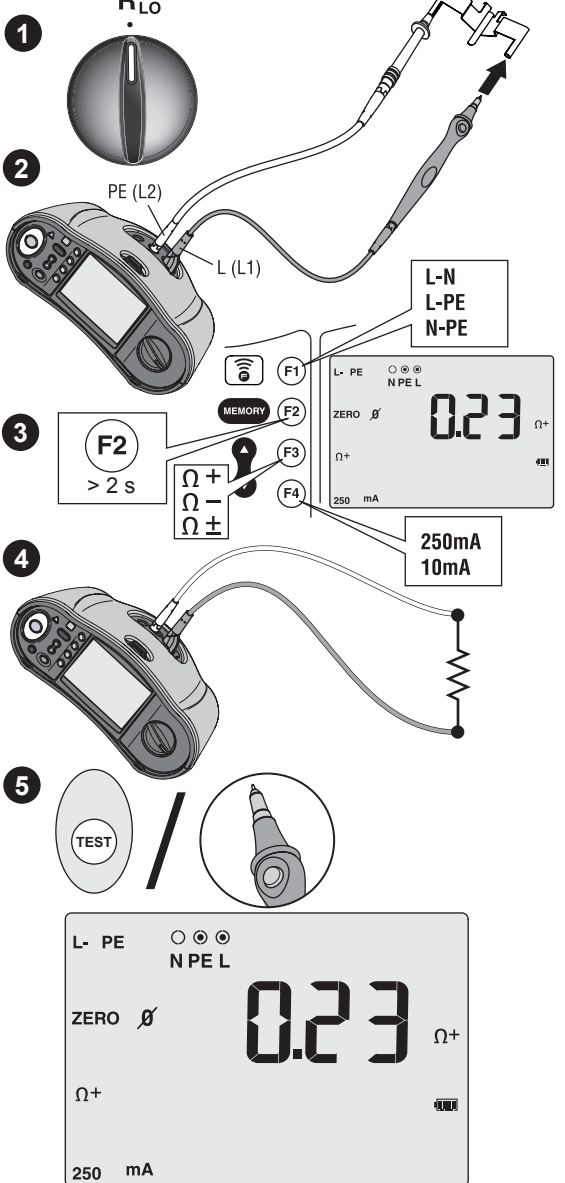

Z_I Loop · Boucle · Schleife

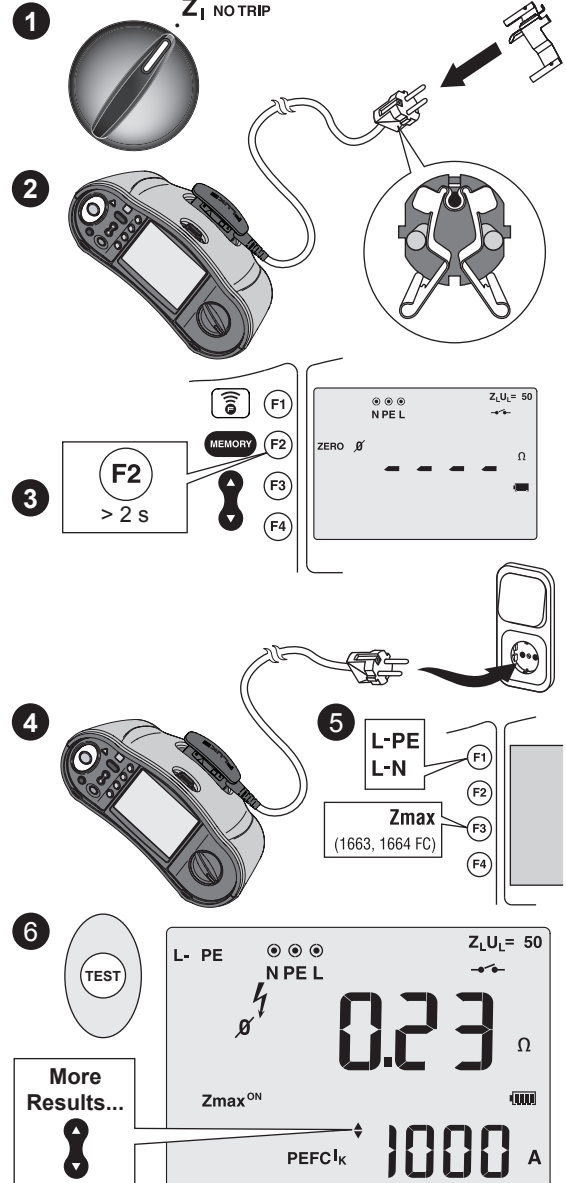

Z_I Loop · Boucle · Schleife

1

2

3

4

5

6

ΔT / I_{ΔN} RCD · Disjoncteur différentiel · FI

1

2

3

4

Phase rotation · Rotation de phase · Phasenfolge (1663, 1664 FC)

1

2

3

4

Auto Test (1664 FC)

1

2

3

4

5

6

1664 FC / Fluke Connect App

To download the Fluke Connect™ app, go to the Apple App Store or Google Play.

1

2

3

4

5

6

7

8