



DREMEL® INSTRUCTIONS

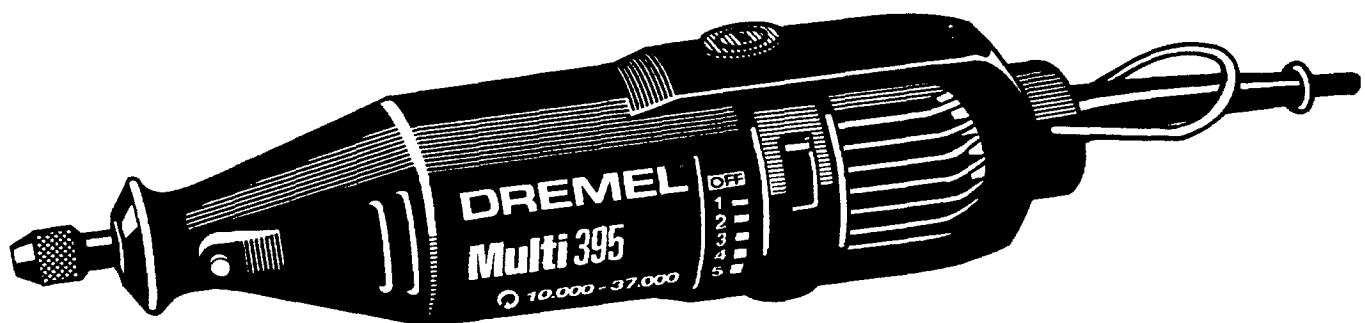


Multi395/3950

GB	INSTRUCTIONS	page 3	FIN	OHJEET	sivu 13
F	INSTRUCTIONS	page 4	E	INSTRUCCIONES	pag. 14
D	HINWEISE	Seite 6	P	INSTRUÇÕES	pag. 16
NL	INSTRUCTIES	bladz. 8	I	ISTRUZIONI	pag. 18
S	INSTRUKTIONER	sida 10	H	LEÍRÁS	oldal 20
DK	INSTRUKTION	side 11	GR	ΟΔΗΓΙΕΣ	σελιδα 21
N	ANVISNINGEN	side 12	CZ	POKÝNY	strana 23


1

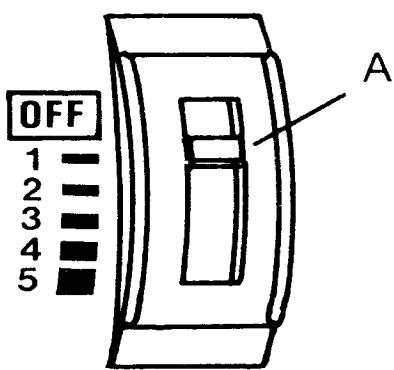


2

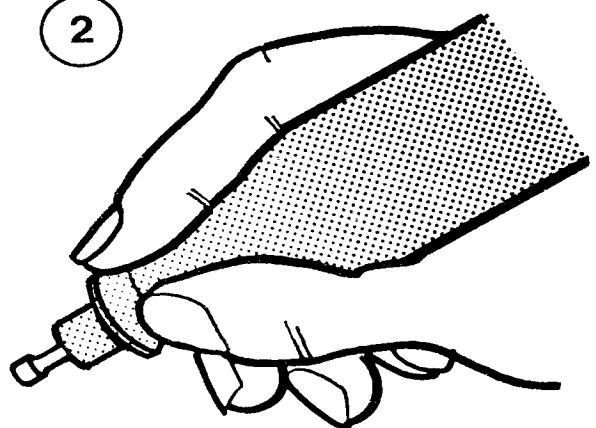

4

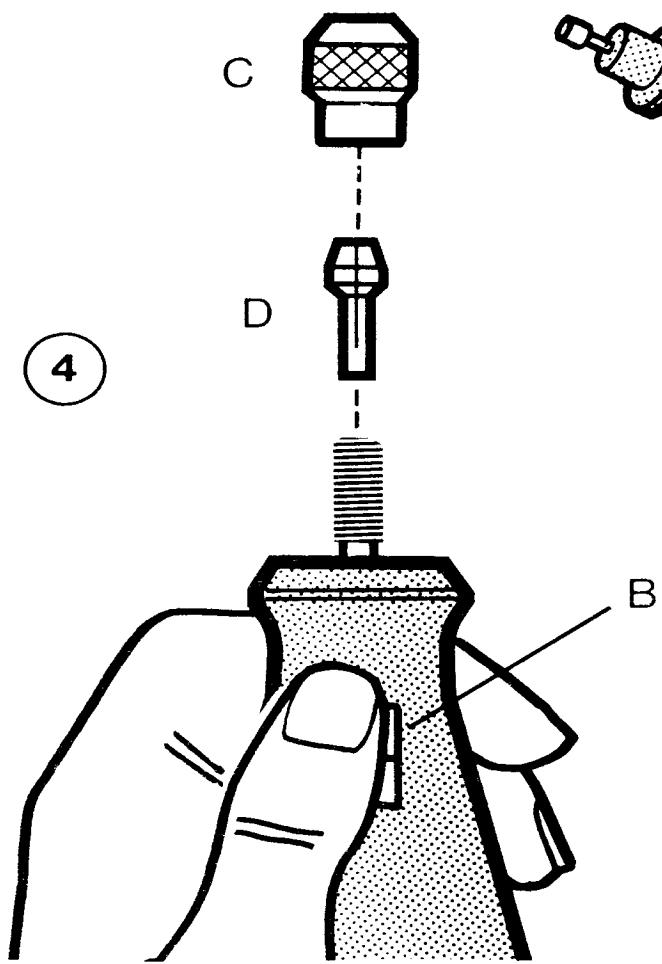

3

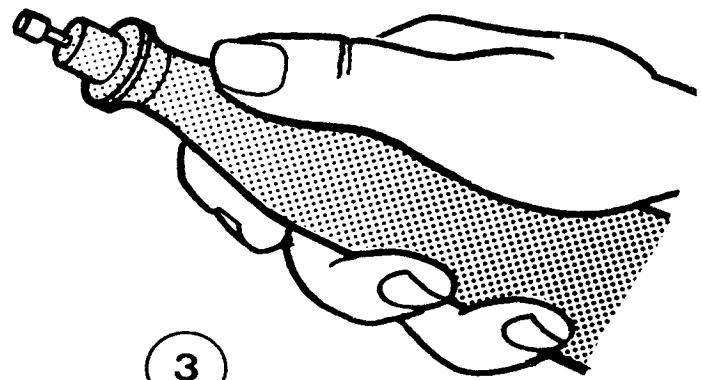

INTRODUCTION

- By purchasing this tool you are now the owner of one of the better products of its kind
- To get the optimum benefit from the tool we advise you to read this instruction manual thoroughly
- Always keep this instruction manual together with the tool

TECHNICAL SPECIFICATIONS

	395	3950
Input	125 W	125 W
Weight	0.45 kg	0.45 kg
No load speed r.p.m.	10,000- 37,000	10,000- 37,000
Capacity collet	3.2 mm	3.2 mm
Shaft lock	+	+

Double insulated according to the European safety standards (EN 50 144)

STANDARD EQUIPMENT

	395	3950
Collet & "Quick-Change" collet nut	+	+
Set of 15 accessories	+	-
Set of 40 accessories	-	+
Carrying case	-	+
Key	+	+

ACCESSORIES

- Use the original DREMEL accessories which can be obtained from your DREMEL dealer
- The DREMEL accessories have been selected to give the tool the highest performance

FOR YOUR OWN SAFETY

- Read and save the enclosed safety instructions
- Always keep the cord away from moving parts of the tool
- When you put away the tool, switch off the motor and ensure that all moving parts have come to a complete standstill
- In case of jamming, immediately switch off the tool and disconnect the plug
- Use completely rolled-off and safe extension cords with a minimum capacity of 16 Amps
- Before using accessories always compare the maximum allowed r.p.m. of that specific accessory with the r.p.m. of the tool

- Never fasten an accessory key to the tool with a piece of rope or something similar
- Avoid injury by using, where necessary, personal protection material like safety-goggles, safety-gloves, safety-shoes, etc.
- This tool should not be used by people under the age of 16 years
- Avoid hearing damage by using hearing protection, when noise level at work area exceeds 85 dB (A)
- Never use grinding wheels over 1 1/4" (32 mm) Ø
- Never use drill bits over 1/8" (3.2 mm) Ø
- Never use shaft lock while tool is running
- Store tool in locations where temperature will not exceed 50°C
- Ensure that the collet size corresponds with the shaft size of the accessory

HOW TO HANDLE

- On/off switch with speed control ①
 - switch on the tool and select speed by pushing knob A in desired position
 - 5 speed settings are possible
- Holding and guiding the tool
 - pencil grip for precision work (engraving) ②
 - hand grip for rough work (grinding) ③
- Keep the air vent openings clean and uncovered
- Mounting accessories ④
 - ! check if switch is in "OFF"-position
 - push button B and hold it while you
 - 1) turn "Quick-Change" collet nut C by hand until shaft locks
 - 2) open collet D by loosening collet nut C by hand (use key provided, if necessary)
 - 3) insert accessory
 - 4) close collet D by tightening collet nut C by hand
 - release button B

APPLICATION ADVICE

- Always practice on a piece of scrap material first to choose the right accessory and determine the optimum working speed
- Recommended speed

low	- medium	cleaning, polishing
medium	- high	all other applications
- Do not apply too much pressure on the tool; let the speed do the work for you

MAINTENANCE + TROUBLE SHOOTING

- Keep tool and cord clean
 - ! some household cleaning products and solvents can damage plastic parts; these products include among others benzine, trichloroethelene, chloride, ammonium
- Excessive sparking mostly indicates the presence of dirt in the motor or worn-out carbon brushes
- In case of electrical or mechanical malfunction,

- immediately switch off the tool and disconnect the plug
- In case of an electrical or mechanical defect, hand in tool at one of the DREMEL Service Stations for repair

AT YOUR SERVICE

- Repairs should be carried out only at DREMEL Service Stations
- Addresses of DREMEL Service Stations are listed on the "Bulletin" supplied with the tool

YOUR GUARANTEE

This DREMEL product has been carefully inspected before leaving the factory and carries a guarantee of 24 months from the date of purchase during which period any defect caused by faulty material or manufacture will be corrected without charge. Damage due to normal wear and tear, overload or improper handling will be excluded from the guarantee. In case of a complaint, please, send the tool **undismantled** together with proof of purchase to the nearest DREMEL Service Station, **postal charges prepaid**. DREMEL reserves the right to decline responsibility in case of repairs made by persons other than DREMEL service staff. In no event compensation can be claimed in case of damage to the workpiece or injury to the tool user.

This guarantee does not affect your statutory rights (UK only).

F

INTRODUCTION

- Par l'achat de cet outil, vous êtes désormais propriétaire d'un des meilleurs produits dans cette catégorie
- Pour un rendement maximum de votre outil, nous vous conseillons de lire sérieusement ce manuel d'instruction
- Veuillez toujours conserver ce manuel avec votre outil

SPECIFICATIONS TECHNIQUES

	395	3950
Puissance absorbée	125 W	125 W
Poids	0,45 kg	0,45 kg
Vitesse à vide tr./min	10.000- 37.000	10.000- 37.000
Capacité pince	3,2 mm	3,2 mm
Blocage de l'arbre	+	+

Double isolation conforme aux normes de sécurité européenne (EN 50 144)

EQUIPEMENT STANDARD

	395	3950
Pince et chapeau "Quick-Change"	+	+
Ensemble de 15 accessoires	+	-
Ensemble de 40 accessoires	-	+
Coffret de rangement	-	+
Clé	+	+

ACCESOIRES

- Utiliser les accessoires d'origine DREMEL qui peuvent être obtenus chez votre détaillant DREMEL
- Les accessoires DREMEL sont sélectionnés pour donner à votre outil la plus haute performance


POUR VOTRE SECURITE

- Lire et conserver les instructions de sécurité jointes
- Garder toujours le câble éloigné des parties mobiles de votre outil
- Lorsque vous rangez votre outil, le moteur doit être coupé et les pièces mobiles complètement arrêtées
- En cas de blocage, arrêter immédiatement l'outil et débrancher la prise
- N'utiliser qu'une rallonge en parfait état, complètement déroulée, et d'une capacité minimum de 16 ampères
- Avant d'utiliser des accessoires, toujours comparer le maximum autorisé de tr./min. de l'accessoire avec celui de votre outil

DREMEL®

Multi MODEL 395

395:14, 395:32, 395:34, 395:41, 395:83

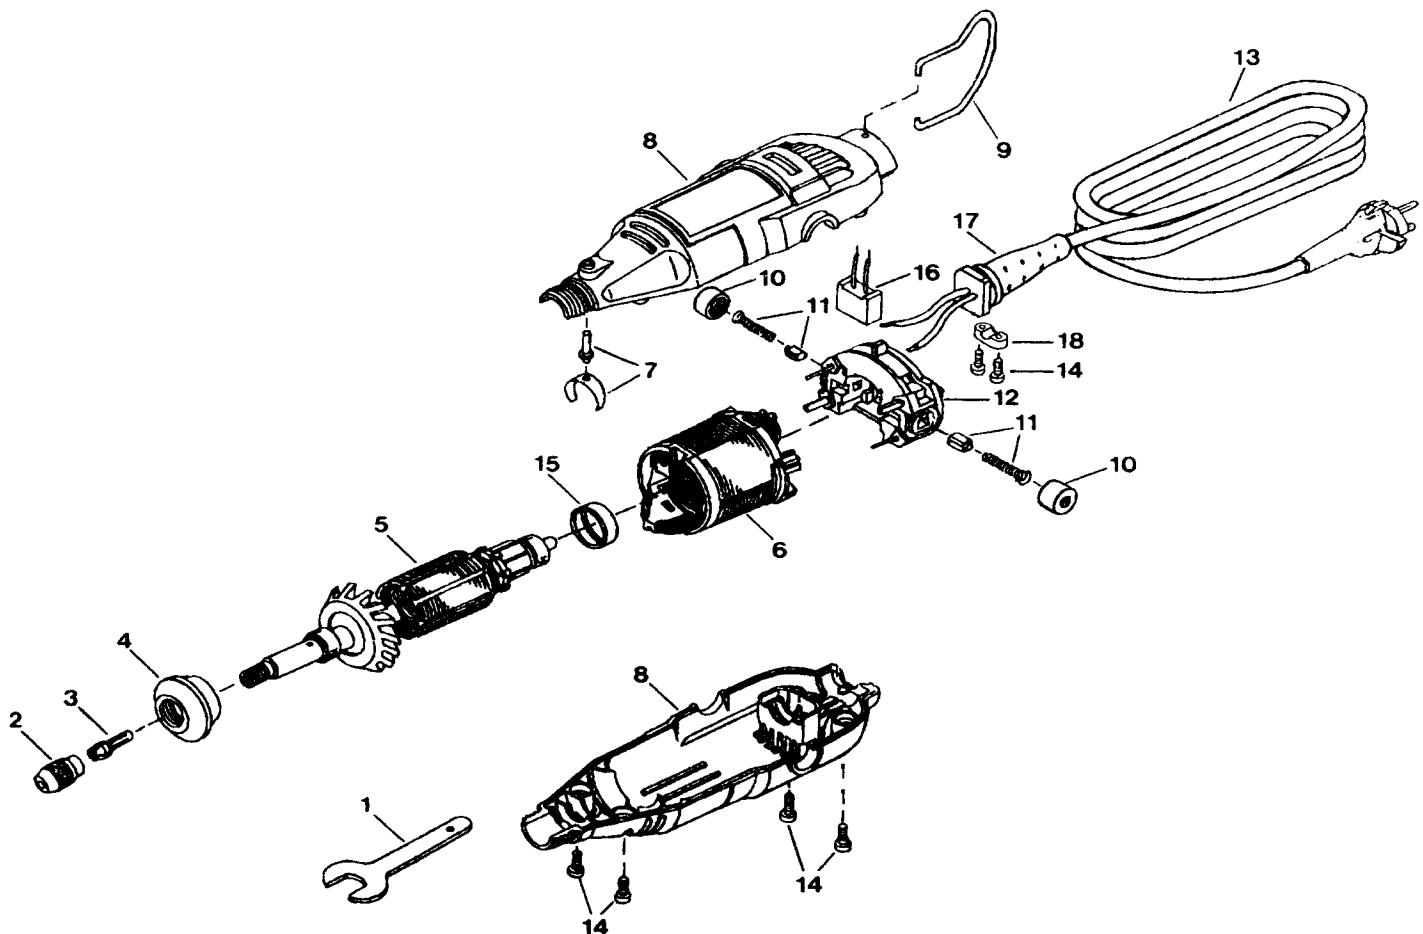

KEY NO.	PART NO.
1	5990962
2	5004484
3-a	5000480
3-b	*5000481
4	529402870
5	2615298789
6	2615298792
7	5297356
8-a	●2610967954
8-b	▲2610967956
8-c	■2610967957
9	529404370
10	529487470
11	2615298790
12	2615298791
13-a	●5280071
13-b	▲5294819
13-c	■5294809
14	2615298796
15	2615297373
16	2615298795
17	2615298794
18	2615298793
* 3950	
● 395:83	
▲ 395:32,395:14,395:34	
■ 395:41	