 
 


Operation Manual

 


FRONT



BACK

Velcro Tape Affixes to Kitchen Cabinet



TO SET TIME

1. Slide switch to **CLOCK SET**.
2. Press **HR** or **MIN** button to desired time.
3. Slide switch to **LOCK** after time set.

12HR AM/PM OR 24HR INTERNATIONAL TIME DISPLAY

- Simply slide the **12HR/24HR** switch to choose your desired format.

To select °C or °F readout:

Slide switch to °C or °F position

THERMOMETER

Normal display shows indoor and outdoor temp in 1/2 degree



MAX-MIN Temperature Memory

To facilitate **HOURLY, DAILY, WEEKLY, MONTHLY** or **ANY SPECIFIC PERIOD'S** in/out max-min memory record, memory can be cleared by pressing '**CLEAR**' button, and new memory can be recorded instantly when the display is back to normal temp mode.

TO READ INDOOR MAX-MIN TEMPERATURE

1st press "**MAX-MIN MEMORY**" button



Indoor MAX Temp. Indoor MIN Temp.

Press '**CLEAR**' button to clear indoor **MAX-MIN TEMP.** memory record.



 
TO READ OUTDOOR MAX-MIN TEMPERATURE

2nd press "**TEMP MAX-MIN, MEMORY**" button



Outdoor MAX Temp. Outdoor MIN Temp.

Press '**CLEAR**' button to clear outdoor **MAX-MIN TEMP.** memory record.



3rd press "**MAX-MIN MEMORY**" button or if after 8 seconds and no key is pushed, display will resume to normal temp display mode

USING THE BACKLIGHT

You may check the time or temperature anytime in the dark by simply pressing the **BACKLIGHT** button once. The display will light up with a soft blue glow that lasts for approximately 3 seconds.

NOTE:

Frequent use of this feature will affect battery life.

TO INSTALL THE OUTSIDE TEMPERATURE SENSOR

Remove the paper on the double-sided tape on the temperature sensor and stick onto the outside of a window. This sensor will monitor the outside temperature. Carefully route the wire inside and gently close the window.

