


Unitecnic 1250



Installation instructions

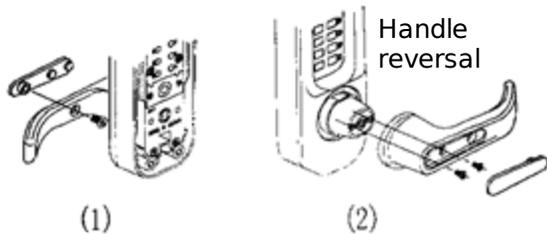


- Only the red screws can be unscrewed (change of combination).

Any other internal disassembly is forbidden (cancellation of warranty).


1 Remove the handles, rosettes, etc. Leave the cover and the cylinder in place. If the door is not already fitted, place the built-in cover.

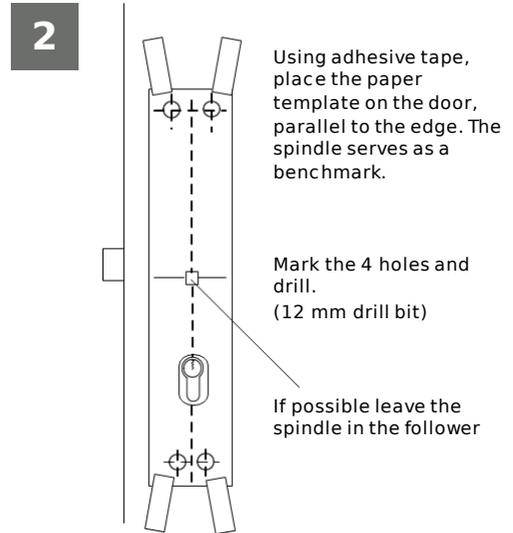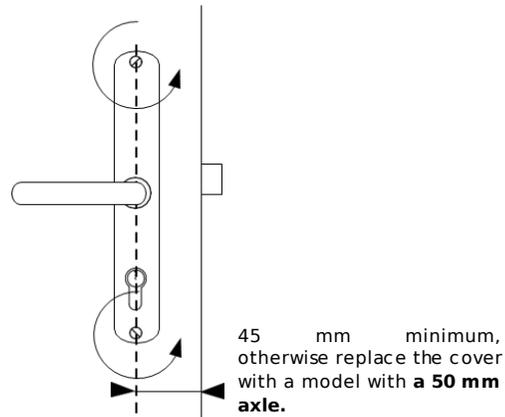


3 Prepare the special spindle, depending on the thickness of the door:

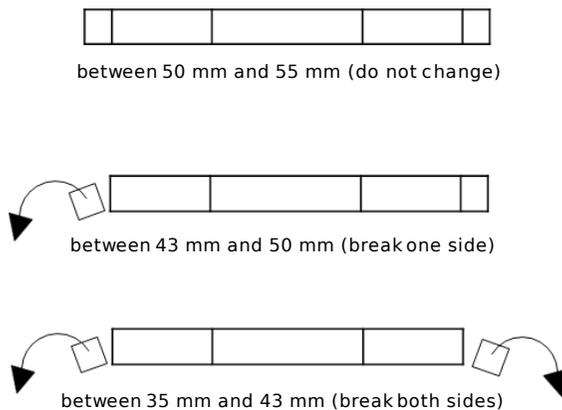


4 Place the spindle in the follower.
Attention :
Different meaning depending on the hand of the door!

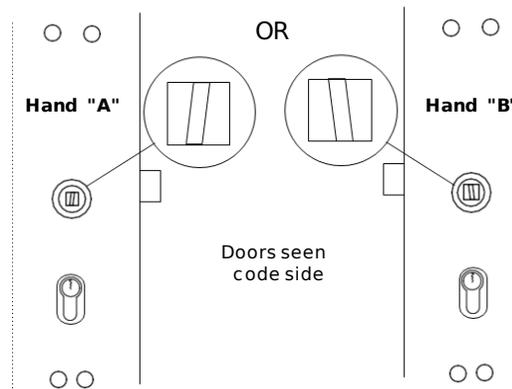


5 Assemble the front panel (if necessary: change the combination and / or modify the permanently-open option beforehand) (see other instructions)

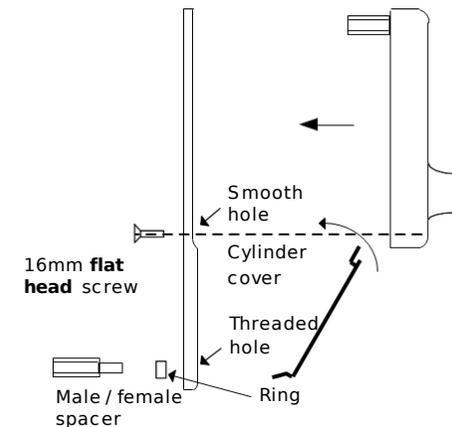


6 Installation of the assembly

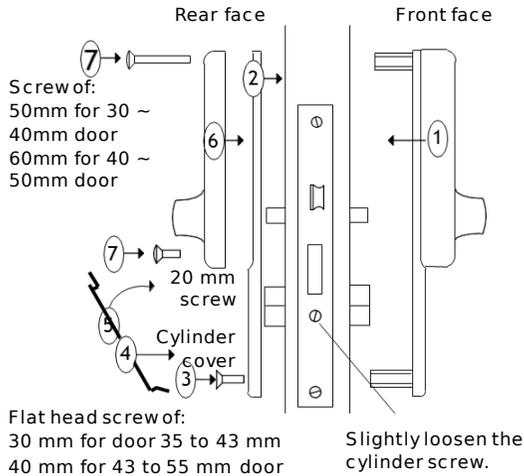

7 Immediately check that the inner handle drives the spring bolt without any difficulty.

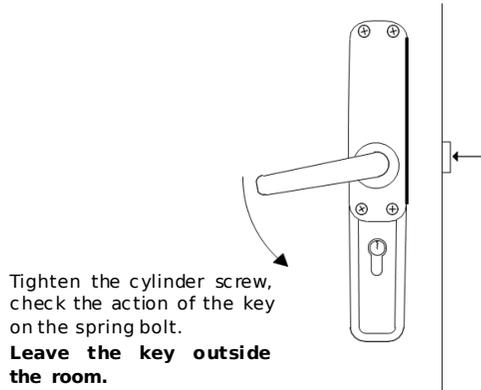

8 For 1250 with protective flap

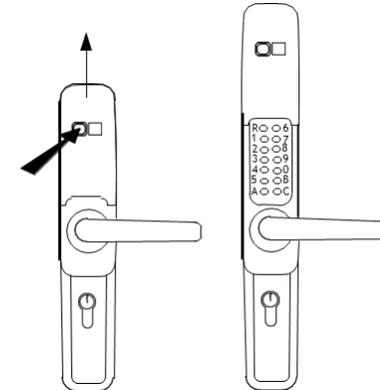

9 Enter the code in place, then lower the handle : the spring bolt retracts, allowing the door to be opened.

Note:


- A code **always begins with "C"**.

- The code in place in a new lock is indicated on a small card delivered in the packaging.

10 To put the lock in permanently-open

Permanently-open button

(if this function is present).

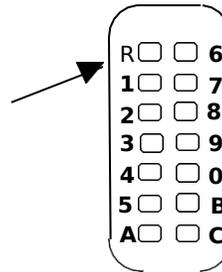

Enter the code then press the "R" button.
The handle is then unlocked and remains in this state indefinitely.

For Unitecnic 1210 only:
Hide the keys by sliding the flap down until it clicks into place.

11 To return to controlled access

Press the "R" button, then the "C" button, the stand relocks.

Do not close the door before performing several tests.