




THERMOMETER

Normal display shows indoor and outdoor temp in 1/10 degree

Clock

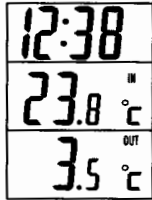

Indoor Temp

Outdoor Temp

MAX-MIN Temperature Memory

To facilitate **HOURLY, DAILY, WEEKLY, MONTHLY** or **ANY SPECIFIC PERIOD'S** in/out max-min memory record, memory can be cleared by pressing "**CLEAR**" button, and new memory can be recorded instantly when the display is back to normal temp mode.

3rd press "MAX-MIN MEMORY" BUTTON


or if after 8 seconds and no key is pushed, display will resume to normal temp display mode.

TO INSTALL THE OUTSIDE TEMPERATURE SENSOR


Remove the paper on the double sides tape on the temperature sensor and stick onto the outside of a window. This sensor will monitor the outside temperature. Carefully route the wire inside and gently close the window.





TO READ INDOOR MAX-MIN TEMPERATURE 1st press "MAX-MIN MEMORY" button

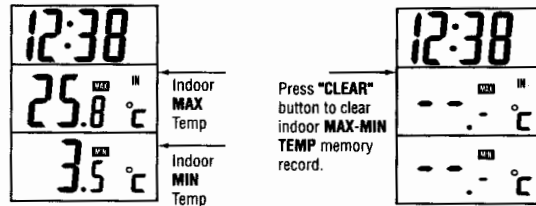

TO READ OUTDOOR MAX-MIN TEMPERATURE 2nd press "TEMP MAX-MIN, MEMORY" button

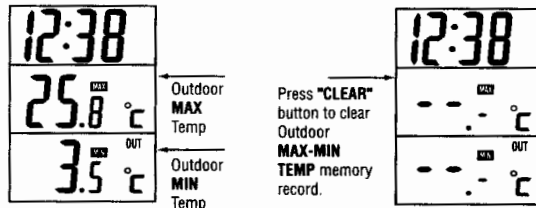


Model 203

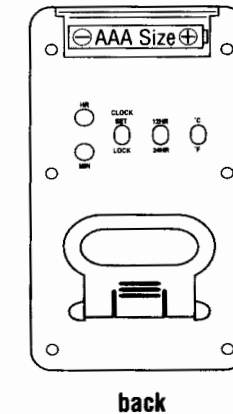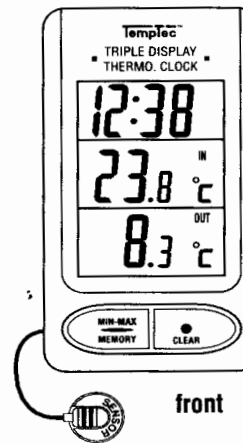

Battery Replacement

- 1 "AAA" battery
- Insert batteries as direction indicated

 Folding stand for countertop display



holes on bracket for screw
Easy mounting of bracket on wall by:
- Double sided tape or
- Screws

TO SET THE PRESENT TIME

1. Slide the **CLOCK SET** switch to the **CLOCK SET** position.
2. Press and release the **HR** button to set the present hour. Press and hold the **HR** button for faster setting.
3. Press and release the **MIN** button to set the present minute. Press and hold the **MIN** button for faster setting.
4. Slide the **CLOCK SET** switch to the **LOCK** position.

12HR AM/PM OR 24HR INTERNATIONAL TIME DISPLAY

- Simply slide the **12HR/24HR** switch to choose your desired format.
- In 12HR format, a "**AM**" or "**PM**" sign will appear indicating AM or PM hours.

To select °C or °F readout:

Slide switch to °C or °F position.