



Security Tech Germany

IR HD 720p Pan/Tilt Network Camera



User manual

Version 11/2012



Introduction

Dear Customer,

Thank you for purchasing this product.

This product meets the requirements of the applicable European and national guidelines. The corresponding declarations and documents can be obtained from the manufacturer.

To maintain this condition and to ensure risk-free operation, you as the user must observe these operation instructions!

Before initial start-up, read through the complete operating instructions observing operating and safety instructions.

All company and product names mentioned in this document are registered trademarks. All rights reserved.

If you have any questions, please contact your installer or your local dealer!



Disclaimer

This user manual was prepared with greatest care. If you should notice omissions or inaccuracies, please inform us about these on the back of this manual given address.

The ABUS Security-Center GmbH & Co. KG assumes no liability for technical and typographical faults and reserves the right to make at any time modifications to the product or user manual without a previous announcement.

The company is not liable or responsible for direct and indirect subsequent damages which are caused in connection with the equipment, the performance and the use of this product.

No guarantee for the content of this document is taken.

Important safety instructions



The warranty will expire for damage due to non-compliance with these operating instructions. We shall not be liable for any consequential loss!



We do not accept liability for damage to property or personal injury caused by incorrect handling or non-compliance with the safety-instructions. In such cases the warranty will expire.

Dear customer,

The following safety instructions are intended not only for the protection of your health, but also for the protection of the device. Please read through the following points carefully:

- There are no parts on the inside of the product which need to be serviced. Apart from this, the license (CE) and the guarantee/warranty will lapse if you open/take the product apart.
- The product will be damaged even it falls from a low height.
- This device can be used in inside only.
- During the installation of the camera please take care that direct sunlight cannot fall onto the image sensor of the device. Please follow the installation instructions in the corresponding chapter of this user manual.

Avoid using the device under the following unfavorable ambient conditions:

- wetness or excessive air humidity
- extreme cold or heat
- direct sunlight
- dust or combustible gases, vapors or solvents
- strong vibration
- strong magnetic fields, such as those found in the vicinity of machinery or loudspeakers
- the camera should not positioned with opened iris towards the sun - this can lead to the destruction of the sensor.
- the camera may not be installed on unstable surfaces

General safety instructions:

- Do not leave packaging material lying around carelessly. Plastic/ foil/bags and polystyrene parts etc. could become dangerous toys for children.
- For safety reasons don't give the camera into child hands due to them being able to swallow small parts.
- Please do not insert objects through the openings into the device.
- Use only accessories which are specified by the manufacturer.
Please do not connect incompatible parts to the device.
- Please pay attention to the safety instructions and user manuals of the other connected devices.
- Check the device for damages before installation. If this should be the case please do not use it.
- Please adhere to the operational voltage limitations listed in the technical data. High voltage could destroy the device and pose a health hazard (electric shock).



During the installation into an existing video surveillance system make sure that all devices are disconnected from the low and supply voltage circuit.



If in doubt allow a professional electrician to mount, install and wire-up your device. Improper or make-do electrical connection to the mains does only represent a threat to you but also to other persons.

Wire-up the entire system making sure that the mains and low voltage circuit remain separated and cannot come into contact with each other in normal use or due to any malfunctioning.

Contents

1. Usage in accordance with regulations	69
2. Scope of delivery	69
3. Installation.....	70
3.1 Power supply	70
3.2 Installing the camera	70
4. Camera description	70
4.1 Description of connectors	70
4.2 Status LEDs.....	71
4.3 Using the microSD slot	71
4.4 Restoring the factory settings.....	71
4.5 Alarm input and output	72
4.6 Putting into operation	73
4.7 Accessing the network camera for the first time.....	74
4.8 Accessing the network camera over a web browser.....	75
4.9 Installing the ActiveX plug-in	75
4.10 Adjusting the security settings	75
4.11 Password prompt	76
4.12 Accessing the network camera over an RTSP player	76
4.13 Accessing the network camera over a mobile phone	77
4.14 Accessing the network camera over ABUS VMS.....	78
5. User functions.....	79
Video control.....	82
6. Camera settings (configuration)	84
6.1 System	85
6.2 Camera.....	88
6.3 Playback	92
6.4 Network.....	94
6.5 Security.....	102
6.6 PT (Pan/Tilt).....	104
6.7 Event	107
6.6.1 Event server	107
6.6.2 Event recording.....	110
6.6.3 Continuous Recording.....	112
5.1 Switching input and switching output.....	113
6.8 Motion detection	113

6.9 Schedule.....	114
6.10 Audio detection.....	114
6.11 System log.....	115
7. Maintenance and cleaning	116
7.1 Function test	116
7.2 Cleaning.....	116
8. Disposal.....	116
9. Technical data.....	117
10. GPL license information	119

1. Usage in accordance with regulations



Use of this product for other than the described purpose may lead to damage to the product and other dangers. All other uses are not in accordance with regulations, and result in the invalidation of the product guarantee and warranty. No liability can be accepted as a result. This also applies to any alterations or modifications made to the product.

Read the entire operating manual carefully before putting the product into operation. The operating manual contains important information on installation and operation.

2. Scope of delivery

<p>ABUS network camera TVIP21502 / TVIP21552 / TVIP22500</p>	
<p>Power supply unit</p>	
<p>Wall mount bracket</p>	
<p>Network cable (1 metre)</p>	
<p>Software CD (including operating manual)</p>	
<p>Antenna (TVIP21552)</p>	
<p>Quick guide</p>	

3. Installation

Make sure that all accessories and parts listed above are present in the scope of delivery. An Ethernet cable is required for camera operation. This Ethernet cable must meet UTP Category 5 (CAT 5) specifications and must not be longer than 100 metres.

3.1 Power supply


Before starting installation, ensure that the mains voltage and the rated voltage on the power supply unit are identical. The camera's supply voltage is 12 VDC. Please use the supplied power supply

3.2 Installing the camera

With the camera a mounting bracket is supplied. At the backside of the camera a socket is located. Using this socket the camera mounting bracket can be fixed at the camera. The mounting bracket can be fixed at the wall using the supplied pegs and screws.

4. Camera description

4.1 Description of connectors

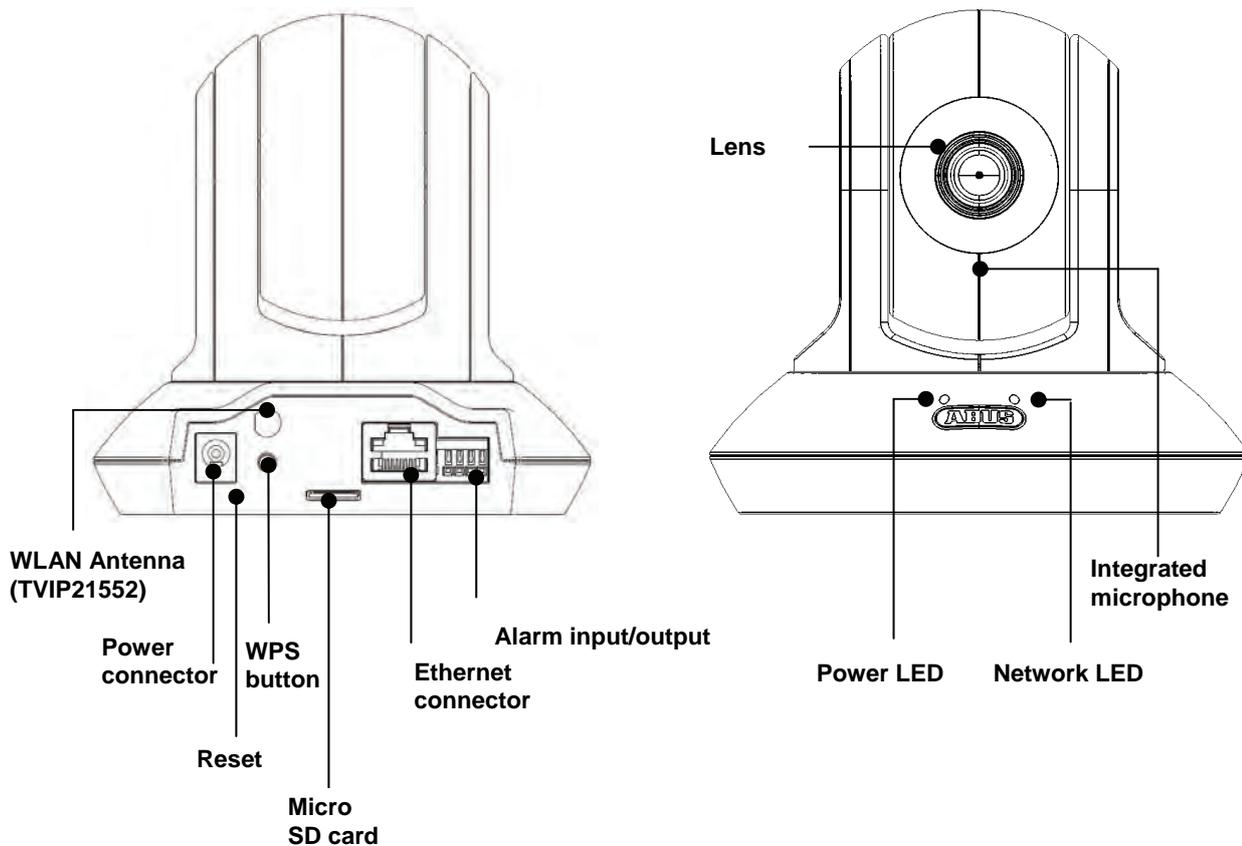

4.2 Status LEDs

LED	Color	Description
Network info LED	Off	Network cable not connected or wireless mode
	purple / blue flashing (high frequent)	Start-up procedure
	Blue flashing (high frequent)	Start-up procedure finished, normal working mode
Status info LED	Red on continuously	Start-up procedure
	Blue on continuously	IP address successfully assigned (Note: On manual setup of IP address, a wrong IP address can be applied. In this case the blue LED is continuously on as well)

4.3 Using the microSD slot



Disconnect the power supply before inserting the microSD card.

The microSD card can only be inserted into the socket in a certain position. Use a narrow pointed object (such as a flat narrow screwdriver) to insert it. When it is correctly positioned, the card is flush with the housing surface and does not protrude.


The card is detected by the camera when the power supply is reconnected, and can then be used as desired.



The microSD card cannot be replaced when the system is in operation!



To use the microSD card function, an active Internet connection that makes the correct time available to the camera after a restart is required (NTP function).

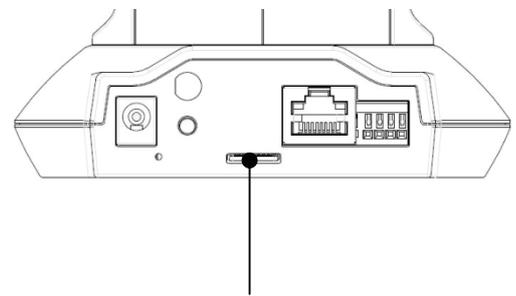


MicroSD card slot

4.4 Restoring the factory settings

Camera restart	Press the button until the blue LED goes out -> constantly red during camera restart -> constantly blue after successful camera restart
Restoring the factory settings	Press the button until the LED lights up blue constantly -> constantly blue after successful camera restart

4.5 Alarm input and output

Connection	Description	Max. load (V/A)	
DO - alarm output	Connection of a transistor or relay: Transistor: NPN with emitter against ground (GND) Relay: 12 V DC "AND" connection, plus DO with diode (see example below)	24 V DC, 100 mA	
DI - alarm input	Activation of the alarm input by connecting the DI and GND connections	-	
GND	Ground	-	
12 V DC	Voltage output	12 V DC, max. 100 mA	

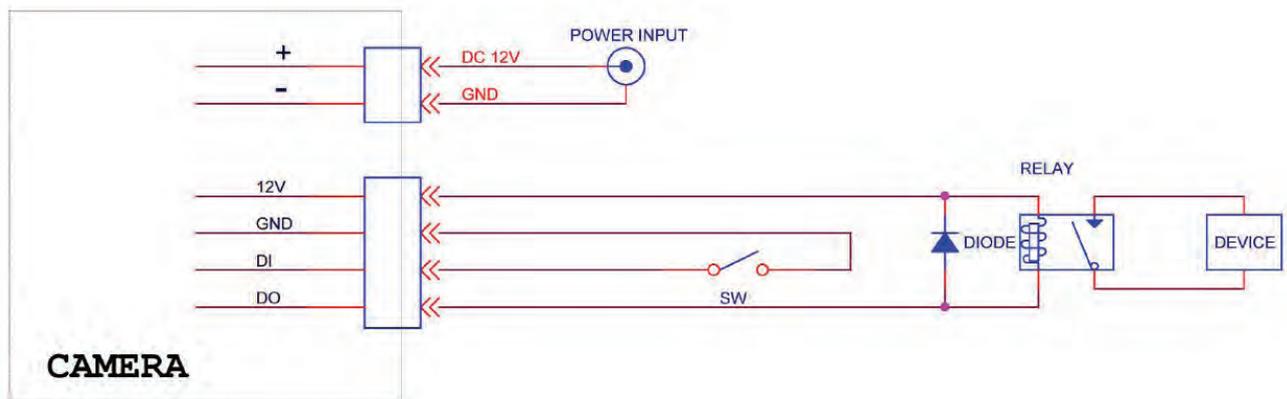

4.6 Putting into operation

The network camera automatically detects whether a direct connection between the PC and camera should be made. A cross-over network cable is not required for this. You can use the supplied patch cable for direct connection when putting into operation for the first time.

Direct connection of the network camera to a PC / laptop


1. Ensure that a CAT 5 network cable is used.
2. Connect the cable to the Ethernet interface of the PC / laptop and the network camera.
3. Connect the power supply to the network camera.
4. Configure the network interface of your PC / laptop to the IP address 192.168.1.1 and the default gateway to 192.168.1.2.
5. Go to point 4.6 to finish the initial set-up and establish the connection to the network camera.



① CAT 5 Ethernet cable

Connecting the network camera to a router / switch

1. Ensure that a CAT 5 network cable is used.
2. Connect the PC / laptop to the router / switch.
3. Connect the network camera to the router / switch.
4. Connect the power supply to the network camera.
5. If a DHCP server is available in your network, set the network interface of your PC / laptop to "Obtain an IP address automatically".
6. If no DHCP server is available, configure the network interface of your PC / laptop to 192.168.1.1 and the default gateway to 192.168.1.2.
7. Go to point 4.6 to finish the initial set-up and establish the connection to the network camera.
- 8.

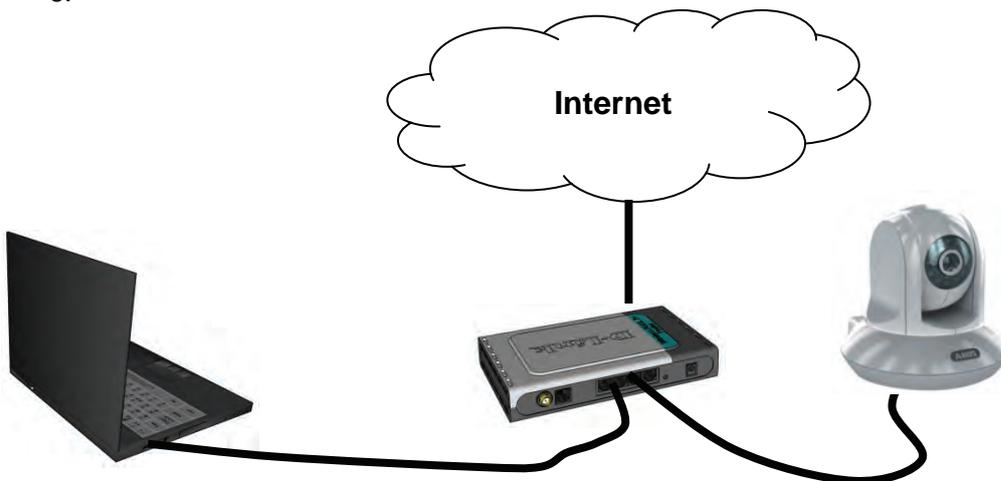


4.7 Accessing the network camera for the first time

The network camera is accessed for the first time using the IP Installer. After the installation wizard is started, it searches for all connected EyseoIP network cameras and video servers in your network.

The program is found on the supplied CD-ROM. Install the program on your PC and then run it.

If a DHCP server is available in your network, the IP address is assigned automatically for both the PC / laptop and the network camera.

If no DHCP server is available, the network camera determines a free IP address from the 192.168.1.2–192.168.1.254 range independently. Your PC system must be located in the same IP segment in order to establish communications with the network camera.

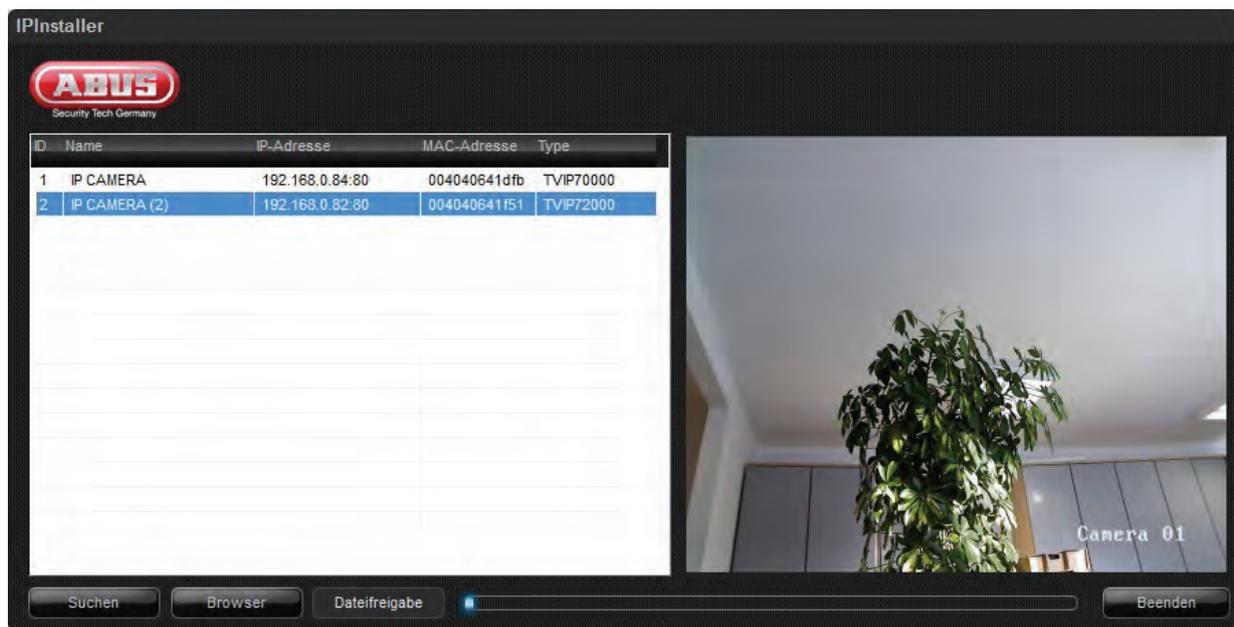


The standard setting for the network camera is “DHCP”. If no DHCP server is in operation in your network, then we recommend setting the IP address manually to a fixed value following initial access to the network camera.

4.8 Accessing the network camera over a web browser


When you first access the network camera under Windows, the web browser queries the installation of an ActiveX plug-in for the network camera. This query depends on the Internet security settings of your PC. If the highest security level is set, the PC will refuse any installation and any attempt at running it. This plug-in is used for displaying the video in the browser. To continue, click "Install". If the web browser prevents the installation, open the Internet security settings and reduce the security level or consult your IT or network administrator.

4.9 Installing the ActiveX plug-in

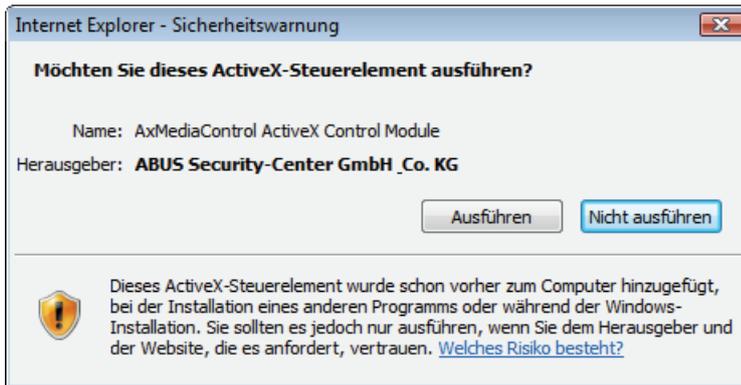

If Mozilla Firefox is used as the browser when accessing the camera, an MJPEG stream is provided by the camera instead of the ActiveX plug-in.

4.10 Adjusting the security settings

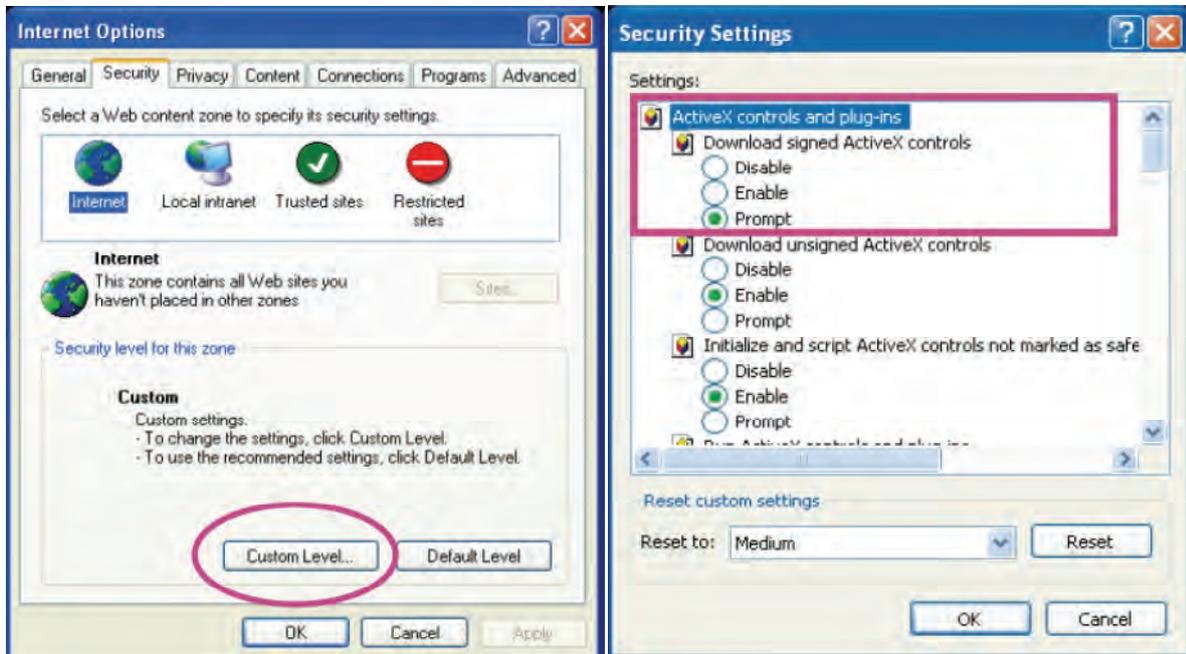

Note: Your PC security settings may prevent a video stream. You can change the security settings to a lower level under "Tools / Internet Options / Security". Make sure you enable ActiveX controls and downloads.

4.11 Password prompt

An administrator password is defined in the network camera as standard. However, the administrator should define a new password immediately for security reasons. After the new administrator password is stored, the network camera asks for the user name and password every time it is accessed.

The administrator account is set up in the factory as follows: user name “**admin**” and password “**12345**”. Each time the network camera is accessed, the browser displays an authentication window and asks for the user name and password. If you can no longer access your personal settings in the administrator account, you can log in again with user name “**admin**” and password “**12345**” after resetting the network camera to the factory settings.

To enter a user name and password, proceed as follows:

Open Internet Explorer and enter the IP address of the camera (e.g. “http://192.168.1.14”).

You are then prompted for authentication:



Standard user name:	admin
Standard password:	12345

-> You are now connected with the network camera and can see a video stream.

4.12 Accessing the network camera over an RTSP player

You have the possibility of accessing the MPEG-4 / H.264 data streams on the network camera with an RTSP-compatible media player. The following free media players support RTSP:

- VLC Media Player
- Real Player
- Quicktime Media Player

The address format for entering the connection data is as follows:

rtsp://<IP address of the network camera>:<RTSP port>/<Type of video data stream>

Example:

rtsp://192.168.1.14:554/video.mjpg (MJPEG stream)

rtsp://192.168.1.14:554/video.mp4 (MPEG-4 stream)

rtsp://192.168.1.14:554/video.h264 (H.264 stream)

4.13 Accessing the network camera over a mobile phone

Ensure that you can establish an Internet connection over your mobile phone. Your mobile phone must also be equipped with an RTSP-compatible media player. The following media players for mobile phones support RTSP:

- Real Player
- Core Player

Please note that access to the network camera via mobile phone is restricted due to the reduced network bandwidth available. We therefore recommend making the following video stream settings in order to reduce the data quantity:

Video compression	MPEG-4
Resolution	160x120
Frame rate	5 frames / second
Video quality (constant bit rate)	48 kbps

If your media player does not support RTSP authentication, then deactivate the authentication mode for RTSP in the network camera configuration settings.

The address format for entering the connection data is as follows:


rtsp://<IP address of the network camera>:<RTSP port>/<Type of video data stream>

Example:

rtsp://192.168.1.14:554/video.3gp


4.14 Accessing the network camera over ABUS VMS

The free ABUS VMS Express recording software can be found on the supplied CD-ROM. You then have the possibility of connecting and recording several ABUS Security Center network cameras on one interface. Further information can be found in the software manual on the enclosed CD-ROM.

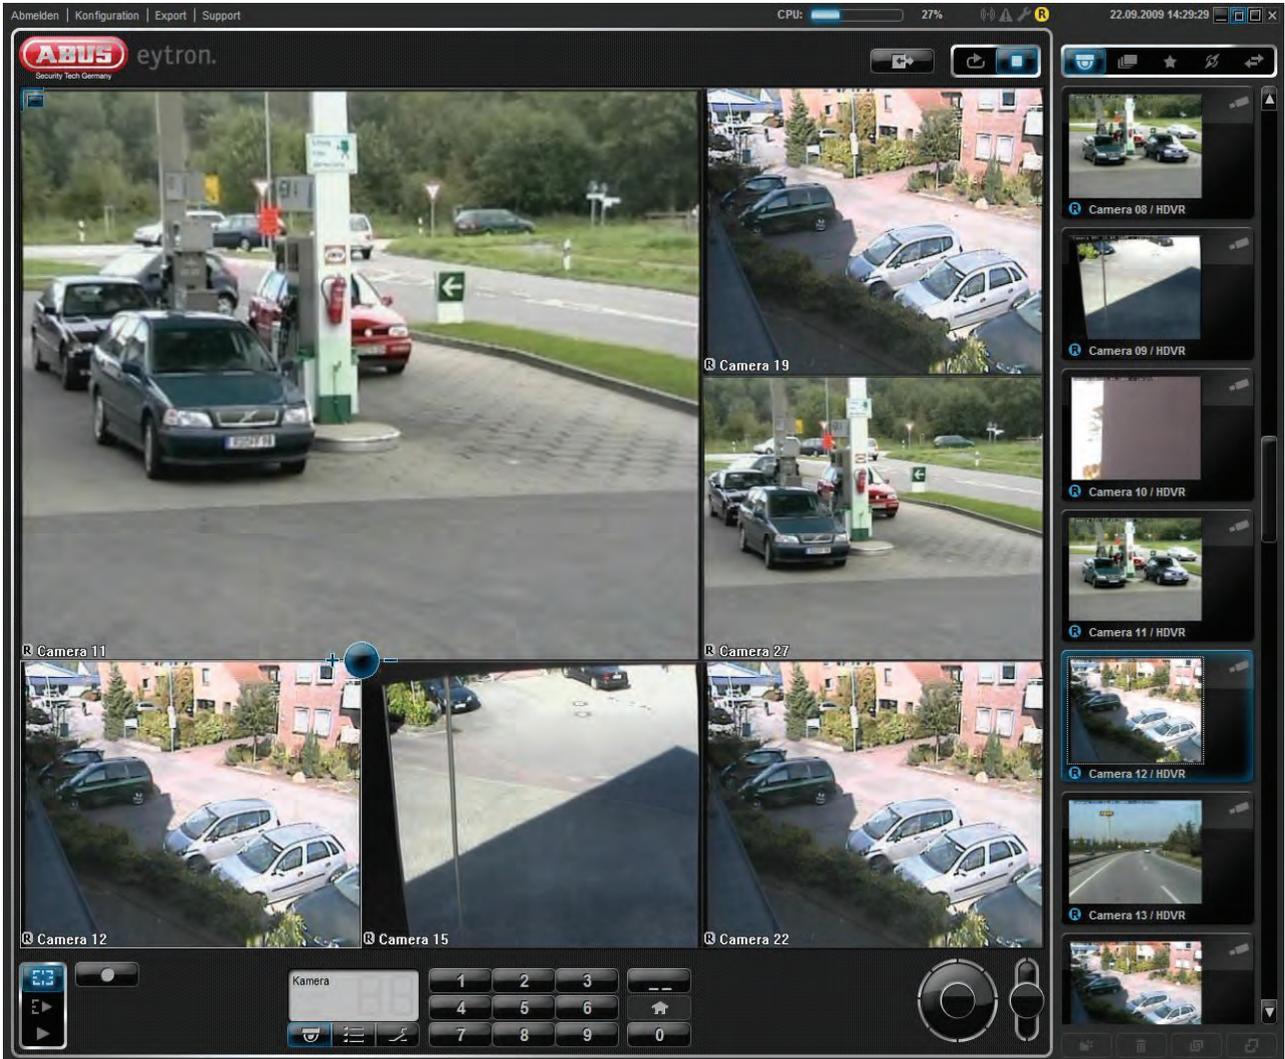

5. User functions

Open the main menu on the network camera. The interface is divided into the following main areas:

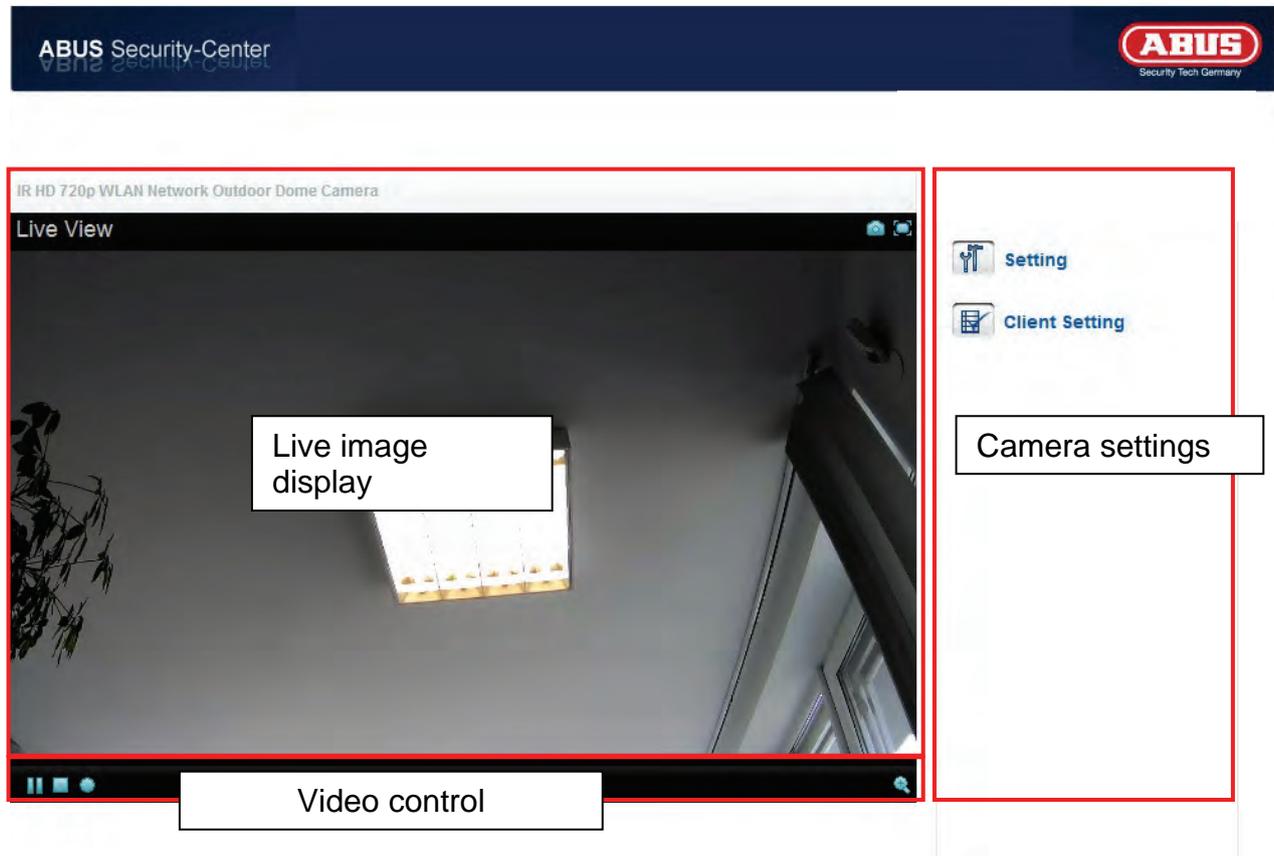

Live image display

You can access the full-screen view by double-clicking here (with Internet Explorer only).

Camera settings



Settings (configuration)

Used to configure the camera (administrator settings)



Live options

Mode: Choose the compression type for transmission of the live image.

View size: Select a view size.

Auto: Automatic adjustment to the screen size

Original size: Display of the video image in accordance with the set camera resolution (e.g. 1280x720).



Note: The view size specified here relates to the live image shown in the display mode of the browser. The resolution set in the camera is always transmitted, even when the view size set here is smaller.

Protocol: Allows you to select a transmission protocol for data transfer between the client and the server. The following protocol options are available for optimizing the application: UDP, TCP, HTTP.

The UDP protocol gives you a larger number of real-time video streams. However, some data packets can be lost due to the large data volume in the network. Pictures may be unclear in this case. The UDP protocol is recommended if you have no special requirements.

With the TCP protocol, fewer data packets are lost and the video display is more accurate. However, the disadvantage of this protocol is that the video stream is transmitted at a lower frame rate than the UDP protocol.

Use the HTTP protocol if the network is protected by a firewall and only the HTTP port (80) is available.

The selection of the protocol is recommended to be made in the following order: UDP – TCP – HTTP



This function is only available when using Internet Explorer.

Video buffer: Activate the video buffer if your line has low bandwidth. Image data is saved temporarily in the network camera for clearer transmission, meaning the image delay is increased.



This function is only available when using Internet Explorer.



PT control

Use the control buttons for pan/tilt control on the camera.

Arrows:

The pan/tilt head is moved by clicking the button in the corresponding direction

Home:

The image is moved to the home position



Preset Go:

Select one of the preset positions from the list. The network camera accesses the position immediately.

Set:

The current camera position in the live image is saved as a preset. Presets saved in this way all have a generic file name (Preset1, Preset2 etc.).

Patrol:

Select which tour should be started. Tours 1 to 4 can be changed in the camera settings.

Go:

Starts the selected tour.

Pan speed:

Select a value between 0 and 100. Higher values result in quicker movements.



Tilt speed:

Select a value between 0 and 100. Higher values result in quicker movements.

Auto Pan speed:

This setting is used during a tour.

Select a value between 0 and 100. Higher values result in quicker movements.

Endless mode

This mode is optimized for controlling the network camera over the local network (LAN).

Sequence mode

This mode is optimized for controlling the network camera over the Internet. The step size of the pan/tilt control is limited to a short step size.

Video control



These functions are only available when using Internet Explorer.



Snapshot

The web browser displays a new window containing the snapshot. To save the snapshot, either left-click it and then click the floppy disk icon or right-click it and select "Save" from the context menu.



Full-screen view

Activate the full-screen view. The live image on the network camera is shown on the entire screen.




Start/stop live image display

The live stream can be stopped or ended. In both cases you can continue the live stream by pressing the play symbol.



Local recording

A recording on the local hard drive can be started or stopped. If you click the button, the Windows "Save as" dialog is called up.

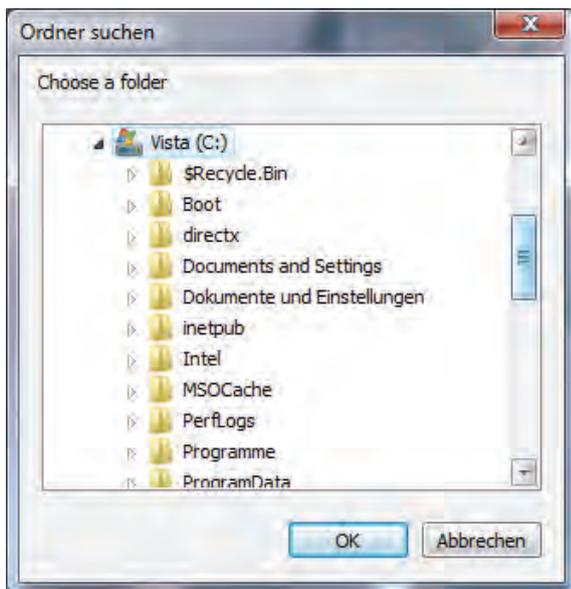

Select a target directory on your hard drive. A directory and recording file are created automatically in the folder under the following name:

YYYYMMDD
YYYYMMDDHHmmss.avi
Y = Year
M = Month
D = Day
H = Hour
m = Minute
s = Second

Example:

C:\Recording\20091215\20091215143010.avi



The recorded data can be played back using an MP4-compatible video player (e.g. VLC Media Player). Alternatively, you can also watch the videos on Windows Media Player by installing a video codec in the IP Installer.



Digital zoom

Click the magnifying glass symbol to activate the digital zoom. The zoom factor can be changed on the scroll bar.




Setting the zoom factor

Change the zoom factor by moving the bar from left (low zoom) to right (high zoom).

6. Camera settings (configuration)

Only the administrator has access to the system configuration. The following sections explain each of the elements in the left-hand column. After you click a menu item on the left-hand side, a menu tree may be opened depending on the number of sub-items contained in the item. In this case, continue by clicking the sub-item.

Click "Home" to return to the main camera page.

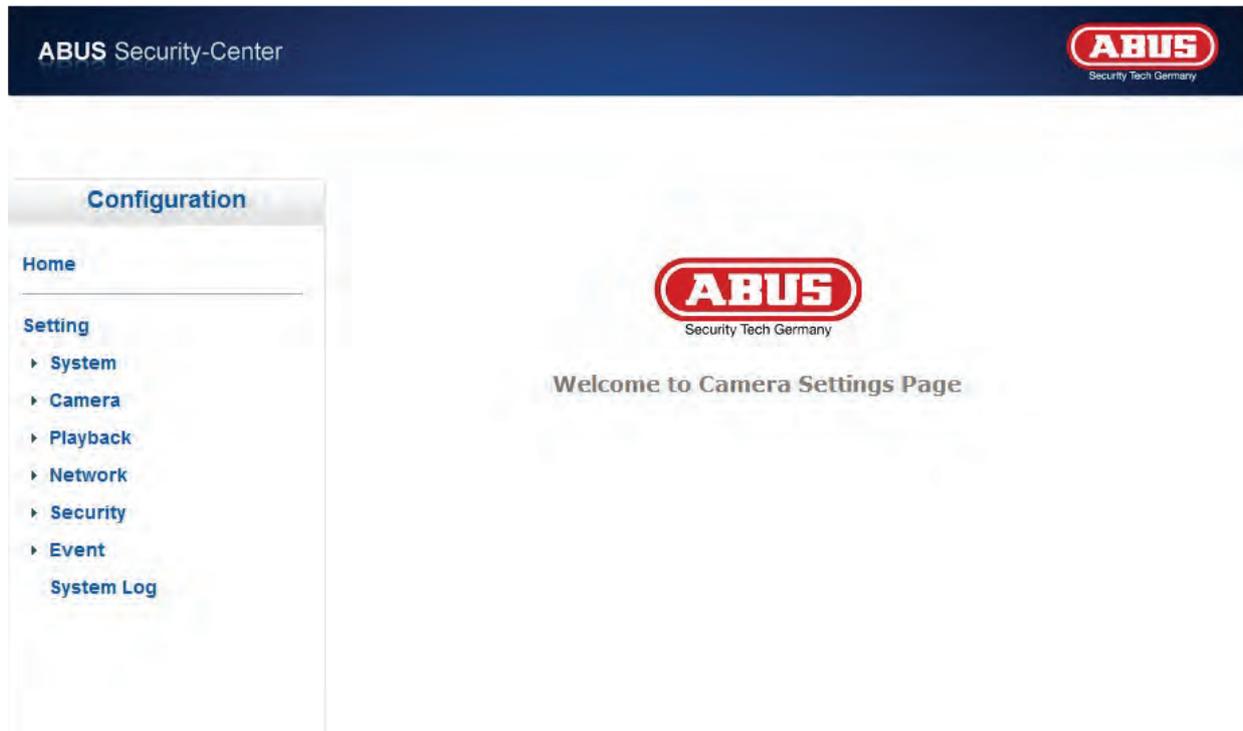

6.1 System

▼ System

Information

Date Time

Initialize

Information

Product information:

Product name:	The product name indicates the functions included (e.g. 720p).
Firmware version:	Shows the current version of the installed firmware.
Firmware date:	Shows the date of the firmware.
MAC address:	Shows the MAC address of the LAN interface.
Date/time:	Shows the current date and the time of the camera.
Bandwidth use:	Shows the current transmitted data rates from and to the camera (Receive = incoming data rate; Transport = outgoing data rate).
WAN bandwidth use:	Shows the current transmitted data rates from and to the camera via the WLAN interface (Receive = incoming data rate; Transport = outgoing data rate) (with TVIP21552 only).

Security

Video connections:	Number of users currently logged on (note: connections from recorders or NVRs are also displayed as connections).
User accounts:	Number of configured users in the camera
Anonymous access:	Indicates whether anonymous users are allowed to view the live image
HTTPs:	Information when HTTPS is being used
IP address filter:	Information about the activity of the IP filter

Video settings:

Image settings:	Information from the image and video settings
Day/night:	Information about parameters relating to day/night switching

Event list:

Shows the most recent event triggers

Network:

TCP/IP:	IP address and HTTP port currently in use
PPPoE:	Information about the use of PPPoE
UPnP:	Shows the activity of UPnP
Bonjour:	Information about the Bonjour protocol
RTSP:	Detailed information about the RTSP ports and RTSP streams in use

Port:	Overview of the ports in use. In case of port forwarding, all ports use must be forwarded (at least the HTTP and RTSP port).
-------	--

Date/time

Aktueller Tag/Uhrzeit	<input type="text" value="2009-11-14 21:02:06"/>
PC Uhr	<input type="text" value="2009-11-14 21:02:05"/>
Datum/Uhrzeit Format	<input type="text" value="yyyy-mm-dd hh:mm:ss"/>
Anpassen	<input type="radio"/> Aktuelle Einstellungen beibehalten <input type="radio"/> Synchronisieren mit dem PC <input type="radio"/> Manuelle Einstellung <input checked="" type="radio"/> Synchronisieren mit NTP Server
	<input type="text" value="2009"/> - <input type="text" value="11"/> - <input type="text" value="14"/> <input type="text" value="21"/> : <input type="text" value="01"/> : <input type="text" value="04"/>
	NTP Servername <input type="text" value="de.pool.ntp.org"/> <input type="checkbox"/> Auto
	Intervall <input type="text" value="1"/> Stunden
Zeitzone	<input type="text" value="(GMT+01:00)Amsterdam, Berlin, Bern, Rom, Stockholm, Wien"/>
Zeitzone	<input checked="" type="radio"/> An <input type="radio"/> Aus
Startzeit	<input checked="" type="radio"/> nach Datum <input type="radio"/> nach Kalenderwoche <input type="text" value="Marz"/> <input type="text" value="Erster"/> <input type="text" value="Mo"/> <input type="text" value="29"/> <input type="text" value="2"/> : <input type="text" value="00"/>
Endzeit	<input checked="" type="radio"/> nach Datum <input type="radio"/> nach Kalenderwoche <input type="text" value="Oktober"/> <input type="text" value="Erster"/> <input type="text" value="Mo"/> <input type="text" value="25"/> <input type="text" value="3"/> : <input type="text" value="00"/>
	<input type="button" value="OK"/> <input type="button" value="Abbrechen"/>

- Current date/time:** Shows the setting for the date/time currently stored in the camera.
- PC clock:** Shows the date/time on the PC from which you access the camera.
- Date/time format:** Select a format (YYYY-year, MM-month, DD-day, hh-our, mm-minute, ss-second).
- Adjust:**
- Keep current settings:** No changes to the settings
- Synchronize with the PC:** The date and time of the PC are taken over for the camera.
- Manual setting:** Manually set the time and date here.
- Synchronize with the NTP server:** Automatic updating of the date and time via a time server (Network Time Protocol)
- NTP server name:** Enter the domain name of the time server (e.g. de.pool.ntp.org)
- Auto:** When activated, the standard time server is used. Deactivate the "Auto" setting to enter the NTP server name manually.
- Interval:** Updating interval with the time server in hours
- Time zone:** Here you select the time zone in which the camera is located.
- Daylight savings time:** Enter the dates here for the switch from daylight savings time to standard time.



Accept the settings by pressing "Save" or cancel them by pressing "Cancel".

Initializing

- Restart:** If you press the button, the camera is restarted.
- Sequencing mode:** Restart every x days at the point in time at which the function is activated.
- Schedule mode:** Restart on the desired weekday at a certain time.
- Factory settings:** Pressing this button causes the factory settings of the camera to be loaded. The selection must be confirmed.
- TCP/IP:** Check this box to exclude the network setting values from being reset.
- Date/time:** Check this box to exclude the date/time values from being reset.
- Save settings:** Here you can save a backup file of all camera settings.
- Load settings:** Settings saved to a backup file can be loaded here.
- Update firmware:** A more current version of the camera firmware can be loaded here. Information on updated firmware files can be found in the Software section at "<http://www.abus-sc.com>".

Language

- Upload language packet:** You can set a different language here by uploading a language file. German is the standard language on the camera upon delivery. The language file for the camera can also be uploaded using the included IP Installer. This can be installed in the appropriate language. Language files for German, English, French, Dutch, and Danish can be downloaded from the Software section at "<http://www.abus-sc.com>".
-

6.2 Camera

▼ Camera

General

H.264

MPEG4

MJPEG

3GPP

Advanced

General

- Rotate image:** Settings for image orientation
- Video clip format:** Choose between MPEG-4 and H.264 for the compression of the saved video clips (e.g. for sending a video clip via SMTP e-mail). The H.264 option can result in the utilization of more system resources, which can lead to a reduction in camera performance (e.g. frame rate and motion detection).
- Flip:** The picture is displayed rotated by 180°.
- Reverse:** The picture is displayed in mirror reverse.
- Flip + reverse:** Select this option if the camera was installed upside down.
- IR Cut Filter Mode:** Settings for the swiveled IR-cut filter (ICR)
Auto: The cut filter swivels in or out automatically according to the light sensor. The “Threshold” option specifies the switching values.
Night mode: The swivel filter is constantly separated from the image sensor. The image sensor can record visible light and IR light.
Day mode: The swivel filter is constantly in front of the image sensor. The image sensor can only record visible light.
Schedule: The swivel filter is switched according to a schedule. The “ICR schedule” option appears (for details on configuration, see 6.11, “Schedule”).
- ICR Cut Filter Switch Delay:** Switching from day to night mode can be delayed by up to 10 seconds.
- IR Cut Filter Threshold:** Bright (H) – The higher the value, the earlier the camera deactivates the IR-cut filter / the IR light.
Dark (L) – The lower the value, the earlier the camera activates the IR-cut filter / the IR light.
- IR Mode:** **Auto:** The IR-LEDs are automatically activated or deactivated based on the limits of the threshold value setting.
On: IR-LEDs are constantly activated.
Off: The IR-LEDs are constantly deactivated.
- Microphone input gain:** The input gain can be setup in 9 steps. By this the mic sensitivity can be adjusted. The microphone can be deactivated here as well (Mute).
- Audio Codec:** Please select one option g.711_μ-law, g.711_a-law or AM. To record audio over ABUS VMS software please use g.711.
- Host name:** Enter the network host name here: the max. length is 32 characters.
- Status LED:** Switches all status LEDs on or off.

Text overlay: The setting of the "Title" menu item as well as the date/time can optionally be shown on the video image.

Privacy masking zones: As an alternative to text overlay, one area in the video image can be masked so that it is hidden.



Accept the settings by pressing "SAVE" or cancel them by pressing "Cancel".

H.264

Image size: Select between the following image resolutions (pixels):
TVIP21502, TVIP21552: 1280x720, 640x480, 320x240, 160x120
TVIP22500: 1920x1080, 1280x1024, 1280x960, 1280x720, 1024x768, 640x480, 320x240

Frame rate: Specifies the frame rate in frames per second.

Quality: Setting for the quality of the video stream.

Fixed quality: The video quality is fixed at a certain level. The network bandwidth requirements can rise or fall according to demand.

Fixed bit rate: The bit rate of the video stream is set to a certain fixed value. The video quality can vary according to the level of activity.



Accept the settings by pressing "SAVE" or cancel them by pressing "Cancel".

MPEG-4

Image size: Select between the following image resolutions (pixels):
TVIP21502, TVIP21552: 1280x720, 640x480, 320x240, 160x120
TVIP22500: 1920x1080, 1280x1024, 1280x960, 1280x720, 1024x768, 640x480, 320x240

Frame rate: Specifies the frame rate in frames per second.

Quality: Setting for the quality of the video stream.

Fixed quality: The video quality is fixed at a certain level. The network bandwidth requirements can rise or fall according to demand.

Fixed bit rate: The bit rate of the video stream is set to a certain fixed value. The video quality can vary according to the level of activity.



Accept the settings by pressing "SAVE" or cancel them by pressing "Cancel".

MJPEG

Image size: Select between the following image resolutions (pixels):
TVIP21502, TVIP21552: 1280x720, 640x480, 320x240, 160x120
TVIP22500: 1920x1080, 1280x1024, 1280x960, 1280x720, 1024x768, 640x480, 320x240

Frame rate: Specifies the frame rate in frames per second.

Quality: Setting for the quality of the video stream.

Fixed quality: The video quality is fixed at a certain level. The network bandwidth requirements can rise or fall according to demand.



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

3GPP

Image size: Select between the following image resolutions (pixels):
TVIP21502, TVIP21552: 1280x720, 640x480, 320x240, 160x120
TVIP22500: 1920x1080, 1280x1024, 1280x960, 1280x720, 1024x768, 640x480, 320x240

Frame rate: Specifies the frame rate in frames per second.

Quality: Setting for the quality of the video stream.

Fixed quality: The video quality is fixed at a certain level. The network bandwidth requirements can rise or fall according to demand.

Fixed bit rate: The bit rate of the video stream is set to a certain fixed value. The video quality can vary according to the level of activity.



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

Advanced

Image improvements

Video display: You can call up a preview video by pressing the “Video” button. This is helpful for configuring the following image settings on this page.

Brightness: Image brightness settings

Saturation: Image saturation settings

Contrast: Image contrast settings

Sharpness: Image sharpness settings. A higher sharpness value can increase image noise.

You can reset the four image settings back to the factory settings by pressing the “Standard” button.

White balance

Color hue: You can adjust the basic settings for the color hue here. The colors will be shown warmer or cooler according to the settings.

White balance: Select the corresponding lighting conditions where the cameras are installed.

Exposure settings

Exposure frequency: Auto: Automatic regulation of the exposure frequency
50: Fixed setting at 50 Hz network frequency
60: Fixed setting at 60 Hz network frequency
Fixed: The setting for the exposure frequency is determined and saved when the settings are saved.

Automatic exposure: Specifies the upper limit for automatic exposure.

Slow shutter: On: Setting for a long exposure time in night mode. This results in a brighter image in case of poor lighting conditions and is accompanied by a lower frame rate.

Off: Setting for a normal exposure time in night mode.

Backlight compensation: When this box is checked, the backlight compensation is activated. When this function is activated, the display of objects in front of bright backgrounds is improved.

Wide Dynamic Range

Mode: Off: The WDR function is deactivated
Auto: The WDR function is activated.
Level: The dynamic range of the WDR function can be set in 10 levels. The function is automatically controlled up to the maximum set value.

Noise reduction

Mode: Off: The noise reduction function is deactivated.
On: The noise reduction function is continuously activated.
Schedule:
Night mode: The noise reduction function is active when night mode is active.
Schedule: If the mode is controlled using a schedule, an appropriately configured schedule must be selected here.



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

6.3 Playback

Client PC



Open video file

This button starts the file selection dialog for opening a video file. Playback is then started automatically.



Pause

Pauses the playback of the video file.



Stop

Stops the playback of the video file.



Rewind

Rewinds the video.



Fast-forward

Fast-forwards the video.



Progress bar

Progress bar for playback. Click the bar to jump to a specific point in the video.



Digital zoom

The digital zoom can be activated here. The zoom area can be changed in the video image. The zoom factor can be changed using the “W” (wide angle) and “T” (tele-zoom) buttons.

Network storage

The file manager for data saved on the network is located here (network storage function).

The following buttons have the following functions. Some functions cannot be used until after a file is selected in the “File Name” column; until this happens the button is gray.



Navigate back



Update the current table page



Delete the selected file(s)



Select all files



Play the selected file



Download the selected file (it is only possible to download one file)

SD Card

The file manager for locally saved data is located here (microSD card). It is operated in the same way as the file manager under item “Network storage”.

File names / folder names

You can either switch to the current folder path or download the selected file by clicking the respective file/folder names. The data is saved in a folder with the name "IPCamera" along with the MAC address of the camera. The following subfolders are used by the camera.

Event: Storage location of the video data that was recorded due to an alarm event (e.g. motion detection).
Schedule: Folder for video data from recordings controlled by a schedule.

All recordings in the main folder are provided with subfolders with the current date (YYYYMMTT and hours (HH)):

Y = Year
M = Month
D = Day
H = Hour

IPCamera001BFE02BF5A/Event/20120425/10/

Example: The "Event" folder for event-controlled recording upon motion detection

Folder	File Name	Size
~/	Image-20120425100141_MD.jpg	36KB
	Image-20120425100141_MD_Post01.jpg	33KB
	Image-20120425100141_MD_Pre01.jpg	34KB
	Image-20120425100409_MD.jpg	33KB
	Image-20120425100409_MD_Post01.jpg	35KB
	Image-20120425100409_MD_Pre01.jpg	36KB
	Image-20120425100452_MD.jpg	33KB
	Image-20120425100452_MD_Post01.jpg	33KB
	Image-20120425100452_MD_Pre01.jpg	34KB
	Image-20120425100504_MD.jpg	33KB
	Image-20120425100504_MD_Post01.jpg	33KB
	Image-20120425100504_MD_Pre01.jpg	34KB

If you click the video file "Intervall_20100511120028.avi", a browser window opens and the file is offered for download or playback is immediately started in the standard media player in Windows. In some browsers these functions are not available; in this case use the buttons for "Playback" and "Download" in the bar over the table with the file names.

6.4 Network

▼ Network

Information

PPPoE

DDNS

RTSP

UPnP

Bonjour

Wireless

WPS

Information

MAC address:

The hardware address of the camera is shown here.

Obtain IP address automatically:

The IP address, subnet mask, and address for the default gateway are obtained automatically from a DHCP server. An activated DHCP server must be present in the network in this case.

Use the following IP address:

Manual setting of the IP address, subnet mask, and standard router (gateway)

IP address:

Manual setting of the IP address for the IP camera

Subnet mask:

Manual setting of the subnet address for the IP camera

Standard router (gateway):

Manual setting of the standard router for the IP camera

Use the following DNS server address:

If the DNS server address is not automatically assigned by a DHCP server, it can be manually assigned here.

Primary DNS server:

First server address with which the camera attempts to convert DNS names into IP addresses.

Secondary DNS server:

Alternative server address with which the camera attempts to convert DNS names into IP addresses.

HTTP port number:

The standard port for HTTP transmission is 80. As an alternative, this port can be assigned a value in the range of 1024–65535. If several IP cameras are located in the same subnetwork, then each camera should have its own unique HTTP port.

MAC Adresse

IP-Adresse automatisch beziehen

Folgende IP-Adresse verwenden

IP-Adresse . . .

Subnetzmaske . . .

Standard Router (Gateway) . . .

Die folgende DNS-Serveradresse verwenden

Primärer DNS-Server . . .

Secundärer DNS-Server . . .

HTTP Port-Nummer 80 (1024 to 65535)



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”. If the network configuration is changed, then the camera must be restarted (System \ Initialize \ Restart).

PPPoE

- PPPoE:** Here you can manually enter the data for your Internet access made available by your ISP (Internet service provider). This is necessary if the IP camera is directly connected to the Internet (without a router).
- IP address:** The IP address is automatically obtained if the user ID and password of your Internet access is correct and a connection to the ISP exists.
- User ID:** User ID of your Internet access (up to 64 characters)
- Password:** Password of your Internet access (up to 32 characters)
- Repeat password:** You need to confirm your password here.
- Automatically obtain a DNS server address:** Activate this to automatically determine the DNS server address.
- Use the following DNS server address:** If the DNS server address is not automatically assigned by your ISP, it can be manually assigned here.
- Primary DNS server:** First server address with which the camera attempts to convert DNS names into IP addresses.
- Secondary DNS server:** Alternative server address with which the camera attempts to convert DNS names into IP addresses.




Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”. If the network configuration is changed, then the camera must be restarted (System \ Initialize \ Restart).

DDNS

DynDNS or DDNS (dynamic domain name system entry) is a system that can update domain name entries in real time. The network camera is equipped with an integrated DynDNS client that updates the IP address independently via a DynDNS provider. If the network camera is located behind a router, we recommend using the DynDNS function of the router.

The following diagram offers an overview of accessing and updating the IP address using DynDNS.

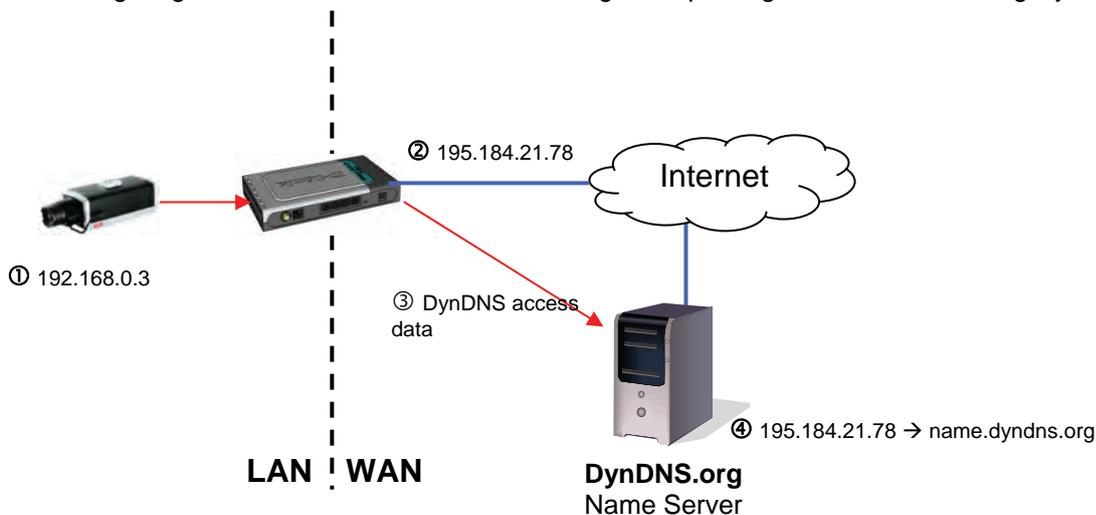

- DDNS:** Activates or deactivates the DDNS function.
- Server name:** Select a DDNS service provider. You must have registered access to this DDNS service provider (e.g. www.dyndns.org).
- User ID:** User ID of your DDNS account
- Password:** Password of your DDNS account
- Repeat password:** You need to confirm your password here.
- Host name:** Enter your registered domain name (host service) here (e.g. myIPcamera.dyndns.org).


The image shows a web form for configuring DDNS. At the top, there are radio buttons for 'An' (selected) and 'Aus'. Below are five input fields: 'Servername' (a dropdown menu showing 'http://www.dyndns.org'), 'Benutzerkennung', 'Passwort', 'Passwort wiederholen', and 'Host-Name'. At the bottom are two buttons: 'OK' and 'Abbrechen'.

Setting up a DDNS account

Set up a new account as follows under DynDNS.org:



Store your account information:

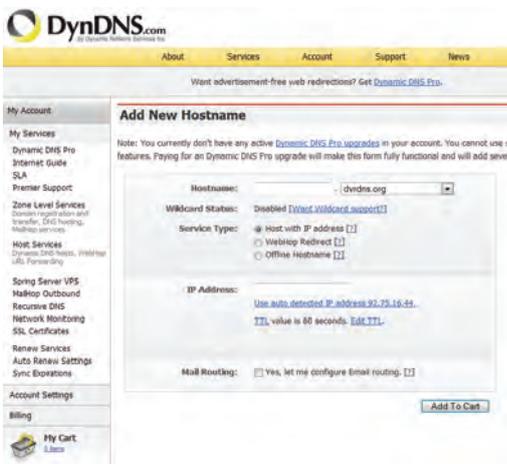


Note down your user data and enter this into the configuration of the network camera.

Accessing the network camera over DDNS

If the network camera is located behind a router, then access via DynDNS must be configured in the router. On the ABUS Security-Center homepage www.abus.com, you can find a description of DynDNS router configuration for common router models.

The following diagram offers an overview of accessing a network camera behind a router via DynDNS.org.

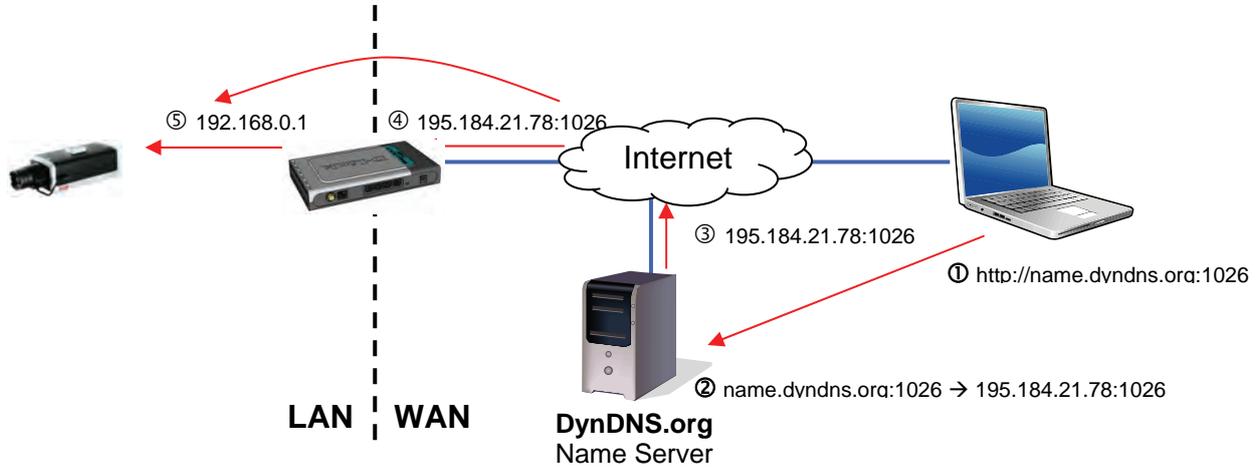

Port forwarding of all relevant ports (at least RTSP + HTTP) must be set up in the router in order to use DynDNS access via the router.



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”. If the network configuration is changed, then the camera must be restarted (System \ Initialize \ Restart).

RTSP

- Port range:** The standard port range for RTP unicast transmission is 5000–7999. As an alternative, the port range 1024–65534 can be used.
- RTSP port:** The standard port for RTSP transmission is 554. As an alternative, this port can be assigned a value in the range of 1024–65534. If several IP cameras are located in the same subnetwork, then each camera should have its own unique RTSP port.
- Profile name:** The access names for the various RTSP streams are configured here. Select the profile to be edited (H.264, MPEG-4, MJPEG, or 3GPP).
- Profile:** Configuration of the access name for the selected profile.
- Authentication:** Access to the relevant RTSP stream can be protected with a user name and password.

Examples:

Authentication from: rtsp://192.168.0.100:554/video.h264

Authentication to: rtsp://admin:12345@192.168.0.100:554/video.h264

Multicast:

Multicast designates message transmission from one point to a group (also referred to as a multi-point connection). The advantage of multicast is that messages can be transmitted simultaneously to several recipients or a closed user group without the bandwidth of the sender increasing according to the number of recipients. When using multicast, the sender only requires the same bandwidth as a single recipient. The packets are multiplied on each network distributor (switch, router).

In IP networks, multicast enables efficient sending of data to many recipients at the same time. This is accomplished with a special multicast address. In IPv4, the address range 224.0.0.0 to 239.255.255.255 is reserved for this purpose.

- Status:** Activated/deactivated
- Access name:** The access name for RTSP access is configured here.
- Multicast address:** Entry of the multicast server address
- Video port:** Automatic or manual assignment of the multicast video port.
- Audio port:** Automatic or manual assignment of the multicast audio port.
- TTL (Time-To-Live):** Length of time the packet is kept before being discarded.

UPnP

The UPnP (Universal Plug and Play) function makes it easy to control network devices in an IP network. This allows the network camera to be seen in the Windows network environment (e.g. as a network device).

- UPnP:** Enable or disable the UPnP function.
- Enable UPnP Port forwarding:** This enables Universal Plug and Play port forwarding for network services. If your router supports UPnP, then port forwarding for video streams is activated automatically on the router for the network camera using this option.
- HTTP port:** The standard port for HTTP transmission is 80. As an alternative, this port can be assigned a value in the range of 1024–65535. If several IP cameras are located in the same subnetwork, then each camera should have its own unique HTTP port.
- SSL port:** The standard port for SSL transmission is 443. As an alternative, this port can be assigned a value in the range of 1024–65535. If several IP cameras are located in the same subnetwork, then each camera should have its own unique SSL port.
- RTSP port:** The standard port for RTSP transmission is 554. As an alternative, this port can be assigned a value in the range of 1024–65535. If several IP cameras are located in the same subnetwork, then each camera should have its own unique RTSP port.

UPnP An Aus

UPnP Port Weiterleitung aktivieren

HTTP Port 80 (1024 ~ 65535)

SSL Port 443 (1024 ~ 65535)

RTSP Port 554 (1024 ~ 65535)

OK

Abbrechen



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

Bonjour

The Bonjour function is a function developed by Apple to make it easier to find network devices in a network. You can find more information about using Bonjour with Windows here:

http://support.apple.com/downloads/Bonjour_for_Windows

Bonjour: Enable or disable the Bonjour function.

Device name: This is the device name displayed in the Bonjour network environment.



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

WLAN antenna (TVIP21552 only)

The camera features a WLAN network interface for wireless data transmission in an IP network. The network camera must be connected via a network cable for the initial configuration of all WLAN parameters.

WLAN:	Enable or disable the WLAN interface.
MAC address:	Shows the MAC address of the wireless interface.
IP address:	The set IP address is displayed here. The address can be assigned automatically (DHCP) or manually (see below).
WLAN status display:	The camera automatically searches the environment for WLAN access points (APs).
ESSID:	Shows the name of the wireless network. If a connection to an access point has been established, this is indicated by the character “v” before the ESSID name.
Signal strength:	Shows the signal quality in percent. To ensure a good connection, this value should not be below 60%.
Security:	Indicates the way in which the network is protected (encryption type).
Wireless mode:	Shows the WLAN standard that the access point (AP) supports.
Connect:	When this button is pressed, the software attempts to connect to the selected access point. Additional data important for the connection must be configured in another window (it may be necessary to disable the pop-up blocker). The IP address is automatically determined.
Disconnect:	The connection to the selected access point is disconnected.
Manual:	Manual configuration of all data required for a wireless connection.
Update:	When this button is pressed, the list of available access points is updated.
ESSID:	The ESSID is the name of the access point.
Manual setting:	Manual setting of the ESSID.
Mode:	Select the WLAN connection mode here.
Infrastructure	The network camera is connected to the network via an access point.
Ad-Hoc	In this mode, the network camera can communicate directly with another network adapter (network card). What is known as a peer-to-peer environment is set up.
Authentication:	Here you can set the encryption mode for the wireless transmission.
Open	No encryption selected.
Common key	(WEP, Wired Equivalent Privacy) A 64- or 128-bit key is used for encryption (HEX or ASCII). For communication with other equipment, these keys must be the same on both devices.
WPA-PSK/WPA2-PSK	(10/26 HEX characters or 5/13 ASCII characters according to bit length) (Wi-Fi Protected Access – Pre-Shared Keys) With this method, dynamic keys are used. TKIP (Temporal Key Integrity Protocol) or AES (Advanced Encryption Standard) can be selected as the encryption protocols. What is known as a passphrase (pre-shared key) must be assigned as the key. (64 HEX characters or 8 to 63 ASCII characters)
Encryption:	Select the corresponding type of encryption here. Common key: WEP / disabled WPA-PSK / WPA2-PSK: TKIP or AES
Key length:	With WEP only. Select the bit length for the key here.
Network key:	With WEP only. Up to four keys can be assigned.
Obtain IP address automatically:	The IP address, subnet mask, and address for the default gateway are obtained automatically from a DHCP server. An activated DHCP server must be present in the network in this case.

Use the following IP address: Manual setting of the IP address, subnet mask, and standard router (gateway)

Use the following DNS server address: If the DNS server address is not automatically assigned by a DHCP server, it can be manually assigned here.

Primary DNS server: First server address with which the camera attempts to convert DNS names into IP addresses.

Secondary DNS server: Alternative server address with which the camera attempts to convert DNS names into IP addresses.

WLAN

WLAN

MAC Address

IP Address

Status of wireless networks

ESSID	Signal Strength	Security	Radio Type
v PMV1	62	WPA(2)-PSK/TKIP, AES	11b/g
PMV2	44	WPA(2)-PSK/TKIP, AES	11b/g



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

WPS (TVIP21552 only)

WPS (Wi-Fi Protected Setup) is a simple method for establishing a secure wireless network connection (WPA, WPA2). Consult the manual for your access point (e.g. router with WPS function) regarding the necessary steps for setting up the WPS function.

WPS: Enable the WPS function here if required.
MAC address: Shows the MAC address of the wireless interface.
IP address: The set IP address is displayed here. The address can be assigned automatically (DHCP) or manually (see below).

Configure via: **PBC:** Push Button Configuration – You set up a secure wireless connection by pressing the button on the access point or network camera.

PIN: A secure wireless connection is set up in the network camera and access point through the assignment of a PIN. Press the “Generate new PIN” button to assign a new random PIN. This PIN must then be made known in the access point (WPS settings). Press “Start”. The network camera and access point are then automatically connected to each other via a secure connection.

Connect: A connection is established via WPS with the selected procedure (PBC or PIN).

Disconnect: The connection is disconnected.
Update: The list of available access points supporting WPS is updated.

6.5 Security



User

This menu item describes the user administration of the network camera. Up to 10 user accounts can be defined. The user accounts can each have one of three user types.

User list: Shows all configured users with the corresponding authorization levels.

Add: Add a user account.

Edit: Edit an existing user account. Before doing this, you need to select the required user account from the list.

Delete: Delete a user account.

User types	Permissions
Administrator	Full access, including live views, configuration
Operator	Live view
Viewer	Live view

The default access data for the main administrator is as follows:

User name: **"admin"**

Password: **"12345"**

User name: Here you assign the user name that needs to be entered for access to the camera.

Password: Here you assign the user name that needs to be entered for access to the camera.

Repeat entry: Here you assign the password that the corresponding user needs to enter for access to the camera.

User type: Select an individual user type for the user ID.

Anonymous setting: Activated Anonymous setting allows any user to see the main page including video stream. All settings pages are still password protected.



Accept the settings by pressing "SAVE" or cancel them by pressing "Cancel".

HTTPS

The HTTPS protocol is used for encryption and for authenticating communication between the web server (network camera) and browser (client PC) on the Internet. All data transmitted between the network camera and client PC is encrypted using SSL. Apart from SSL encryption (compatible with all standard browsers), a source authorization certificate is required in order to use HTTPS.

Erstellen und Installieren

Selbst-signiertes Zertifikat erstellen ...

Installiertes Zertifikat

Subjektnamen

Kein Zertifikat installiert.

Eigenschaften ... Entfernen

HTTPS Anschlussregel

Administrator HTTP

Operator HTTP

Betrachter HTTP

Regel erstellen

Create a self-signed certificate:

Country:

State or province:

City:

Organization:

Department:

Registered name:

Duration of validity:

You can use this button to create a self-signed certificate.

Country specification in 2-character code (e.g. DE)

Max. length of 32 characters (A–z, A–Z, 0–9)

Enter how long this certificate will remain valid here (0–1000).

Selbst-signiertes Zertifikat erstellen ...

Land

Bundesland oder Staat

Ortschaft

Organisation

Abteilung

Registrierter Name

Gültigkeitsdauer 365 Tage (1-1000)

OK Abbrechen



Note: When using a “self-signed certificate”, you may receive a warning message from your browser. Self-signed certificates are always classified as insecure by the browser as the source certificate and authorization of the certification authority are both absent.



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

IP filter

Specific IP areas can be authorized or blocked for camera access in this configuration menu:

IP filter:	Enable or disable the IP filter function.
Filter list:	List of all filters that have been set up as well as buttons for editing the filters.
Filter type:	Preselection of whether a filter should permit or block before it is defined using the "Add" button.
Add:	Add a filter.
Edit:	Edit a selected filter.
Delete:	Delete a selected filter.
Rule:	Individual IP: Definition of a filter for an IP address. Network: Definition of a filter for a certain network. Range: Definition of a filter for a certain IP address range.



The IP filter function is only enabled with user type "Operator" or "Viewer". A user with the "Administrator" user type always has access to the network camera.



Accept the settings by pressing "SAVE" or cancel them by pressing "Cancel".

6.6 PT (Pan/Tilt)

PT settings

Control console:	The camera can be controlled as in the live cast using the buttons of the control console. This makes it easier to set the preset positions. When Internet Explorer is used, the video is opened via an ActiveX plug-in. When Mozilla Firefox is used, the video is displayed in JPEG mode.
Calibration:	If the pan/tilt head is wrongly positioned horizontally or vertically due to external influences, it can be recalibrated here.

Preset position

Name:	Assign a unique name to the preset position.
Home:	Check the box in order to select the position to be saved as the standard position (home).
Add:	Press the button to add a position.
Home (text box):	The current name of the home position is displayed here.
Start:	Select a position in the preset positions list and then press this button to call up the position.
Delete:	Select a position in the preset positions list and then press this button to delete the position.
Delete all:	This button can be used to delete all items in the list.

Patrol

Name:	Display of the patrol name in the list.
Status:	Display of the activity status of the patrol.
Start:	Select a patrol in the patrol list and then press this button to start the patrol.

Standard setting:

Add: Press this button to add a patrol. A configuration window is opened (patrol settings).

Edit: After this button is pressed, a window for editing a selected patrol opens.

Delete: Delete a previously selected patrol.

Patrol settings

Patrol name: Assign a unique name to the patrol here.

Patrol position: Here you can enter settings for each patrol position.

Sequence: Select the position of the preset to be saved in the patrol. Up to eight positions can be assigned in a patrol.

Select position: Select a previously saved position.

View duration: Dwelling time for each position in seconds. Please note that turning of the pan/tilt head is included in this value.

Add: Add a preset to the patrol list.

Interval: This value defines the frequency with which the patrol is executed (max.: every 30 minutes, min.: every 999 minutes).

Tour-Einstellungen

Tourname

Tourposition

Reihenfolge Position wählen Ansichtsdauer Sek.

Intervall Min.

	Preset Name	Ansichtsdauer (Sek.)	
1.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
2.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
3.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
4.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
5.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
6.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
7.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>
8.	<input type="text"/>	<input type="text"/>	<input type="button" value="Löschen"/>



Accept the settings by pressing “Save” or cancel them by pressing “Cancel”.

PT control

Pan speed:

Set a value for the pan speed here (1~50).

Tilt speed:

Set a value for the tilt speed here (1~50).

Auto-pan speed:

Set a value for the auto-pan speed here (1~50).

Schwenk-Geschwindigkeit	<input type="range"/>	<input type="text" value="50"/>
Neige-Geschwindigkeit	<input type="range"/>	<input type="text" value="25"/>
Auto-Schwenk Geschwindigkeit	<input type="range"/>	<input type="text" value="50"/>

OK

Abbrechen



Accept the settings by pressing “Save” or cancel them by pressing “Cancel”.

6.7 Event

What are known as actions (e.g. sending of an e-mail with an image upon motion detection) are generally configured as follows:

Event-controlled recording:



Scheduled recording:

A scheduled recording can only be made with video files.



6.6.1 Event server

All configured event servers are shown in a list here.

Name: Name used for the event server
Protocol: Protocol used for the event server
Network address: Network address / target address of the event server

Add: Add an event server
Edit: Edit an event server entry
Delete: Delete an event server entry

General

Name: Enter a name for the server here.

Server settings

Use the selection box to select a server type.

FTP:

Network address: Enter the IP address or domain name of the FTP server here. The maximum length is 64 characters.
Server port: Enter the port number of the FTP server. The standard port for FTP servers is 21.
Server path: This is the file folder in which the data on the FTP server is saved. The maximum length is 64 characters.
User name: User name of the account that was configured in the FTP server.
Password: Password of the account that was configured in the FTP server.
Repeat password: Reenter the password here.

Passive mode: Enable this function if the FTP server was configured in passive mode.
Test: When this button is pressed, the FTP server settings are tested. A test file is uploaded to the FTP server

SMTP:

SMTP server address: Enter the address of the outgoing e-mail server here (SMTP server).
Server port: The standard SMTP server port is 25. An alternative port can be assigned if required.
SSL: If the e-mail server uses SSL, it can be enabled here.
Authentication: Define the authentication type for the e-mail account here.
SMTP: If authentication on the e-mail server requires a user name and password, this option must be enabled.
POP before SMTP: Select this option if e-mails must be retrieved before e-mails can be sent. It may be possible to delete "POP before SMTP" in the e-mail account settings.
E-mail sender: This is the address of the e-mail account. The maximum length is 64 characters.
E-mail recipient: The e-mail address of the recipient. The maximum length is 64 characters.
Test: When this button is pressed, the SMTP server settings are tested. A test file is sent to the e-mail recipient.

HTTP:

Use this function to save image data (individual images) on an HTTP server. A CGI script on the HTTP server must be able to receive the data. In the event of questions, please contact your network administrator.

URL: Enter the URL of the HTTP server (e.g. "192.168.0.156/cgi-bin/webcam").
Port: Enter the port on which the HTTP server operates.
User ID: User ID on the HTTP server
Password: Password on the HTTP server
Repeat password: Reenter the password here.
Proxy address: Server name when a proxy server is used
Proxy port number: Port number of the proxy server
Proxy user name: User ID on the proxy server
Proxy password: Password on the proxy server
Test: When this button is pressed, the HTTP server settings are tested. A test file is sent to the HTTP server.

Network drive:

Type: Protocol selection between the Windows network (SMB/CIFS) or UNIX network (NFS)

Windows network (SMB/CIFS)

Network storage capacity: Entry of the IP or drive/folder of the network drive
Ex.: \\IP\Folder
Ex.: \\my_nas\Folder name

Workgroup: Workgroup of the Windows network drive
User name: User name of the workgroup.
Password: Password of the workgroup.
Repeat password: Reenter the password for the workgroup here.
Create folder: An additional subfolder is created on the network drive.
Test: When this button is pressed, the network drive settings are tested. A test file is sent to the network drive.

Unix network drive (NFS):

Network storage capacity: Entry of the IP or drive/folder of the network drive
 Ex.: my_nas:\Folder name

Create folder: An additional subfolder is created on the network drive.

Test: When this button is pressed, the network drive settings are tested. A test file is sent to the network drive.

Media settings

File attachment: Here you select a file type for the file attachment.
 Snapshot: The file attachment is individual images in JPEG format.
 Video: The file attachment is video files in MP4 format.
 System log: The log file is sent as the medium.

Snapshot

Send pre-alarm image(s): Enter the required number of pre-alarm images (number 0–7).
Send post-alarm image(s): Enter the required number of post-alarm images (number 0–7).
File name: Assign a file name if required.
Suffix: None: No suffix is added to the file name.
 Date/time: The date and time is added to the file name.
 Sequence number: A sequence number is added to the file name.
Delete sequence number: When the button is pressed, the sequence number is reset.

Video

Pre-alarm recording: Enter a pre-alarm recording time (0–7 seconds).
Post-alarm recording: Enter a post-alarm recording time (1–7 seconds).
File name: Assign a file name if required.

System log

File name: Assign a file name if required.

SD card

SD card: Enable or disable the SD card function. An SD card must be inserted for this. The SD card must be inserted when the power is off.
 When the SD card function is enabled, the SD card user interface changes.

Format: Press this button to format the SD card.

SD card status: Shows the free storage capacity and size of the memory card in KB.

30023904/31519696 KB

Create folder: Another subfolder for storage can be created on the SD card.
Overwrite: When this function is enabled, all data is overwritten when the maximum SD card capacity is reached.
Storage space warning: The storage space warning function can be used as a triggering event for event actions. If the free storage space falls below a certain value (5%, 10%, 25%, 50% free storage space), the event is triggered.

Media settings

The possible settings are the same as the settings under item “Event server list / Media settings”.

6.6.2 Event recording

The events list contains all configured event actions.

Name: Name of the configured event
Enabled: Shows whether the event is enabled.
Trigger: Information about the trigger used for the event action
Action: Information about the action that follows after the event is triggered

Schedule: Schedule of the event action
Priority: The camera processes event actions in the order in which they occur. The priority setting allows certain events to receive priority treatment.

Example:



Add: Add an event action to the event list (-> event configuration).
Edit: Edit a configured event action.
Delete: Delete an event action.

Event configuration

General

Name: Assign a name to the event action.
Event: Enable or disable the event.

Trigger

Triggered by: The following options are available as triggers:
Motion detection:
Switching input:
Interval process
Upon restart:
ICR filter:
Storage space warning:
Network connection inactive:
IP notification:

The configuration of the various triggering events are described below.

Motion detection

- Time between two event triggers:** Time definition in seconds (up to 999 seconds) before a possible next event is registered by the camera.
- Detection range:** Selection of a previously configured motion range (configuration using the "Motion detection" item).
- Detection type:** Selection of the detection time point
Start: At the beginning of the event
Stop: At the end of the event

Switching input

- Time between two event triggers:** Time definition in seconds (up to 999 seconds) before a possible next event is registered by the camera.
- Switching input 1:** Click here to activate the switching input as the trigger. The following switching thresholds are available:
Active: Upon increasing edge of the switching input
Inactive: Upon declining edge of the switching input

Interval process

- Triggering every xx hours xx min.:** The shortest triggering interval is 1 min. The longest triggering interval is 23 hours and 59 min.

Upon restart

The event is executed upon restart of the camera.

ICR filter

- Time between two event triggers:** Time definition in seconds (up to 999 seconds) before a possible next event is registered by the camera.
- ICR filter mode:** The event can be triggered by switching into day or night mode.

Storage space warning

The storage space monitoring of the SD card is used as the trigger.

Network connection inactive

Loss of the network connection is used as the trigger. The action is executed upon reestablishment of the network connection.

IP notification

Change of the IP address is used to trigger the change. Check the option that is to be monitored (DHCP, FixedIP, PPPoE)

Action

The following actions can be defined within an event action. Not all actions are available with all triggers. For an activation, it is necessary to check the box of the action, but it is also possible that other boxes need to be checked for further configuration of the action.

- Send image(s): Select the required event server that has already been configured.
- Send notification: This action sends a notification to an HTTP server. The option HTTP server needs to be configured beforehand.
- Activate switching output: Select the switching output. The switching behavior also needs to be configured:
Constantly active during event triggering: While the trigger is triggered (such as through an extended period of motion detection), the switching output remains activated.
Constantly active for: The switching output can be activated for 1–999 seconds.
- Night mode: Night mode of the camera is activated. The switching behavior also needs to be configured:
Constantly active during event triggering: While the trigger is triggered (such as through an extended period of motion detection), night mode remains activated.
Constantly active for: Night mode can be activated for 1–999 seconds.

Schedule

- Always:** The event action is always executed without a time-based restriction.
- Schedule:** Here a schedule that has already been configured can be selected for the event action. Schedules are configured under the “Event / Schedule” item.

6.6.3 Continuous Recording

Scheduled recording can be used only for recordings of video files.

- Name:** Name of the configured event
- Active:** Shows whether the event is enabled.
- Action:** Information about the action that follows after the event is triggered
NS: Network storage (network drive)
LS: Local storage (SD card)
- Schedule:** Schedule of the event action

Name	Enable	Trigger	Action	Schedule
No item has been contained.				

General

- Name:** Enter a name for the scheduled recording here.

Action

File size: Define the file size for a video file here (1–50 MB).
Event server: Choose between an SD card and a network drive as the target server. It is necessary that an SD card or network drive be configured in the camera.

Schedule

Always: The event action is always executed without a time-based restriction.
Schedule: Here a schedule that has already been configured can be selected for the event action. Schedules are configured under the “Event / Schedule” item.

5.1 Switching input and switching output


The settings for the switching output and switching input are defined here.

Port: Switching input or output
Normal: Setting for the normal state of the port.
NO (normally open)
NC (normally closed)
Current status: Open Circuit = Open
Closed Circuit = Closed

6.8 Motion detection

Name: Name of the motion window
Night suppress: The function night suppress will provide a 2nd value for sensitivity in night mode. The higher the level for night suppress function, the lower is the sensitivity in night mode.
Show all areas: Check this box to show all configured motion areas in the preview video image.
Threshold value: Threshold value for triggering of a motion event
Sensitivity: Sensitivity setting of the motion area

For setting of the motion detection, an indicator in the preview video shows the current values of the threshold value and the current triggering value. This helps with the configuration of the threshold value and sensitivity.

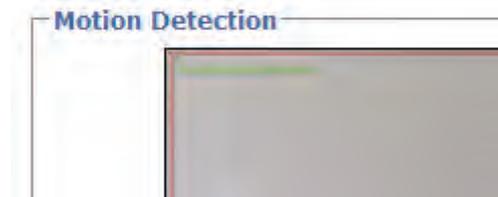

Add:
Delete: Remove a configured motion area. Before doing this, you need to select an entry from the list of motion areas.

6.9 Schedule

Name: Enter a name for the schedule.

Add: Press the button to add a schedule to the list.

Edit: Edit a schedule. Before doing this, select the relevant schedule.

Delete: Delete a schedule.

Start Time: Begin of the active time period

End Time: End of the active time period

Add: Adds a day to the active time period. Several time schedules can be defined for each day. Active time periods are marked in red; inactive time periods are marked in blue.

Delete: Delete a time period that was selected in the selection box of the day.

Use the same time period every day: The configuration of the day Monday ("Mo") is used for every day of the week.

General
Name

Schedule
Start Time : - End Time :

Day	Start Time	End Time	Active (Red)	Inactive (Blue)
Mon	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00
Tue	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00
Wed	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00
Thu	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00
Fri	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00
Sat	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00
Sun	00:00-06:00	06:00-24:00	00:00-06:00	06:00-24:00

Use the same time schedule every day.

6.10 Audio detection

Audio detection: Activate the audio detection by ticking the box.

Threshold: Indicates the threshold limit for the microphone after which an alarm is triggered. This alarm can be used as a trigger for SMTP (e-mail) transmission, for example.

Sensitivity: Indicates the frequency at which changes in the noise level are detected. The value can be set between 1 and 100.



Accept the settings by pressing "SAVE" or cancel them by pressing "Cancel".

6.11 System log

Relevant system data is logged in the system log. This can be useful for troubleshooting when installing the network camera. The data can also be sent to a log server.



Activate remote log: Activate the remote log function by checking this box
Server name: IP address of the domain name of the log server
Server port: Port of the log server



Accept the settings by pressing “SAVE” or cancel them by pressing “Cancel”.

7. Maintenance and cleaning

7.1 Function test

Regularly check the technical safety of the product, e.g. check the housing for damage.

If safe operation is no longer possible, cease operating the product and safeguard it against accidental operation.

Safe operation is no longer possible under the following circumstances:

- The device shows visible damage.
- The device no longer works correctly.
- The device has been stored in adverse conditions for a long period of time.
- The device has been subjected to stress during transportation.



This product is maintenance-free for you. There are no components to service or anything inside the product to check. Never open it.

7.2 Cleaning

Clean the device with a clean, dry cloth. The cloth can be dampened with lukewarm water if it gets dirty.



Ensure that liquid does not penetrate the device, as this will cause damage. Do not use any chemical cleaning products, as they could damage the surface of the housing.

8. Disposal



Devices displaying this symbol may not be disposed of as domestic waste. At the end of its service life, dispose of the product according to the applicable legal requirements. Please contact your dealer or dispose of the products at the local collection point for electronic waste.

9. Technical data

Model number	TVIP21502	TVIP21552
Image sensor	1/4" progressive scan CMOS sensor	
Camera type	Day/night	Day/night
Resolution	1280x720, 640x480, 320x240, 160x120	
Pixels (total)	1280x720	
Pixels (effective)	1280x720	
Lens	4,0 mm	
Horizontal angle of view	53°	
Digital zoom	10x	
Day/night switching	Electromechanical IR-cut filter	Electromechanical IR-cut filter
Minimum illumination (color)	0.5 lux (IR off) / 0 lux (IR on)	
Infrared LEDs	11 IR LEDs	
IR range	5 meters	
IR setting	0–100%	
Image compression	H.264, MPEG-4, MJPEG	
Frame rate	H.264: 25 frames/sec @ 640x480	
	H.264: 25 frames/sec @ 1280x720	
	MPEG-4: 25 frames/sec @ 640x480	
	MPEG-4: 15 frames/sec @ 1280x720	
	MJPEG: 25 frames/sec @ 640x480	
	MJPEG: 25 frames/sec @ 1280x720	
Number of parallel streams	4	
Electronic shutter control	Automatic	
White balance	Yes	
Amplifier control	0–9 dB	
Backlight compensation	BLC, WDR	
Noise reduction	2D DNR	
Motion detection	3 zones	
Pre-alarm/post-alarm memory	Yes, 7 pre-alarm / 7 post-alarm images, 7 sec. pre-recording, 7 sec. post-recording	
Image overlay	Date, camera name, private zone	
Integrated memory	MicroSD slot SD/SDHC, max. 32 GB, class 6	
Alarm notification	E-mail / FTP / HTTP notification / network drive / microSD card	
Supported browsers	Mozilla Firefox, Safari, or Internet Explorer 6.x and higher	
Supported software	ABUS VMS	
Network access	RJ-45 Ethernet 10/100 Base-T	
Network protocols	Bonjour, TCP/IP, DHCP, PPPoE, ARP, ICMP, FTP, SMTP, DNS, NTP, UPnP, RTSP, RTP, HTTP, TCP, UDP, 3GPP/ISMA RTSP	
WLAN	-	IEEE 802.11b/g/n
PoE (Power over Ethernet)	PoE IEEE 802.11af	-
Encryption	HTTPS	HTTPS, WEP 64/128 bit, WPA/WPA2-PSK, WPS
Access protection	IP address filter, user name, password, 3 authorization levels	
Power supply	12 V DC	
Current consumption	Max. 1 A	
Operating temperature	0°C – 50°C	
Dimensions (WxHxD)	112 x 114 mm	
Certifications	CE, RoHS, WEEE, REACH	

Model number	TVIP22500
Image sensor	1/4" progressive scan CMOS sensor
Camera type	Day/night
Resolution	1920x1080, 1280x1024, 1280x960, 1280x720, 1024x768, 640x480, 320x240
Pixels (total)	1920x1080
Pixels (effective)	1920x1080
Lens	4,0 mm
Horizontal angle of view	88°
Digital zoom	10x
Day/night switching	Electromechanical IR-cut filter
Minimum illumination (color)	0.5 lux (IR off) / 0 lux (IR on)
Infrared LEDs	11 IR LEDs
IR range	5 meters
IR setting	0–100%
Image compression	H.264, MPEG-4, MJPEG
Frame rate	H.264: 25 frames/sec @ 1920x1080
	H.264: 25 frames/sec @ 1280x720
	MPEG-4: 15 frames/sec @ 1920x1080
	MPEG-4: 25 frames/sec @ 1280x720
	MJPEG: 25 frames/sec @ 1920x1080
	MJPEG: 25 frames/sec @ 1280x720
Number of parallel streams	4
Electronic shutter control	Automatic
White balance	Yes
Amplifier control	0–9 dB
Backlight compensation	BLC, WDR
Noise reduction	2D DNR
Motion detection	3 zones
Pre-alarm/post-alarm memory	Yes, 7 pre-alarm / 7 post-alarm images, 7 sec. pre-recording, 7 sec. post-recording
Image overlay	Date, camera name, private zone
Integrated memory	MicroSD slot SD/SDHC, max. 32 GB, class 6
Alarm notification	E-mail / FTP / HTTP notification / network drive / microSD card
Supported browsers	Mozilla Firefox, Safari, or Internet Explorer 6.x and higher
Supported software	ABUS VMS
Network access	RJ-45 Ethernet 10/100 Base-T
Network protocols	Bonjour, TCP/IP, DHCP, PPPoE, ARP, ICMP, FTP, SMTP, DNS, NTP, UPnP, RTSP, RTP, HTTP, TCP, UDP, 3GPP/ISMA RTSP
WLAN	-
PoE (Power over Ethernet)	PoE IEEE 802.11af
Encryption	HTTPS
Access protection	IP address filter, user name, password, 3 authorization levels
Power supply	12 V DC
Current consumption	Max. 1 A
Operating temperature	0°C – 50°C
Dimensions (WxHxD)	112 x 114 mm
Certifications	CE, RoHS, WEEE, REACH

10. GPL license information

Here we wish to inform you that the network surveillance cameras TVIP21502, TVIP21552 and TVIP22500 contain Open Source Software, which is licensed exclusively under the GNU General Public License (GPL). To ensure that your use of the programs conforms with GPL, please refer to the GPL license conditions.

License text

The license text for the GNU General Public License can be viewed on the enclosed software CD.

Source code

The source code in use can be obtained from ABUS Security-Center upon request if you send an e-mail to license@abus-sc.com up to three years after purchase.

Executability of the overall system

The software packets (source code) do not enable you to set up a functional overall system. You also need a variety of software applications and the hardware developed for the network camera system.