

# TASK LAMP Installer Guide

## SECTION ONE GENERAL INFORMATION

Do not use this task lamp in situations where flammable liquids, vapours or gases are present.

Do not alow this inspection lamp to get wet in storage or in use.

Do not use if the cable is damaged in any way.

The cable is not replaceable and if damaged this product must be discarded.

Avoid hanging the inspection lamp by the cable.

### PARTS INCLUDED

- Task Lamp, cable; plug
- Instruction manual. Please keep safe for future reference.
- 2D pre fitted bulb

# SECTION TWO BULB FITTING AND REPLACEMENT

The bulb is pre fitted in the on purchase however for future reference please see instruction below for changing the lamp - Ensure the unit is unplugged from any power supply before changing the bulb.

To fit the 2D bulb, simply unscrew the retaining screws at the back of the unit. This will release the front cover.

Fit the new 2D bulb ensure the bulb is sat correctly in the retaining clips.

Replace the front cover then re insert and tighten the retaining screws.

### **IMPORTANT**

This unit must only be connected to an appropriate power supply. When not in use always disconnect from the power supply.

# TECHNICAL SPECIFICATIONS

Power Supply	110V 240V (~50Hz)	
Lamp Type	28W 38W (2D 4 pin )	
Environmental Protection	IP44 (suitable for outdoor use)	

