



### How to install the seal into the plastic cover / aluminium cover



seal / plastic cover




seal / aluminium cover  
(PS:the same installation as plastic cover)




1.Pay attention on the seal (position A).



2.Pay attention on the cover (position B).

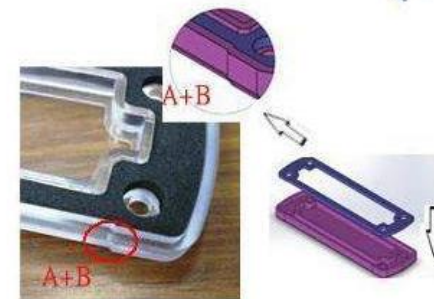

3.Should be installed in the same side.  
(position A+B)

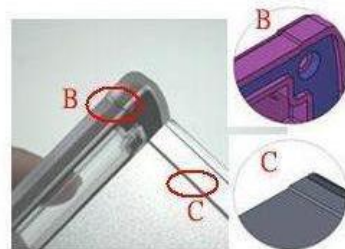

4.Done