

DURACELL®



Charger Instructions for Duracell High-Speed Chargers (ALL)

Caution: We recommend charging DURACELL NiMH rechargeable batteries only. Do not attempt to charge non-rechargeable batteries. Misuse could cause batteries to rupture, causing personal injury or damage. Indoor use only. Dry location use only. Risk of electric shock. Never disassemble or alter any part of the charger or batteries. Charger or batteries may become hot during charging and will cool down when charging is complete. Not recommended for use by children. Battery caution: Do not disassemble or dispose of in fire. Check for correct polarity (+/-). Never mix NiMH batteries with any other type of battery. For NiMH designed chargers only. DURACELL battery chargers recommended. Keep away from children. Do not swallow. If swallowed, seek medical attention.

IMPORTANT CHARGER SAFETY INSTRUCTIONS:

1. SAVE THESE INSTRUCTIONS – this sheet contains important safety and operating instructions for this charger
2. Before using battery charger, read all instructions and caution markings on the charger, battery and device to be powered,
3. CAUTION – to reduce the risk of injury, charge only DURACELL NiMH rechargeable batteries. Do not mix batteries of different capacities. Do not charge alkaline, zinc carbon, lithium or any other kind of batteries not specified as they may burst causing personal injury and damage. Keep batteries away from fire or explosion may occur. For proper insertion please observe polarity indicators (+/-). Keep batteries away from children. If swallowed, contact a physician at once.
4. Indoor use only, do not expose charger to rain or snow. Do not use in a bathroom.
5. Do not place in water or near extreme heat
6. Do not operate charger with a damaged cord or plug.
7. Do not operate charges if it has been damaged in any way.
8. Do not disassemble charger. Disassembly may result in a risk of electric shock or fire.
9. To reduce risk of electric shock, unplug the charger from the outlet before attempting to clean or when not in use.
10. This appliance can be used by children ages from 8 years and above and persons with reduced psychical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and other maintenance shall not be made by children without supervision.

11. Never use an extension cord or any attachment not recommended by DURACELL, otherwise this may result in a risk of fire, electric shock or injury to person.

CHARGING INSTRUCTIONS:

1. Insert DURACELL NiMH batteries into the charging slots with the (+) and (-) ends oriented correctly.

To charge either two (2) or four (4) AA/AAA cells, use the following positions

- Charge two at once (side by side on either the right-hand side or the left-hand side)
- Charge all four at once
- Do not charge one at a time, or three, or two on opposite sides

2. Open

To open, grip the charger on each side and open until it locks into place.

3. Load NiMH batteries into the charger

To use the fast charge mode, insert 2 AA or 2 AAA batteries in the appropriate position. Fast charge mode only works for 2 AA or 2 AAA batteries.

4. Plug the charger into an AC outlet.

5. CHARGING/LED INDICATION:

- LED lights will cycle through RED and then GREEN when batteries are first inserted correctly and charger is plugged in.
- LED lights will turn RED when batteries are charging.
- LED lights will BLINK GREEN when the batteries are ready to use.
- LED lights will turn GREEN when the batteries have become charged.
- LED lights will blink RED* if abnormal conditions are detected charging, charging will stop.
- If blinking Red LED is encountered, first ensure you are attempting to charge a NiMH battery. If yes, remove and reinsert the NiMH battery. If battery has become heated, it may be damaged. Insert a new NiMH battery.

LED STATUS INDICATOR:

- Condition: LED colour
- No battery: Off
- Charging: Solid red
- Ready for use: Blinking green
- Charged: Solid green
- Error/Bad battery: Blinking red

6. STORAGE

Unplug the charger and remove the batteries once charging is complete.

Notes & Usage Tips:

1. Batteries will be automatically stop charging when full charge is reached
2. Safety protections will prevent battery from overcharging
3. Batteries that are new or have been stored for an extended period may need to be charged and used 2 -3 times before optimal charge performance is achieved
4. New non-pre-charged batteries may require charging before use
5. The charger is capable of accepting 100-240 V AV 50/60 Hz and therefore, can be used overseas with a corresponding regional plug converter.
6. If battery is fully charged and then reinserted right away into the charger, the fault Red Blinking LED indicator may occur since the battery is already fully charged
7. If charging AA and AAAs at the same time, charger will charge at the slower charge rate for AAA
8. Charging time may vary based on battery capacity (mAh)
9. Maximum Capacity: AA 2500mAh, AAA 850mAh.

CORRECT DISPOSAL OF THIS PRODUCT:

For EU Countries:

This marking indicated that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

For Non-EU Countries:

This product contains batteries and/or recyclable electronic waste. To protect the environment, do not dispose of it in the household waste, but that it to appropriate local collection points for recycling.