

FLUKE®

6200-2 Appliance Tester

Quick Reference Guide


⚠⚠ Warning

To prevent possible electrical shock, fire, or personal injury, read the “6200-2/6500-2 Safety Information” before you use this Product.

Go to www.fluke.com to register your product, download manuals, and find more information.

INSULATION / R_{ISO}

• Insulation Test Class II

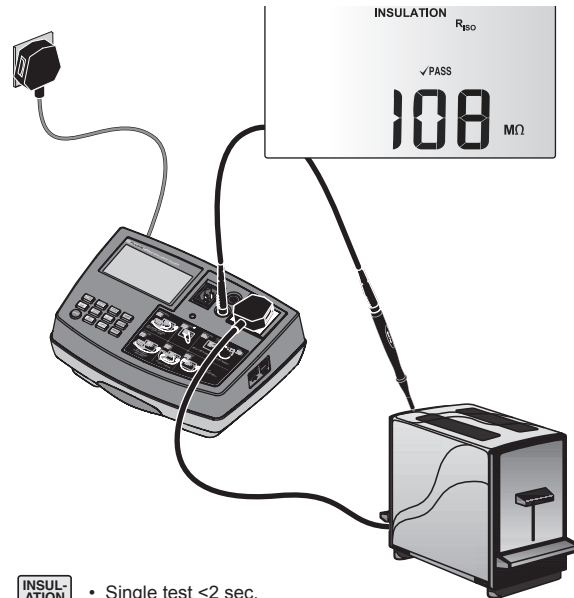


LOAD/LEAK / I_A/I_L

• Load/Leak Current Test




IEC LEAD / KALTGE- RATELEIT

• IEC-Lead Test

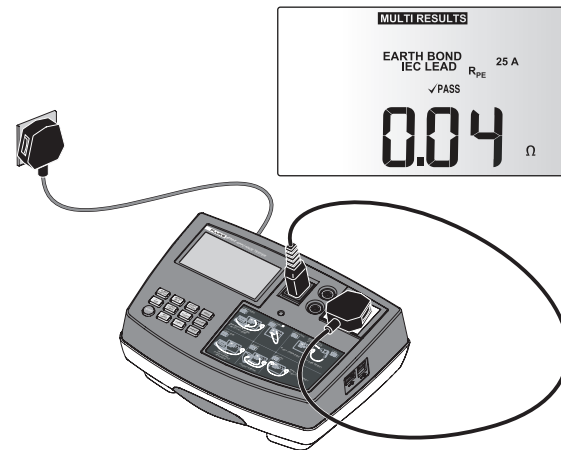


Printer Connection

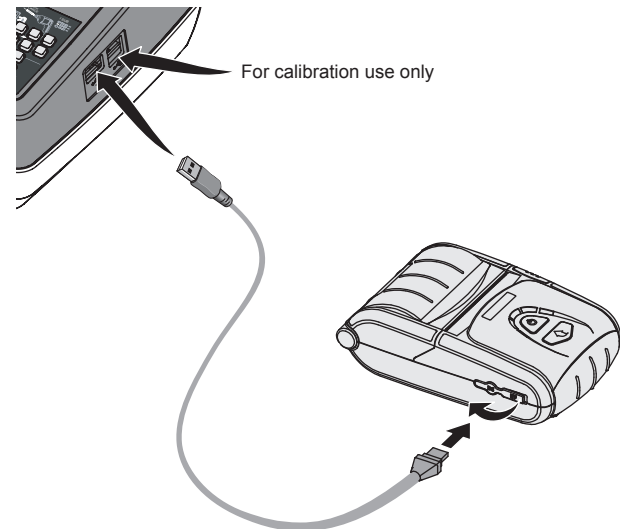

ZERO / KOMP


• Bond Zero Test

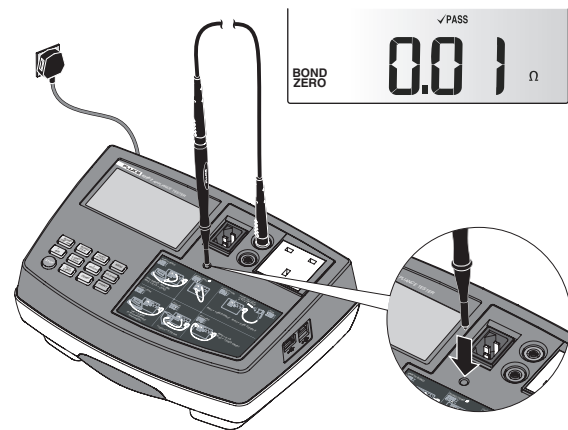

- Single test <2 sec.
- Continuous test >2 sec.


I_{SUB} / I_{EA}

• Substitute Leakage Test Class II

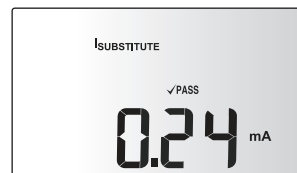


INSULATION / R_{ISO}

• Insulation Test Class I

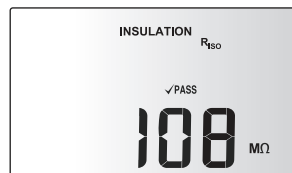


I_{TOUCH} / I_B

• Touch Current Test

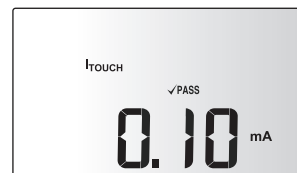


I_{SUB} / I_{EA}

• Substitute Leakage Test Class I

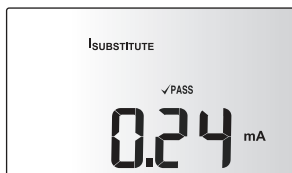

BOND 200 mA • BOND 25 A / R_{PE} 200 mA • R_{PE} 10 A

• Bond Test

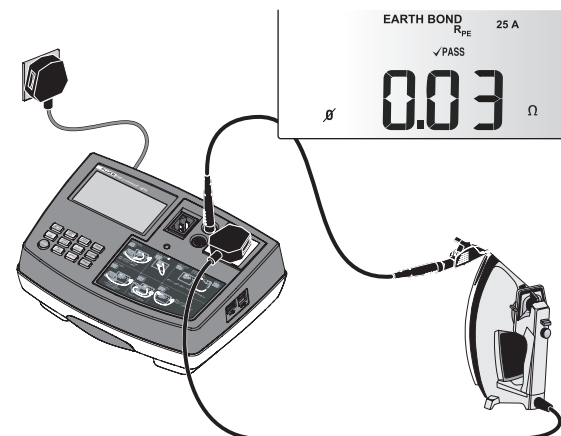

- Single test <2 sec.
- Continuous test >2 sec.

FLUKE®

6500-2 Appliance Tester

Quick Reference Guide



⚠⚠ Warning

To prevent possible electrical shock, fire, or personal injury, read the “6200-2/6500-2 Safety Information” before you use this Product.

Go to www.fluke.com to register your product, download manuals, and find more information.


SET
UP

• Bond Zero Test

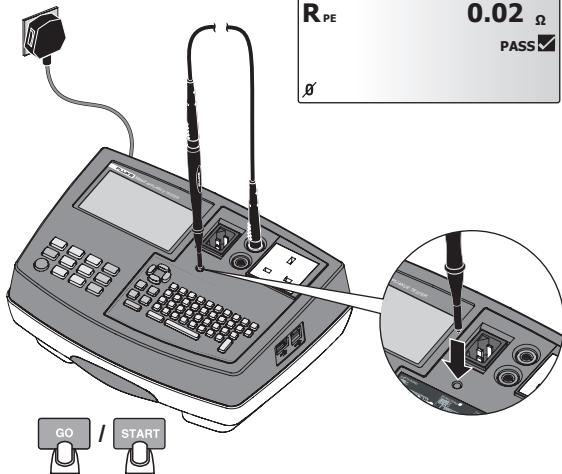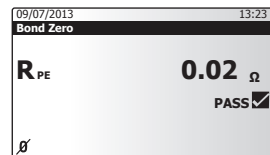


BOND
200 mA • BOND
25 A / R_{PE}
200 mA • R_{PE}
10 A

• Bond Test

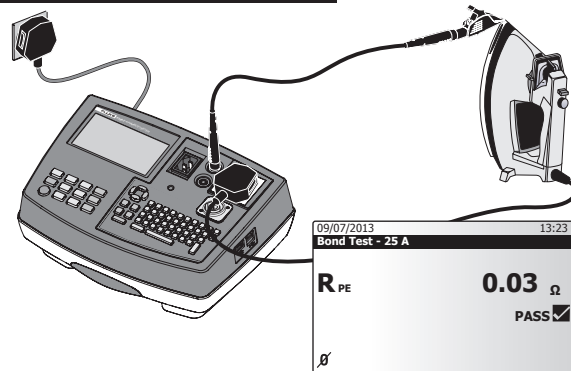


IEC
LEAD / KALTGE-
RATELEIT

• IEC-Lead Test

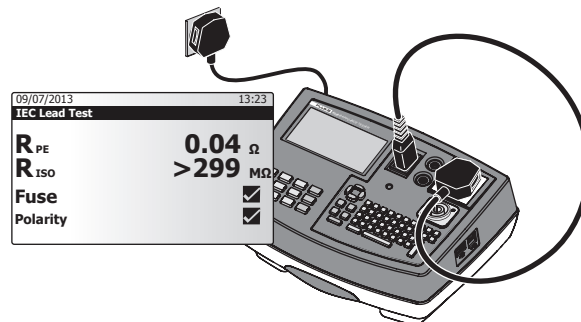

LOAD/
LEAK / I_A/I_L / RCD


• General-Purpose AC RCD Module Test

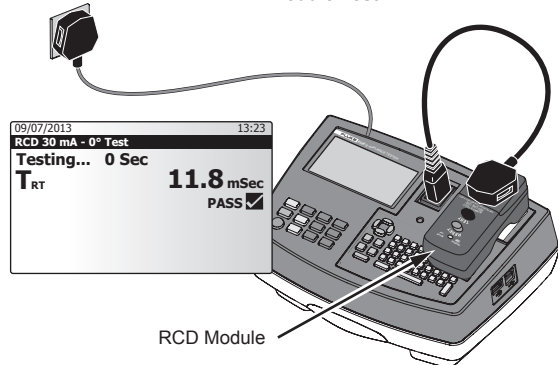

RCD Module


INSUL-
ATION / R_{ISO}

• Insulation Test Class I

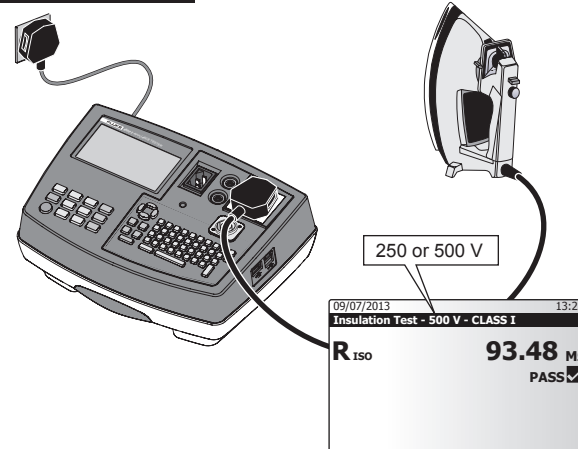


LOAD/
LEAK / I_A/I_L

• Load/Leakage Test

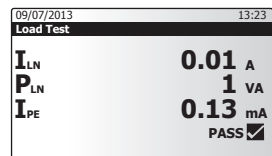

I_{SUB} / I_{EA}

• Substitute Leakage Test Class I

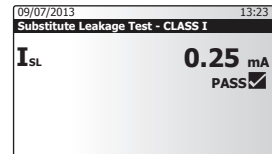


AUTO

• Auto Test


Class I
Class II

⚠ See Users Manual
for more information.

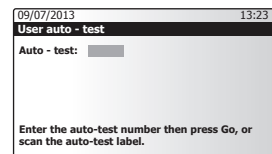


INSUL-
ATION / R_{ISO}

• Insulation Test Class II

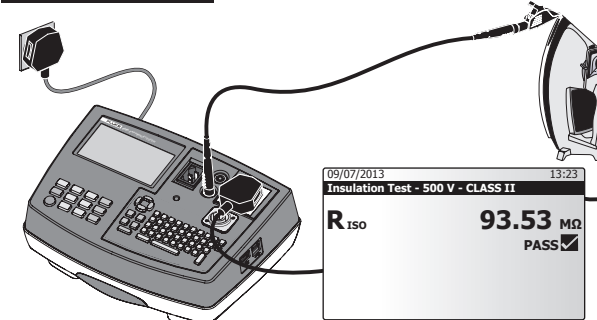


I_{SUB} / I_{EA}

 • Substitute Leakage Test Class II




TOUCH / I_B

 • Touch Current Test



PC/Scanner/Printer USB

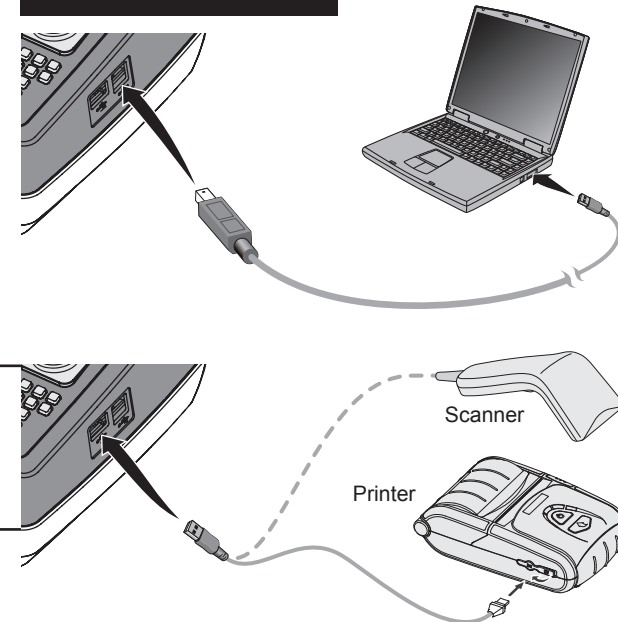

110 V Line Testing

