

Holes on bracket for screw
Easy mounting of bracket on wall by:
- Double sided tape or
- Screws

TO SET TIME

- Slide switch to **CLOCK SET**.
- Press **HR** or **MIN** button to desired time.
- Slide switch to **LOCK** after time set.


12HR AM/PM OR 24HR INTERNATIONAL TIME DISPLAY

- Simply slide the **12HR/24HR** switch to choose your desired format.


To select °C or °F readout:
Slide switch to °C or °F position

TO READ INDOOR MAX-MIN TEMPERATURE

1st press "TEMP MAX-MIN, MEMORY" button

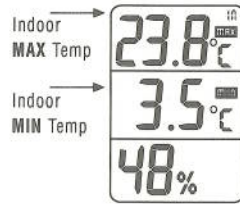


Press 'CLEAR' to clear indoor MAX-MIN TEMP memory record

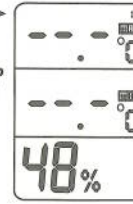

TO READ OUTDOOR MAX-MIN TEMPERATURE

2nd press "TEMP MAX-MIN, MEMORY" button

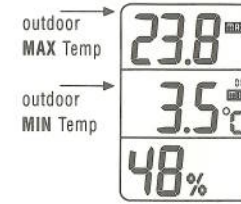

Press 'CLEAR' to clear outdoor MAX-MIN TEMP memory record



3rd press "TEMP MAX-MIN, MEMORY" button

or if after 8 seconds and no key is pushed, display will resume to normal temp display mode

At the condition of normal room temperature from +20C to +30C:
If humidity range between 5% to 24% the tolerance is +/-10%
If humidity range between 25% to 80% the tolerance is +/-5%
If humidity range between 81% to 95% the tolerance is +/-10%
Show "HI" when out of humidity range

HYGROMETER

TO READ INDOOR MAX-MIN RELATIVE HUMIDITY

1st press "HUMIDITY MAX-MIN, MEMORY" button



Indoor MAX HUMIDITY




Press 'CLEAR' to clear MAX HUMIDITY memory

2nd press "HUMIDITY MAX-MIN, MEMORY" button



Indoor MIN HUMIDITY

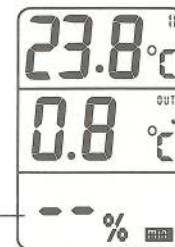

Press 'CLEAR' to clear MIN HUMIDITY memory


TO INSTALL THE OUTSIDE TEMPERATURE SENSOR

Remove the paper on the double sides tape on the temperature sensor and stick onto the outside of a window. This sensor will monitor the outside temperature.

Carefully route the wire inside and gently close the window.



Operation Manual - Model 241

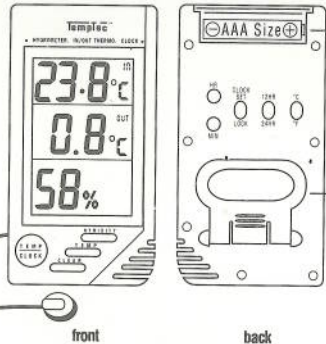


Battery Replacement:
- 1 'AAA' battery
- Insert battery as direction indicated

Folding stand for countertop display

THERMOMETER

Normal display show INDOOR and OUTDOOR TEMP in 1/10 degree

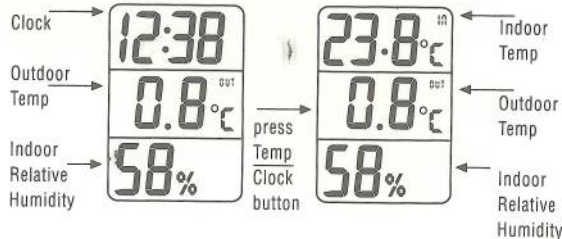

MAX-MIN Memory of Humidity and Temperature

To facilitate HOURLY, DAILY, WEEKLY, MONTHLY or ANY SPECIFIC PERIOD'S max-min memory records, memory can be cleared by pressing "CLEAR" button, and new memory can be recorded instantly when display is back to normal temp mode.