


DIRIS Ap

RS485 - JBUS/MODBUS®

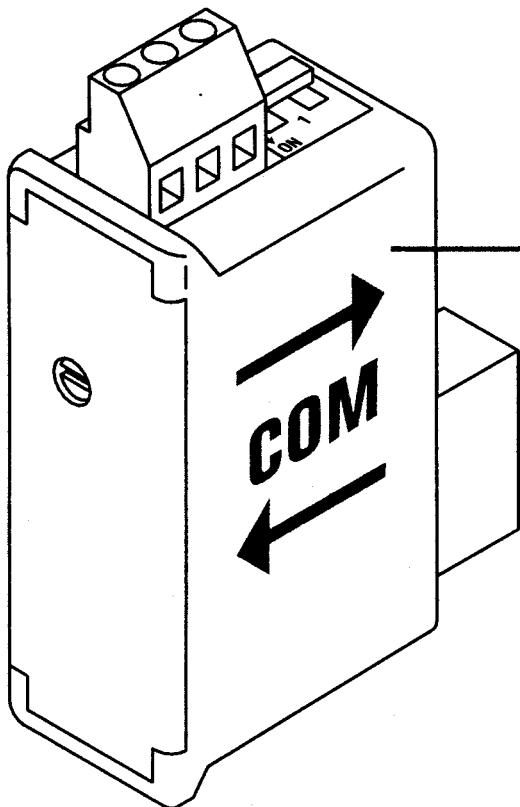

F

GB

D


NL

I

E


P

1

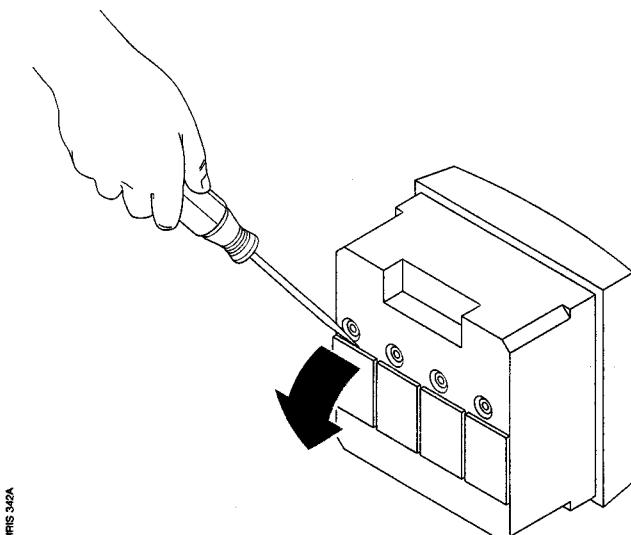


- Diris Ap hors tension
- Disconnect Diris Ap
- Diris Ap ausgeschaltet
- Mettere Diris Ap fuori tensione
- Diris Ap spanningsloos
- Diris Ap sin tensión
- Diris Ap fora de tensão

2

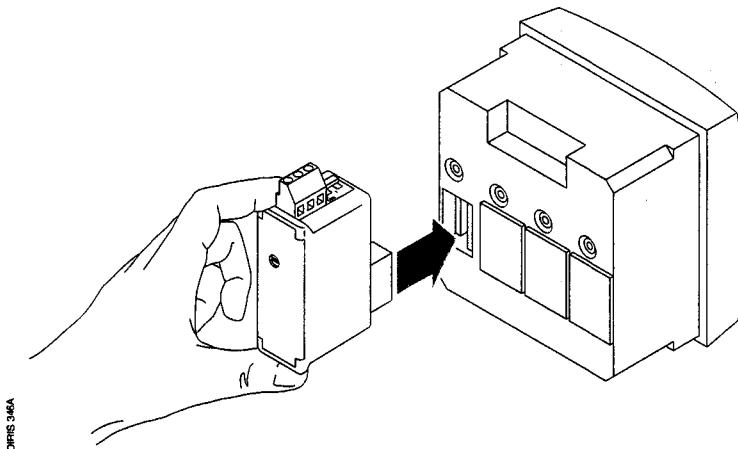

- sur 1 des 4 emplacements
- insert in one of the 4 slots
- an 1 der 4 Stellen
- in 1 dei 4 slot liberi
- op 1 van 4 plaatsen
- en 1 de los 4 emplazamientos
- num dos 4 contactos

3

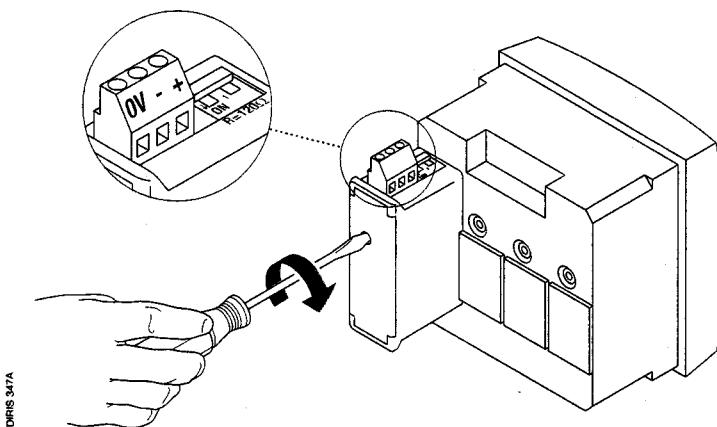

4

- | | | |
|--|--|--|
| <ul style="list-style-type: none"> • Raccorder le bornier en respectant les indications • Remettre sous tension • Configurer les paramètres de communication (voir notice d'utilisation DIRIS Ap) • Follow indications when connecting the terminal • Switch on voltage supply • Configure communication parameters (see DIRIS Ap operating instructions) • Für den Anschluß der Klemmleiste beachten Sie die entsprechenden Hinweise • Wieder einschalten | <ul style="list-style-type: none"> • Kommunikationsparameter konfigurieren (siehe Bedienungsanleitung DIRIS Ap) • Raccordare i morsetti rispettando le indicazioni • Alimentare il Diris Ap • Configurare i parametri di comunicazione (vedere il manuale d'istruzione del DIRIS Ap) • De klemmenstroom aansluiten zoals aangegeven • Terug spanning geven • De communicatie parameters ingeven (zie gebruiksaanwijzing DIRIS Ap) | <ul style="list-style-type: none"> • Conectar respetando las indicaciones • Poner en tensión • Configurar los parámetros de comunicación (ver instrucciones de utilización DIRIS Ap) • Ligar o terminal de bornes respeitando as indicações • Colocar sob tensão novamente • Configurar os parâmetros de comunicação (vê nota de utilização do DIRIS Ap) |
|--|--|--|