



OPERATION

Each press of the power button will activate the lighter. If held continuously, the lighter will be interrupted after 6 seconds. To reactivate the lighter, release the power button and press it again.

LED INDICATOR

Located next to the charging port, it indicates:

- Battery Low - Flashing
- Charging - Solid
- Fully Charged - Turns Off

SAFETY NOTICE

Continuously reactivating the lighter can cause the lighter head to get very hot. Please allow the lighter head to cool before touching it.

EXTEND - Grab the sides of the lighter head and pull up.

COLLAPSE - Ensure lighter head is cool. Grab the lighter head and press it back into the housing of the lighter.