IME2S, IQB2S

Safety switches





Described product

IME2S, IQB2S

Manufacturer

SICK AG Erwin-Sick-Str. 1 79183 Waldkirch Germany

Legal information

This work is protected by copyright. Any rights derived from the copyright shall be reserved for SICK AG. Reproduction of this document or parts of this document is only permissible within the limits of the legal determination of Copyright Law. Any modification, abridgment or translation of this document is prohibited without the express written permission of SICK AG.

The trademarks stated in this document are the property of their respective owner.

© SICK AG. All rights reserved.

Original document

This document is an original document of SICK AG.



Contents

1	Abo	ut this document	5
	1.1	Function of this document	5
	1.2	Scope	5
	1.3	Target groups of these operating instructions	5
	1.4	Additional information	5
	1.5	Symbols and document conventions	5
2	Safe	ety information	7
	2.1	General safety notes	7
	2.2	Intended use	7
	2.3	Improper use	7
	2.4	Requirements for the qualification of personnel	7
3	Prod	duct description	9
	3.1	Structure and function	g
	3.2	Product characteristics	10
4	Proj	ect planning	11
	4.1	Manufacturer of the machine	11
	4.2	Operating entity of the machine	11
	4.3	Design	11
	4.4	Integration in the electrical control	13
	4.5	Thorough check concept	14
5	Mou	inting	15
	5.1	Flush mounting	15
	5.2	Non-flush mounting	16
6	Elec	trical installation	18
	6.1	Safety	18
	6.2	Notes on cULus	18
	6.3	System connection (M12, 4-pin)	19
	6.4	System connection (M8, 4-pin)	19
	6.5	System connection (open cable end, 4-pin)	19
7	Con	nmissioning	20
	7.1	Safety	20
	7.2	Switching on	20
	7.3	Adjustment	20
8	Trou	bleshooting	21
	8.1	Safety	21
	8.2	Fault indicators	21
9	Mai	ntenance	22

	9.1	Cleaning	22
10	Deco	ommissioning	23
	10.1	Disposal	23
11	Tech	nical data	24
	11.1	Data sheet	24
	11.2	Table of weights	27
	11.3	Dimensional drawings	28
12	Orde	ring information	34
	12.1	Scope of delivery	34
	12.2	Ordering information	34
13	Anne	eX	36
	13.1	Conformities and certificates	36

1 **About this document**

1.1 **Function of this document**

These operating instructions contain the information needed during the life cycle of the safety switch.

They must be made available to all people who work with the safety switch.

1.2 Scope

Product

This document applies to the following products:

Product code: IME2S, IQB2S

Document identification

Document part number:

- This document: 8023341
- Available language versions of this document: 8023339

You can find the current version of all documents at www.sick.com.

1.3 Target groups of these operating instructions

Some sections of these operating instructions are intended for certain target groups. However, the entire operating instructions are relevant for intended use of the product.

Table 1: Target groups and selected sections of these operating instructions

Target group	Sections of these operating instructions
Project developers (planners, developers, designers)	"Project planning", page 11 "Technical data", page 24
Installers	"Mounting", page 15
Electricians	"Electrical installation", page 18
Safety experts (such as CE authorized representatives, compliance officers, people who test and approve the application)	"Project planning", page 11 "Commissioning", page 20 "Technical data", page 24
Operators	"Troubleshooting", page 21
Maintenance personnel	"Maintenance", page 22 "Troubleshooting", page 21

1.4 Additional information

www.sick.com

The following information is available on the Internet:

- Data sheets and application examples
- CAD data and dimensional drawings
- Certificates (e.g. EU declaration of conformity)
- Guide for Safe Machinery Six steps to a safe machine

1.5 Symbols and document conventions

The following symbols and conventions are used in this document:

Warnings and other notes



DANGER

Indicates a situation presenting imminent danger, which will lead to death or serious injuries if not prevented.



WARNING

Indicates a situation presenting possible danger, which may lead to death or serious injuries if not prevented.



CAUTION

Indicates a situation presenting possible danger, which may lead to moderate or minor injuries if not prevented.



NOTICE

Indicates a situation presenting possible danger, which may lead to property damage if not prevented.



NOTE

Highlights useful tips and recommendations as well as information for efficient and trouble-free operation.

Instructions to action

- The arrow denotes instructions to action.
- 1. The sequence of instructions for action is numbered.
- Follow the order in which the numbered instructions are given. 2.
- The check mark denotes the result of an instruction.

LED symbols

These symbols indicate the status of an LED:

- O The LED is off.
- The LED is flashing.
- The LED is illuminated continuously.

2 Safety information

2.1 General safety notes

This chapter contains general safety information about the safety switch.

Further safety information is provided in the respective chapters to cover the specific situations in which the product may be used.



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

- Please read this document carefully and make sure that you understand the content fully before working with the device.
- Follow all safety notes in this document.



NOTICE

The adhesive strip above the LED displays must not be removed in order to achieve the specified enclosure rating.

2.2 Intended use

The safety switch is an inductive safety switch which is activated by actuators (metal objects) without making contact. The safety switch is suitable for the following applications:

Safe position and area determination of metal objects

The product may be used in safety functions.

The safety switch must only be used within the limits of the prescribed and specified technical data and operating conditions at all times.

Incorrect use, improper modification or manipulation of the safety switch will invalidate any warranty from SICK; in addition, any responsibility and liability of SICK for damage and secondary damage caused by this is excluded.

2.3 Improper use

The safety switch is **not** suitable for the following applications, among others:

- Environments with increased levels of ionizing radiation
- Applications in which the safety switch is exposed to chemicals, for example cleaning in food processing.
- Outdoors (only suitable for weather-protected areas of application, Class C according to IEC 60654-1)

2.4 Requirements for the qualification of personnel

The safety switch must be planned in, mounted, connected, commissioned, and serviced by qualified safety personnel only.

Project planning

You need safety expertise to implement safety functions and select suitable products for that purpose. You need expert knowledge of the applicable standards and regulations.

Mounting, electrical installation and commissioning

You need suitable expertise and experience. You must be able to assess if the machine is operating safely.

Operation and maintenance

You need suitable expertise and experience. You must be instructed in machine operation by the machine operator. For maintenance, you must be able to assess if the machine is operating safely.

3 **Product description**


3.1 Structure and function

Description of operation

The safety switch is an inductive safety switch which is activated by actuators (metal objects) without making contact.

If an actuator is situated between the active sensor surface and assured switch-on distance S_{ao}, safety outputs (OSSDs) are safe in the ON state. If an actuator is situated outside assured safe switch-off distance S_{ar} , safety outputs (OSSDs) are in the OFF

The machine or its control must safely analyze the signals (for example using a safe control or safety relays) and stop the dangerous state.

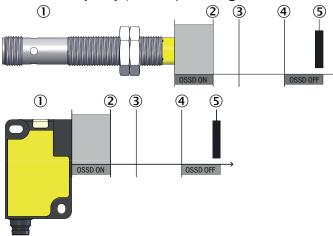

- Safety switches (1)
- **(2**) Assured switch-on distance Sao
- 3 Sensing range S_n (switch-on distance under laboratory conditions)
- **(4**) Assured switch off distance Sar
- **(5**) Actuator

Assured switch on distance (Sao)

Distance from the active sensor surface within which the presence of the actuator can be safely detected.

The assured switch-on distance is the important value for safe applications.

Sensing range (S_n)

Is detected under laboratory conditions.

Typical sensing range of the safety switch. The sensing range can change with the shape and material of the actuator. Manufacturing tolerances as well as external influences such as temperature or supply voltage are not considered.

Assured switch off distance (S_{ar})

Distance from the active sensor surface outside of which the presence of the actuator is reliably detected.

3.2 **Product characteristics**

3.2.1 **Protective functions**



DANGER

Loss of cross-circuit monitoring when output load at the OSSDs is too high Loss of safety function

The safety switch must always be operated within the limits of the prescribed and specified technical data.

The safety switch is available for the following internal protective functions:

- Short-circuit protection at all outputs
- Cross-circuit monitoring at the OSSDs
- Overload protection at the OSSDs
- Supply voltage reverse polarity protection

3.2.2 **Status indicators**

LEDs on the device

The safety switch signals the operational status via an LED.

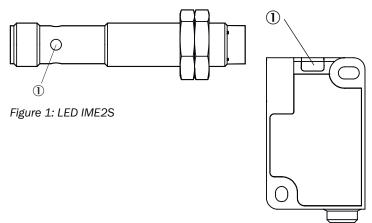


Figure 2: LED IQB2S

Table 2: LED

Item	Name	Color	Purpose
1	STATE	Green/Red	Signals when an
			object is detected.

Further topics

see "Fault indicators", page 21

4 Project planning

4.1 Manufacturer of the machine



DANGER

Failure to comply with manufacturer's obligations

Hazard due to lack of effectiveness of the protective device

- ► Carry out a risk assessment before using the safety switch.
- ▶ Do not tamper with, open, or modify the components of the safety switch.
- ▶ Do not repair defective devices they must be replaced instead.
- Make sure that switch-on commands which bring about a dangerous state of the machine are not enabled until the protective device is closed.
- ► Ensure that a stop command is triggered if the actuator is no longer detected (e.g. when the protective device is opened during a hazardous machine status).
- ► The safety switches must not be circumvented (contacts bypassed), rotated away, removed, or rendered ineffective in any other way. Put measures in place to reduce possibilities for circumvention.

4.2 Operating entity of the machine



DANGER

Failure to observe operator obligations

Hazard due to lack of effectiveness of the protective device

- Changes to the machine and changes to the mechanical mounting of the safety switch necessitate a new risk assessment. The results of this risk assessment may require the entity operating the machine to meet the obligations of a manufacturer.
- ► Apart from the procedures described in this document, the components of the safety switch must not be opened or modified.
- ▶ Do not carry out any repair work on components. Improper repair of the safety switch can lead to a loss of the protective function.

4.3 Design

Important information



DANGER

Bypassing the protective device

Hazard due to lack of effectiveness of the protective device

- Avoid incentives to manipulate the safety switch by taking at least one of the following measures:
 - Attach safety switch outside of the sensing range.
 - Cover safety switch with obstacles or shield.
 - Attach safety switch at the covered position.
 - If possible, do not mount the safety switch with the active sensor surface facing upwards.

\triangle

DANGER

Damage to the safety switch due to mechanical stress

Loss of safety function

 Protect the safety switch from mechanical stress such as impacts or permanent contact pressure, for example with an additional stop

Mounting location

Select the mounting location so that the safety switch is protected from impacts and mechanical pressure. If necessary, attached additional stop.

Measures to protect against unintentional actuation

The safety switch can be actuated by any metal objects such as metal chips, doors or moving machine elements. Constructive measures must be taken so that the safety switch is only actuated by the intended actuator.

Distance

If several safety switches are mounted, they must be mounted at a minimum distance to one another.

Alignment

The safety switch can be mounted with any alignment. If the safety sensor is mounted with the sensor surface facing upwards, the risk of unintended actuation by loose metal objects (for example metal chips) or manipulation of the safety switch increases.

Installation in metal

There are several mounting methods. The permitted mounting method depends on the product variant:

- Flush. The active sensor surface is at the same level as the surrounding metal.
- Non-flush. The active sensor surface protrudes a bit out of the surrounding metal.

Further topics

- see "Flush mounting", page 15
- see "Non-flush mounting", page 16

4.3.1 Determining the sensing ranges

Sensing ranges S_{ao} , S_{ar} and S_n depend on the material and shape of the actuator. The specified values assume the following prerequisites:

- Length and width of the actuator: 3 × S_n
- Material thickness: 1 mm
- Material of the actuator: Structural steel (FE360)
- Ambient temperature: 25 °C

If the actuator consists of another material, the specified values for S_{ao} , S_{ar} and S_{n} must be multiplied by the respective correction factor (see table 3, page 13) (values of sensing ranges see table 12, page 24).

Table 3: Correction factor for sensing ranges S_{ao} , S_{ar} and S_{n}

Material	Correction factor
Mu-metal	1.2
Molded metal	1.1
Structural steel (Fe 360)	1.0
Rust-free steel (V2A, 304)	0.8
Aluminum	0.45
Copper	0.3
Brass	0.4

Example calculation

For a copper actuator, the safe switch-off distance changes as follows:

$$S_{ar/copper} = S_{ar} * 0.3$$

4.4 Integration in the electrical control

Switch-on commands that put the machine in a dangerous state may only be activated when the safety switch detects an actuator. When the machine goes into a dangerous state, a stop command must be triggered if no suitable object is detected. Depending on the safety concept, the signal is analyzed by safety relays or a safety controller, for example.

The connected control and all devices responsible for safety must comply with the required performance level and the required category (for example, according to EN ISO 13849-1:2015).

4.4.1 Course of the OSSD test over time

The device tests the OSSDs for self-diagnosis at regular intervals. To do this, the device switches each OSSD briefly to the OFF state and checks whether this channel is voltage-free during this time.

Make sure that the machine's control does not react to these test pulses and the machine does not switch off.

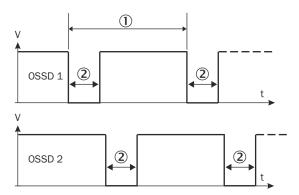


Figure 3: Course of the OSSD test over time

Legend number	Description	Value	
1	Test pulse interval	Usually every 20 ms	
2	Test pulse width	300 µs	

4.5 Thorough check concept

The safety switch must be tested by appropriately qualified safety personnel during commissioning, after modifications, and at regular intervals; see "Requirements for the thorough check during commissioning and in certain situations", page 14.

Regular thorough checks serve to investigate the effectiveness of the safety switch and discover defects resulting from modifications or external influences (such as damage or manipulation).

The manufacturer and operating entity must define the type and frequency of the thorough checks on the machine on the basis of the application conditions and the risk assessment. The process of defining the thorough checks must be documented in a traceable manner.

4.5.1 Requirements for the thorough check during commissioning and in certain situations

The protective device and its application must be thoroughly checked in the following situations:

- Before commissioning
- After changes to the safety function
- After changes to the mounting, the alignment, or the electrical connection
- After exceptional events, such as after a manipulation has been detected, after modification of the machine, or after replacing components

The thorough check ensures the following:

- All relevant regulations are complied with and the protective device is active for all of the machine's operating modes.
- The documentation accurately reflects the state/condition of the machine, including the protective device.

The thorough checks must be carried out by qualified safety personnel or specially qualified and authorized personnel and must be documented in a traceable manner.

- Check whether the protective device of the machine is effective in all operating modes in which the machine can be set.
- Make sure that operating personnel have been instructed in the function of the protective device before starting work on the machine. The machine operator has overall responsibility for the instruction, which must be carried out by qualified personnel.

4.5.2 Minimum requirements for regular thorough checks

The following thorough checks must be carried out at least once a year:

- Thorough check of the principal protective function of the safety switch
- Thorough check of assured sensing ranges S_{ar} and S_{ao}
- Thorough check for damage on the switch housing
- Thorough check for damage on the switch cables
- Thorough check for signs of misuse or manipulation on the safety switch

Mounting 5

5.1 Flush mounting

Important information



DANGER

If the safety switch is not mounted with the intended mounting method, the switching behavior is affected. The safety switch might not switch as intended.

- Only use safety switches for flush mounting which are intended for flush mounting.
- Only use safety switches for **non-flush** mounting which are intended for **non-flush** mounting.
- If something is unclear, use the part number to check for which mounting method the safety switch is suited (see "Ordering information", page 34).

Procedure

- Observe the max. tightening torque during mounting.
 - IME2S: 12 Nm IQB2S: 1 Nm

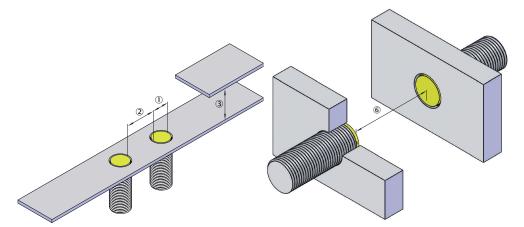


Figure 4: Spaces for flush mounting of IME2S devices

Figure 5: Space with 2 opposing IME2S safety switches

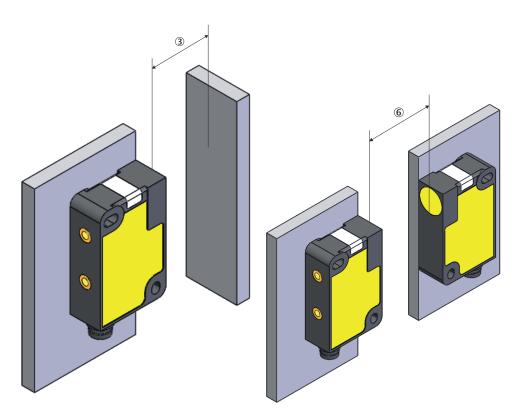


Figure 6: Spaces for flush mounting of IQB2S devices

Figure 7: Space with 2 opposing IQB2S safety switches

Table 4: Dimensions for flush mounting in mm

Variant	① Diameter of the safety switch Width of the safety switch	② Minimum distance to the neighboring safety switch	Minimum free space above the active sensor surface	© Minimum distance to the opposing safety switch
IME2S12-04****	12	> 24	> 12	> 32
IQB2S12-04****	12	> 24	> 12	> 32
IME2S18-05****	18	> 36	> 15	> 40
IME2S18-08****	18	> 36	> 24	> 64
IME2S30-12****	30	> 60	> 36	> 96
General formula	-	2 × ①	> 3 × S _n	> 8 × S _n

5.2 Non-flush mounting

Important information



DANGER

If the safety switch is not mounted with the intended mounting method, the switching behavior is affected. The safety switch might not switch as intended.

- ▶ Only use safety switches for **flush** mounting which are intended for **flush** mounting.
- Only use safety switches for non-flush mounting which are intended for non-flush mounting.
- ► If something is unclear, use the part number to check for which mounting method the safety switch is suited (see "Ordering information", page 34).

Procedure

For mounting, observe max. tightening torque: 12 Nm

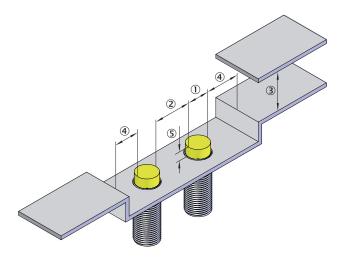


Figure 8: Distances for non-flush mounting

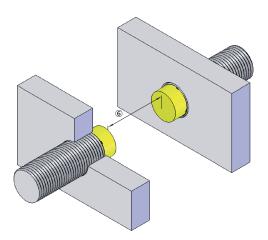


Figure 9: Distance for 2 opposing safety switches

Table 5: Dimensions for non-flush mounting in mm

Variant	① Diameter of the safety switch Width of the safety switch	Minimum distance to the neighbor- ing safety switch	Minimum free space above the active sensor surface	Minimum free space around the active sensor surface	© Overrun of the active sensor surface	Minimum distance to the opposing safety switch
General formula	_	> 2 × ①	> 3 × S _n	> 1 × ①	> 2 × S _n	> 8 × S _n
IME2S12-04****	12	> 24	> 12	> 12	> 8	> 32
IME2S12-08****	12	> 24	> 24	> 12	> 16	> 64
IME2S18-08****	18	> 36	> 24	> 18	> 16	> 64
IME2S30-15****	30	> 60	> 45	> 30	> 30	> 120

6 Electrical installation

6.1 Safety

Isolated connection of OSSD1 and OSSD2

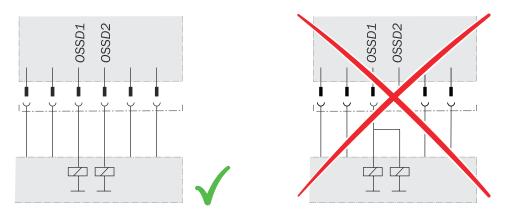


Figure 10: Dual-channel and isolated connection of OSSD1 and OSSD2

Avoiding any potential difference between load and protective device

If you connect loads to the output signal switching devices (switching outputs) that then also switch if controlled with negative voltage (e.g., electro-mechanical contactor without reverse polarity protection diode), you must connect the 0 V connections of these loads and those of the corresponding protective device separately and also directly to the same 0 V terminal strip. In the event of a fault, this is the only way to ensure that there can be no potential difference between the 0 V connections of the loads and those of the corresponding protective device.

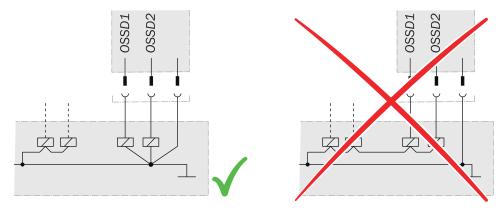


Figure 11: No potential difference between load and protective device

6.2 Notes on cULus

Important information



DANGER

Risk of burns from hot housing

► Take measures to make sure the safety switch cannot be touched during operation.

For use according to the requirements of UL 60947-5-2, the following conditions must also be met:

- The voltage supply must correspond to Class 2 in accordance with UL 508
- Voltage supply U_v secured with 1 A fuse

6.3 System connection (M12, 4-pin)

 


Figure 12: System connection pin assignment (male connector)

Table 6: Device connection pin assignment (male connector, M12, 4-pin, A-coded)

Pin	Wire color 1)	Designation	Description
1	Brown	+24 V DC	Voltage supply 24 V DC
2	White	OSSD 1	Output OSSD1
3	Blue	0 V	Voltage supply 0 V DC
4	Black	OSSD 2	Output OSSD2

¹⁾ Applies to the extension cables recommended as accessories.

6.4 System connection (M8, 4-pin)

 


Figure 13: System connection pin assignment (male connector)

Table 7: Device connection pin assignment (male connector, M8, 4-pin, A-coded)

Pin	Wire color 1)	Designation	Description
1	Brown	+24 V DC	Voltage supply 24 V DC
2	White	OSSD 1	Output OSSD1
3	Blue	0 V	Voltage supply 0 V DC
4	Black	OSSD 2	Output OSSD2

Applies to the extension cables recommended as accessories.

6.5 System connection (open cable end, 4-pin)

Table 8: Device connection pin assignment (open cable end, 4-pin)

Wire color	Designation	Description
Brown	+24 V DC	Voltage supply 24 V DC
White	OSSD 1	Output OSSD1
Blue	0 V	Voltage supply 0 V DC
Black	OSSD 2	Output OSSD2

7 Commissioning

7.1 Safety



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

- 1. Before commissioning the machine, have it checked and released by qualified safety personnel.
- Make sure that the time for the safety requirement (closing the protective device again) is longer than the response time.

7.2 Switching on

Procedure

- Make sure that the distance of the actuator from the sensor surface of the safety switch is greater than the assured switch-off distance.
- 2. Switch on the supply voltage.

As soon as the supply voltage is applied, the safety switch initializes automatically. When the STATE LED permanently lights up red, the safety switch is ready for operation.

Table 9: LED displays and OSSD status during commissioning

STATE LED	OSSDs	Device state
→ Green/Red	OFF state	Safety switch initializes.
● Red	OFF state	The safety switch is switched on. Actuator is not detected.
●Green	ON state	The safety switch is switched on. Actuator is detected.

Further topics

• see "Fault indicators", page 21

7.3 Adjustment

Adjusting distance

 Adjust the distance between the safety switch and actuator so that the actuator is reliably detected within assured switch-off distance S_{ao} (LED STATE permanently green).

Complementary information



NOTE

For variants with cylindrical housing, the distance can be adjusted by rotating the safety switch in or out.

Troubleshooting 8

8.1 Safety



DANGER

Hazard due to lack of effectiveness of the protective device

In the case of non-compliance, it is possible that the dangerous state of the machine may not be stopped or not stopped in a timely manner.

- Immediately shut the machine down if the behavior of the machine cannot be clearly identified.
- If a machine fault cannot be definitively determined or safely rectified, immediately shut the machine down.
- Secure the machine so that it cannot switch on unintentionally.



NOTE

Additional information on troubleshooting is available from your SICK subsidiary.

8.2 **Fault indicators**

Table 10: Fault indicators

LED STATE		Possible cause	Corrective measure
Green	Red		
0	0	No supply voltage	Switch on the supply voltage.
0	★ (4 Hz)	Internal error	 Switch the voltage supply off and on. If the error occurs again, the sensor is defective. Replace sensor.
		Supply voltage too high or too low	Check the supply voltage.
0	● (1 Hz)	External error	 Check wiring for cross-circuit and short-circuit. Switch the voltage supply off and on. If the error occurs again, the sensor is defective. Replace sensor.

9 Maintenance

9.1 Cleaning



NOTICE

- Do not use aggressive cleaning agents (e.g. isopropanol, methylated spirits or peroxides).
- ▶ Do not use any substances that hinder the wetting properties of lacquers.
- ▶ We recommend anti-static cleaning agents.

10 **Decommissioning**

10.1 Disposal

Procedure

Always dispose of unusable devices in accordance with national waste disposal regulations.



Complementary information

SICK will be glad to help you dispose of these devices on request.

11 **Technical data**

11.1 **Data sheet**

Table 11: Safety-related parameters

Safety-related parameters		
Performance level	PL d (EN ISO 13849-1:2015)	
Category	Category 2 (EN ISO 13849-1:2015)	
Safety integrity level	SIL 2 (IEC 61508)	
PFH _D (mean probability of a dangerous failure per hour)		
For operating heights ≤ 1,000 m above sea level	6 × 10 ⁻⁸ at 40 °C	
For operating heights 1,001 m 2,000 m above sea level	7 × 10 ⁻⁸ at 40 °C	
For operating heights 2,001 3,000 m above sea level	8 × 10 ⁻⁸ at 40 °C	
T _M (mission time)	20 years (EN ISO 13849-1:2015)	
Туре	Type 3 (ISO 14119)	
Actuator coding level	Uncoded (EN ISO 14119)	
Safe status when a fault occurs	At least one safety-related semiconductor output (OSSD) is in the OFF state.	

Table 12: Features

Features		
Assured switch-on distance S _{ao} ¹⁾		
IME2S**-04****	3.2 mm	
IQB2S**-04****		
IME2S**-08****	6.5 mm	
IME2S**-05****	4 mm	
IME2S**-12****	9.6 mm	
IME2S**-15****	12 mm	
Assured switch off distance S _{ar} 1)		
IME2S**-04****	6 mm	
IQB2S**-04****		
IME2S**-08****	12 mm	
IME2S**-05****	7.5 mm	
IME2S**-12****	18 mm	
IME2S**-15****	22.5 mm	
Sensing range S _n ¹⁾		
IME2S**-04****	4 mm	
IQB2S**-04****		
IME2S**-08****	8 mm	
IME2S**-05****	5 mm	
IME2S**-12****	12 mm	
IME2S**-15****	15 mm	

Features	
Actuating frequency	≤ 100 Hz

¹⁾ Specified values apply to steel (FE360) with specified conditions. see "Determining the sensing ranges", page 12.

Table 13: Interfaces

Interfaces	
System connection (voltage supply and local outputs)	
IME2S12	Cable with M12 male connector, 4-pin M12 male connector, 4-pin Open cable
IME2S18	M12 male connector, 4-pin
IME2S30	M12 male connector, 4-pin
IQB2S12	Cable with plug, M12, 4-pin M8 male connector, 4-pin Open cable

Table 14: Electrical data

Electrical data		
Protection class	III (EN 61140/IEC 61140)	
Supply voltage V _S	DC 24 V (19,2 V DC 28,8 V DC) ¹⁾	
Residual ripple	±10% ²⁾	
Rated insulation voltage U _i	28.8 V	
Voltage drop (of supply voltage)	≤ 3 V ³⁾	
Contamination degree	3 (external, according to EN 60947-1)	
Rated impulse withstand voltage U _{imp}	1,500 V	
Utilization category (IEC 60947-5-1)	DC-12: 24 V / 20 mA	
Device fuse	1 A	
Current consumption at 24 V	< 20 mA	
Hysteresis	≤ 15% of S _n	
Repeatability	2%	
Power-up delay (after supply voltage applied) 4)	< 1.5 s	
Response time (removal from response range)	< 1 ms	
Release time (response time when approaching response range)		
IME2S12	< 1 ms	
IME2S18-05B4DC0	< 2 ms	
IME2S18-08N4DC0	< 1 ms	
IME2S18-08B4DC0	< 1.5 ms	
IME2S30-12B4DC0	< 5 ms	
IME2S30-15N4DC0	< 1 ms	
IQB2S	< 2 ms	

Electrical data	
Risk time ⁵⁾	< 20 ms

- The external voltage supply of the protective device must be capable of buffering brief power failures of 20 ms as specified in IEC 60204-1.
- $^{2)}$ Within the limits of U_V .
- 3) AT 50 mA at each OSSD channel
- $^{4)}$ Once the supply voltage has been switched on, the OSSDs are in the OFF state during the time delay before availability.
- 5) The risk time is the time needed to detect internal and external faults. External errors affect the OSSDs (short-circuit to an OSSD and cross-circuit between the two OSSDs). At least one of the two OSSDs is safely switched off during the risk time.

Table 15: Mechanical data

Dimensions	see "Dimensional drawings", page 28	
Material IME2S		
Housing	Nickel plated brass	
Sensor surface	Vistal®	
Cable	PVC	
Fixing nuts	Brass alloy	
Material IQBS		
Housing	Vistal®	
Sensor surface	Vistal®	
Cable	PVC	
Tightening torque for mounting		
IME2S	12 Nm	
IQB2S	1 Nm	
Weight	see "Table of weights", page 27	
Thread tolerance	M12x1-6g M18x1-6g M30x1,5-6g	

Table 16: Outputs

Outputs		
Switching outputs	2 PNP semiconductors	
Switching voltage		
ON state	19.2 V DC 28.8 V DC	
OFF state	0 V DC 2 V DC	
Switching current		
ON state	≤ 50 mA	
OFF state	< 500 μA	
Load capacity	80 nF	
Short-circuit protection	Yes	
Reverse polarity protection	Yes	
Test pulse width	300 µs	

Table 17: Ambient data

Ambient data	
Enclosure rating	IP 67 (IEC 60529) 1)

Ambient data	
Ambient operating temperature	-25 °C +70 °C
Temperature change rate	≤ 1 °K/min
Storage temperature	-25 °C +70 °C
Area of application (IEC 60654-1)	Class C; weather-protected area of application
Operating altitude	≤ 3,000 m above sea level
Relative humidity	50% at 70 °C (IEC 60947-5-2)
Vibration resistance	1 mm / 10 Hz 55 Hz (IEC 60947-5-2)
Shock resistance	In accordance with IEC 60947-5-2 100 g (8 ms); half sine according to EN 60068-2-27
EMC	In accordance with IEC 60947-5-2, IEC 60947-5-3 and IEC 61000-6-7
Minimum distance between 2 safety switches	see "Mounting", page 15

 $^{^{1)}}$ The adhesive strip above the LED displays must not be removed in order to achieve the specified enclosure rating.

Table of weights 11.2

Table 18: Weight IME2S

Type code	Weight in g
IME2S12-04B4DQ9	33
IME2S12-04N4DQ9	33
IME2S12-04B4DC0	18
IME2S12-04B4DC0S02	20
IME2S12-04B4DW2	60
IME2S12-04N4DC0	18
IME2S12-04N4DC0S02	20
IME2S12-04N4DW2	60
IME2S12-08N4DC0	18
IME2S18-05B4DC0	42
IME2S18-08N4DC0	38
IME2S18-08B4DC0	42
IME2S30-12B4DC0	102
IME2S30-15N4DC0	94

Table 19: Weight IQB2S

Type code	Weight in g
IQB2S12-04B4DT0	17
IQB2S12-04B4DQ9	31
IQB2S12-04B4DW2	61

11.3 Dimensional drawings

IME2S12

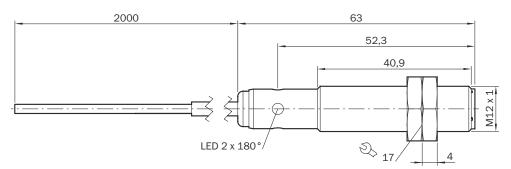


Figure 14: IME2S12-**B**W2 dimensional drawing

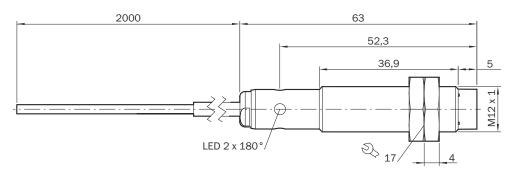


Figure 15: IME2S12-**N**W2 dimensional drawing

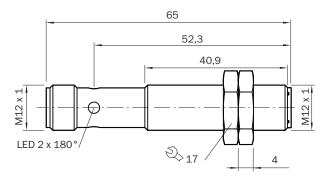


Figure 16: Dimensional drawing IME2S12-**B**C0

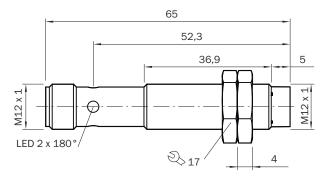


Figure 17: IME2S12-**N**C0 dimensional drawing

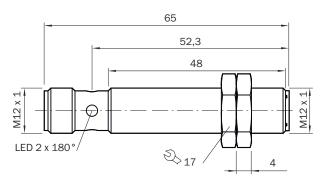


Figure 18: IME2S12-04B4DC0S02 dimensional drawing

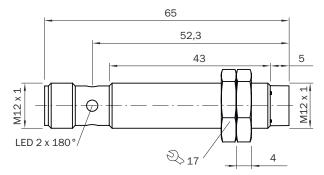


Figure 19: IME2S12-04N4DC0S02 dimensional drawing

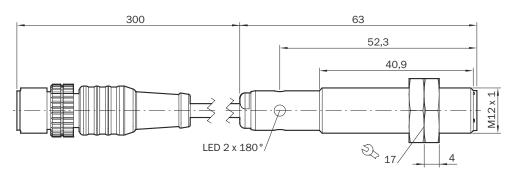


Figure 20: IME2S12-**B**Q9 dimensional drawing

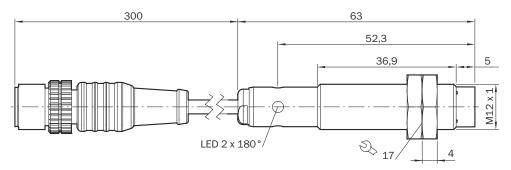


Figure 21: IME2S12-**N**Q9 dimensional drawing

IME2S18

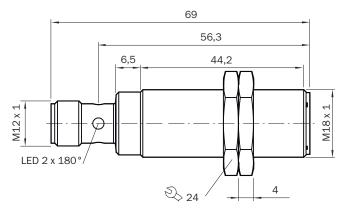


Figure 22: IME2S18-**B**C0 dimensional drawing

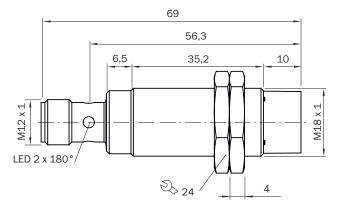


Figure 23: IME2S18-**N**C0 dimensional drawing

IME2S30

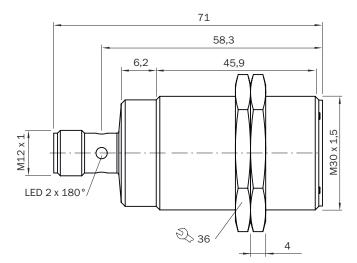


Figure 24: IME2S30-**B**C0 dimensional drawing

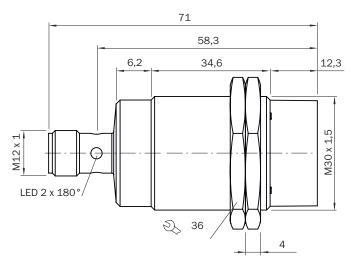


Figure 25: IME2S30-**N**C0 dimensional drawing

IQB2S

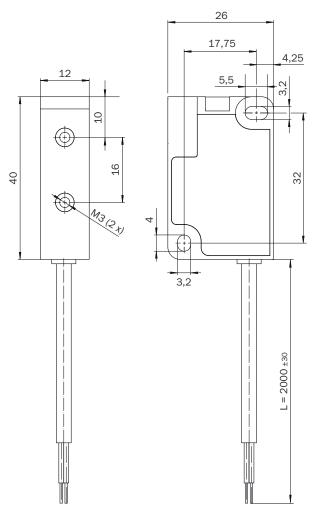


Figure 26: IQB2S12-**B**W2 dimensional drawing

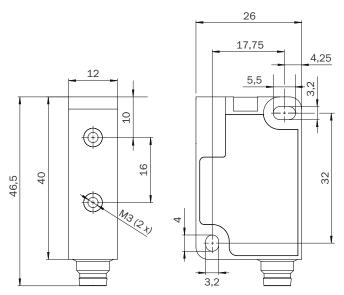


Figure 27: IQB2S12-**B**TO dimensional drawing

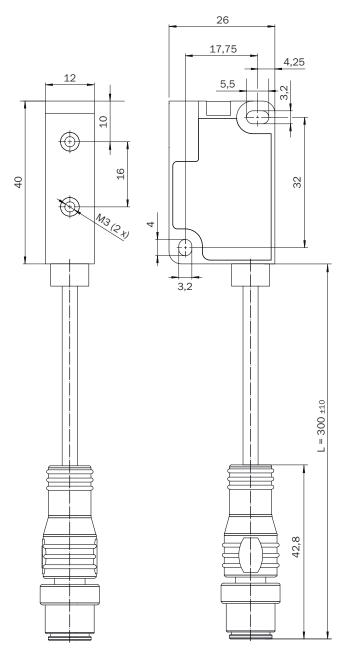


Figure 28: IQB2S12-**B**Q9 dimensional drawing

12 **Ordering information**

12.1 Scope of delivery

Scope of delivery, IME2S

- 1 × IME2S safety switch
- 2 × fixing nuts
- 1 × safety notes
- Operating instructions for download: www.sick.com

Scope of delivery, IQB2S

- 1 × IQB2S safety switch
- 1 × safety notes
- Operating instructions for download: www.sick.com

Ordering information 12.2

IME2S ordering information (cylindrical design)

Table 20: IME2S ordering information

Dimensions	Usable thread length	Installation in metal	Sensor connection type	Type code	Part number
M12 × 63 m	40.9 mm	Flush	Cable with M12 male connector, 4-pin	IME2S12-04B4DQ9	1091142
M12 × 63 m	36.9 m	Non-flush	Cable with M12 male connector, 4-pin	IME2S12-04N4DQ9	1091943
M12 × 65 m	40.9 mm	Flush	M12 male connector, 4-pin	IME2S12-04B4DC0	1091944
M12 × 65 m	48 mm	Flush	M12 male connector, 4-pin	IME2S12-04B4DC0S02	1117670
M12 × 63 m	40.9 mm	Flush	Open cable	IME2S12-04B4DW2	1091945
M12 × 65 m	36.9 m	Non-flush	M12 male con- nector, 4-pin	IME2S12-04N4DC0	1091946
M12 × 65 m	43 mm	Non-flush	M12 male con- nector, 4-pin	IME2S12-04N4DC0S02	1117664
M12 × 63 m	36.9 mm	Non-flush	Open cable	IME2S12-04N4DW2	1091947
M12 × 65 m	36.9 mm	Non-flush	M12 male con- nector, 4-pin	IME2S12-08N4DC0	1091948
M18 × 69 mm	44.2 mm	Flush	M12 male con- nector, 4-pin	IME2S18-05B4DC0	1091949
M18 × 69 mm	35.2 mm	Non-flush	M12 male con- nector, 4-pin	IME2S18-08N4DC0	1091950
M18 × 69 mm	44.2 mm	Flush	M12 male con- nector, 4-pin	IME2S18-08B4DC0	1091951
M30 × 71 mm	34.6 mm	Flush	M12 male con- nector, 4-pin	IME2S30-12B4DC0	1091952
M30 × 71 mm	45.9 mm	Non-flush	M12 male connector, 4-pin	IME2S30-15N4DC0	1091953

IQB2S ordering information (cuboid design)

Table 21: IQB2S ordering information

Dimensions (W x D x H)	Structural state	Sensor connection type	Type code	Part number
12 mm × 40 mm × 26 mm	Flush	M8 male con- nector, 4-pin	IQB2S12-04B4DT0	1091954
12 mm × 40 mm × 26 mm	Flush	Open cable	IQB2S12-04B4DW2	1091955
12 mm × 40 mm × 26 mm	Flush	Cable with M12 male connector, 4-pin	IQB2S12-04B4DQ9	1091956

13 Annex

13.1 Conformities and certificates

You can obtain declarations of conformity, certificates and the current documentation for the product at www.sick.com. To do so, enter the product part number in the search field (part number: see the entry in the "P/N" or "Ident. no." field on the type label).

13.1.1 EU declaration of conformity

Excerpt

The undersigned, representing the manufacturer, herewith declares that the product is in conformity with the provisions of the following EU directive(s) (including all applicable amendments), and that the standards and/or technical specifications stated in the EU declaration of conformity have been used as a basis for this.

- ROHS DIRECTIVE 2011/65/EU
- EMC DIRECTIVE 2014/30/EU
- MACHINERY DIRECTIVE 2006/42/EC

13.1.2 UK declaration of conformity

Excerpt

The undersigned, representing the following manufacturer herewith declares that this declaration of conformity is issued under the sole responsibility of the manufacturer. The product of this declaration is in conformity with the provisions of the following relevant UK Statutory Instruments (including all applicable amendments), and the respective standards and/or technical specifications have been used as a basis.

- Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012
- Electromagnetic Compatibility Regulations 2016
- Supply of Machinery (Safety) Regulations 2008

Australia

Phone +61 (3) 9457 0600 1800 33 48 02 - tollfree E-Mail sales@sick.com.au

. . .

Phone +43 (0) 2236 62288-0

E-Mail office@sick.at

Belgium/Luxembourg

Phone +32 (0) 2 466 55 66 E-Mail info@sick.be

Brazil

Phone +55 11 3215-4900 E-Mail comercial@sick.com.br

Canada

Phone +1 905.771.1444 E-Mail cs.canada@sick.com

Czech Republic

Phone +420 234 719 500 E-Mail sick@sick.cz

Chile

Phone +56 (2) 2274 7430 E-Mail chile@sick.com

China

Phone +86 20 2882 3600 E-Mail info.china@sick.net.cn

Denmark

Phone +45 45 82 64 00 E-Mail sick@sick.dk

Finland

Phone +358-9-25 15 800 E-Mail sick@sick.fi

France

Phone +33 1 64 62 35 00 E-Mail info@sick.fr

Germany

Phone +49 (0) 2 11 53 010 E-Mail info@sick.de

Greece

Phone +30 210 6825100 E-Mail office@sick.com.gr

Hong Kong

Phone +852 2153 6300 E-Mail ghk@sick.com.hk Hungary

Phone +36 1 371 2680 E-Mail ertekesites@sick.hu

India

Phone +91-22-6119 8900 F-Mail info@sick-india.com

Israel

Phone +972 97110 11 E-Mail info@sick-sensors.com

Italy

Phone +39 02 27 43 41 E-Mail info@sick.it

Japan

Phone +81 3 5309 2112 E-Mail support@sick.jp

Malaysia

Phone +603-8080 7425 E-Mail enquiry.my@sick.com

Mexico

Phone +52 (472) 748 9451 E-Mail mexico@sick.com

Netherlands

Phone +31 (0) 30 204 40 00 E-Mail info@sick.nl

New Zealand

Phone +64 9 415 0459 0800 222 278 - tollfree E-Mail sales@sick.co.nz

Norway

Phone +47 67 81 50 00 E-Mail sick@sick.no

Poland

Phone +48 22 539 41 00 E-Mail info@sick.pl

Romania

Phone +40 356-17 11 20 E-Mail office@sick.ro

Singapore

Phone +65 6744 3732 E-Mail sales.gsg@sick.com

Slovakia

Phone +421 482 901 201 E-Mail mail@sick-sk.sk Slovenia

Phone +386 591 78849 E-Mail office@sick.si

South Africa

Phone +27 10 060 0550 E-Mail info@sickautomation.co.za

South Korea

Phone +82 2 786 6321/4 E-Mail infokorea@sick.com

Spain

Phone +34 93 480 31 00 E-Mail info@sick.es

Sweden

Phone +46 10 110 10 00 E-Mail info@sick.se

Switzerland

Phone +41 41 619 29 39 E-Mail contact@sick.ch

Taiwan

Phone +886-2-2375-6288 E-Mail sales@sick.com.tw

Thailand

Phone +66 2 645 0009 E-Mail marcom.th@sick.com

Turkey

Phone +90 (216) 528 50 00 E-Mail info@sick.com.tr

United Arab Emirates

Phone +971 (0) 4 88 65 878 E-Mail contact@sick.ae

United Kingdom

Phone +44 (0)17278 31121 E-Mail info@sick.co.uk

JSA

Phone +1 800.325.7425 E-Mail info@sick.com

Vietnam

Phone +65 6744 3732 E-Mail sales.gsg@sick.com

Detailed addresses and further locations at $\mbox{{\bf www.sick.com}}$

