

Board Version Numbers 2.1 & 3.0 are identical

The numbering system on the board denotes at which subcontract manufacturer it has been assembled. The two version numbers are functionally identical.

Changes to Firmware in 090811 version from 180314 Version

1. Number of bytes read during a read command is set to 16 and is not user configurable.
2. In stand-alone operation mode, the start address where the user can store the list of recognised transponder UIDs is at EEPROM location 12 now instead of 13.