




Unfasten the screw located under the sticker.

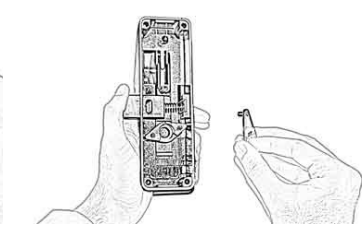


Remove back plate and driver.

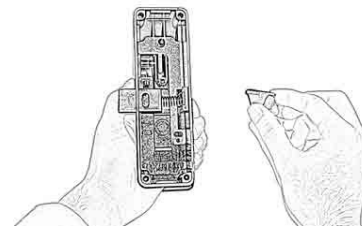


Remove both parts of the follower

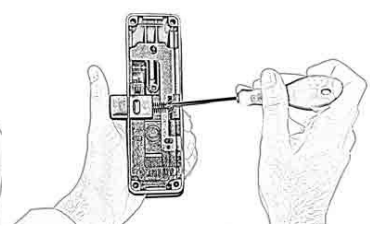


Carefully remove the spring from inbetween the latch and window.

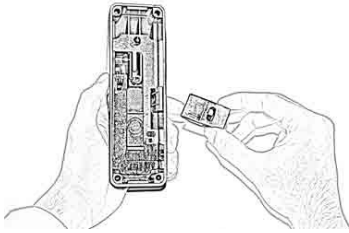


Slide Latch out.

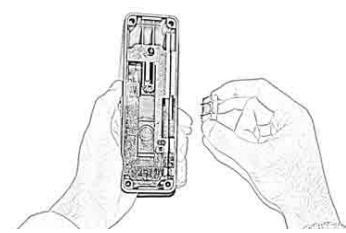


Remove blanking window.

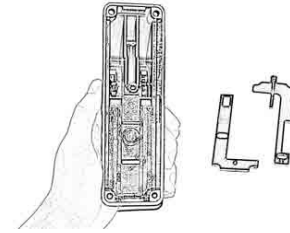


Remove both top and bottom sliders.

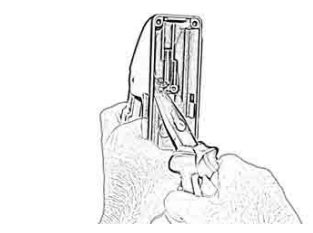

Press the lever, to ease pressure, allowing you to grip the 'Y' tang with pliers.

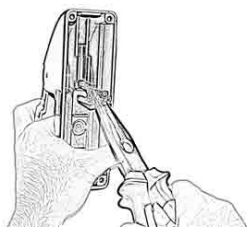

Carefully pull and remove 'Y' Tang while keeping the lever pressed.

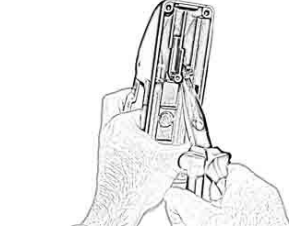


Locate 'Y' Tang on opposite side and push in firmly to secure correctly.




Unfasten screw from top slider.




Turn the slider over, relocate the screw and fasten.

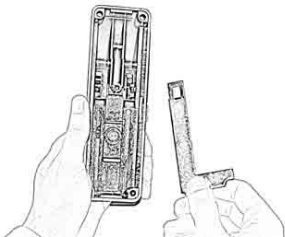


Original orientation of bottom slider

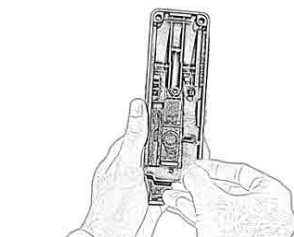


Turn slider over and position correctly over the extruding part of the 'Y' tang

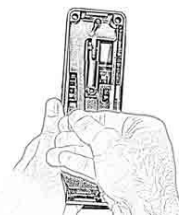


Position top slider in unit.

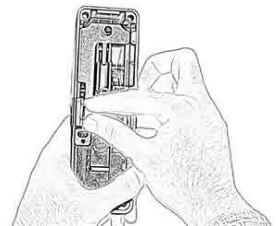


Locate blanking window in the square opening from which the latch was removed.

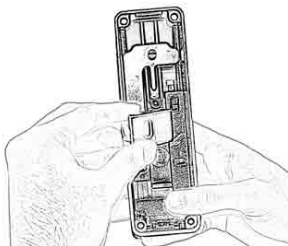


Slide latch into opening opposite the blanking window

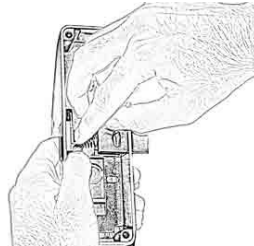


Feed the spring into the latch first, compress it then release into the blanking window when correctly positioned

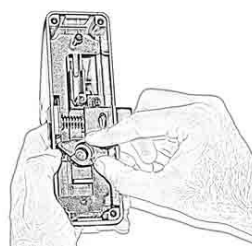

Re-insert both parts of the follower ensuring the 'feet' are located, correctly, into the holes on the sliders

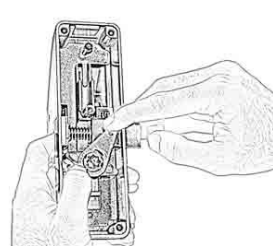

Position and secure the driver.

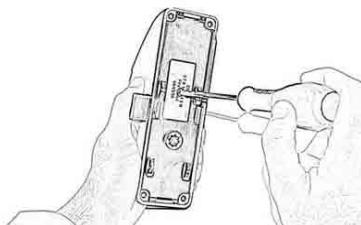

Place back plate on to the unit, locate and tighten screw. Do Not Over tighten. Once back plate is secure check the operation of the unit to ensure the mechanism is moving freely without any restrictions