


VSNC-FK(A)-M...-RD-G18  
Solenoid valve

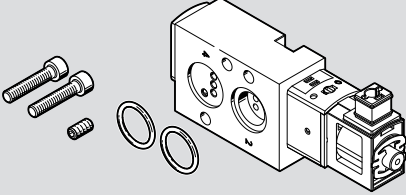

**FESTO**

Festo SE & Co. KG  
Ruiter Straße 82  
73734 Esslingen  
Deutschland  
+49 711 347-0  
[www.festo.com](http://www.festo.com)

Assembly instructions


8151262  
2022-02  
[8151264]



Translation of the original instructions

© 2022 all rights reserved to Festo SE & Co. KG

1 Applicable Documents

 All available documents for the product → [www.festo.com/sp](http://www.festo.com/sp).

2 Safety

2.1 Safety instructions

- Before working on the product, switch off the power supply and secure it against being switched on again.


2.2 Intended use

The solenoid valve is intended for mounting on a drive with a NAMUR plug pattern in accordance with VDI/VDE 3845 Sheet 1:2010-09.

3 Additional information

- Contact the regional Festo contact if you have technical problems → [www.festo.com](http://www.festo.com).
- Accessories and spare parts → [www.festo.com/catalogue](http://www.festo.com/catalogue).

4 Scope of delivery

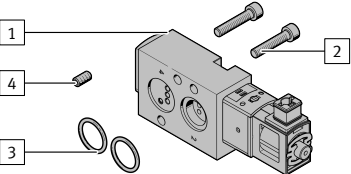

1 Solenoid valve (1x)  
single solenoid;  
5/2 or 3/2

2 Screw (2x)

3 O-ring (2x)

4 Coding pin (1x)

5 Preassembly

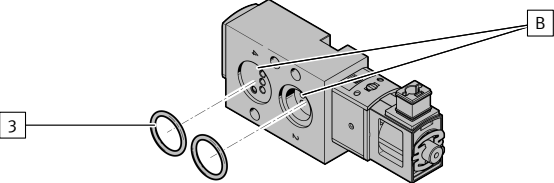


Fig.2

- Press the O-rings [3] into the recesses [B].

6 Assembly

6.1 Requirement for outdoor application

Protection against closure of 3/5 exhaust ducts, e.g. by frozen condensate or nesting insects.

- Take on-site environmental conditions into account.
- Take suitable protective measures. For example:
  - Use exhaust protection VABD-D3-SN-G14.
  - Duct exhaust air.

- Set manual override to unactuated prior to mounting.

Manual override

unactuated



actuated



6.2 Assembly of the solenoid valve

i

The position of the coding pin [4] determines the direction of movement at the drive.

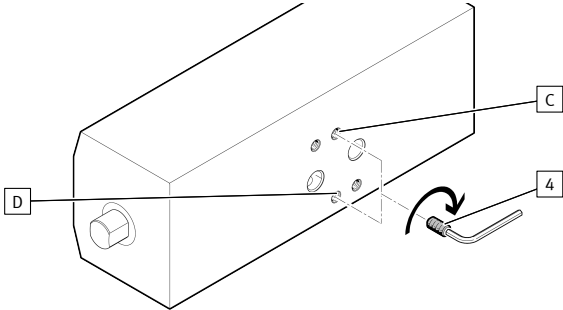


Fig.3

- Position the coding pin [4] on the thread [C]/[D] in accordance with the desired direction of movement.
- Screw the coding pin [4] into the thread [C]/[D] to the stop.

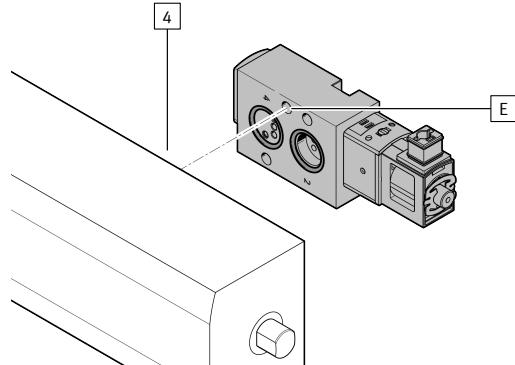


Fig.4

- Place the coding recess [E] on the coding pin [4].

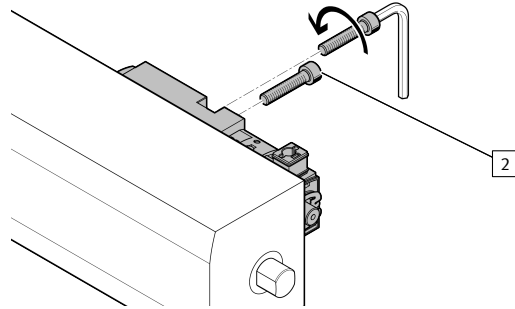
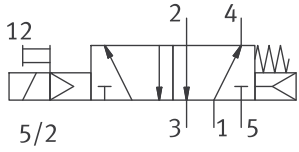
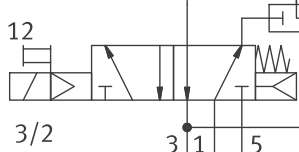
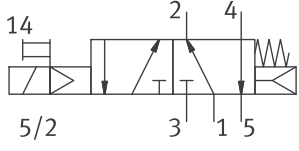
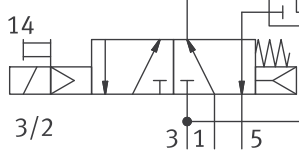


Fig.5

- Tighten the screws [2]. Tightening torque: 4.2 Nm ± 20%

7 Circuit diagrams

VSNC-...-M...-RD-G18	
-FK (single solenoid 5/2)	-FK (single solenoid 3/2)
	
-FKA (single solenoid 5/2)	-FKA (single solenoid 3/2)
	

Tab. 1: Circuit diagrams