


**MS6-LF**  
Filter

**FESTO**

Operating instruction

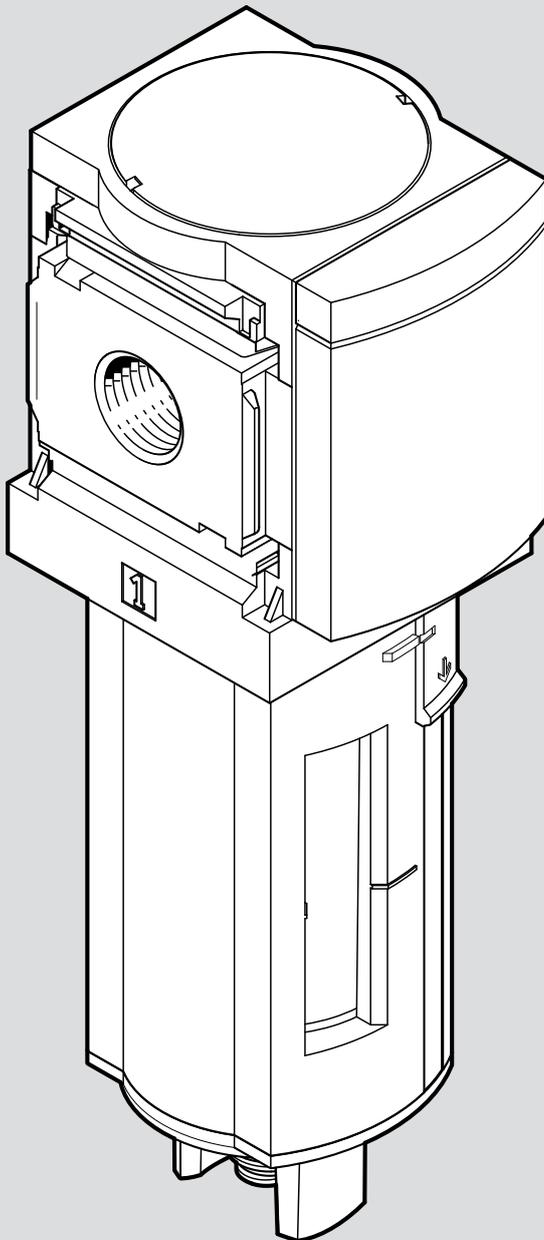

8206790

8206790  
2024-12d  
[8206792]

Original instructions

# Table of contents

<b>1</b>	<b>Applicable documents</b> .....	<b>5</b>
<b>2</b>	<b>Safety</b> .....	<b>5</b>
2.1	Safety instructions.....	5
2.2	Intended use.....	5
2.3	Training of qualified personnel.....	5
<b>3</b>	<b>Additional information</b> .....	<b>5</b>
<b>4</b>	<b>Product design</b> .....	<b>6</b>
<b>5</b>	<b>Assembly</b> .....	<b>6</b>
<b>6</b>	<b>Installation</b> .....	<b>6</b>
<b>7</b>	<b>Commissioning</b> .....	<b>6</b>
<b>8</b>	<b>Maintenance</b> .....	<b>7</b>
8.1	Draining condensate.....	7
8.2	Changing filter.....	7
8.3	Cleaning.....	7
<b>9</b>	<b>Fault clearance</b> .....	<b>8</b>
<b>10</b>	<b>Technical data</b> .....	<b>8</b>
10.1	Technical data, general.....	8
10.2	Technical data, pneumatic.....	9



## 1 Applicable documents



All available documents for the product → [www.festo.com/sp](http://www.festo.com/sp).

## 2 Safety

### 2.1 Safety instructions

- Only use the product in its original condition without unauthorised modifications.
- Only use the product if it is in perfect technical condition.
- Observe the identifications on the product.
- Store the product in a cool, dry environment protected from UV and corrosion. Keep storage times short.
- Take into account the ambient conditions at the location of use.
- Before working on the product, switch off the compressed air supply and lock it to prevent it from being switched on again.
- Use only media to which the materials used for the product are resistant. For evaluation of the media resistance → [www.festo.com/sp](http://www.festo.com/sp).

### 2.2 Intended use

The filter removes dirt particles and condensate from the compressed air.

### 2.3 Training of qualified personnel

Work on the product may only be carried out by qualified personnel who can evaluate the work and detect dangers. The qualified personnel have knowledge and experience in pneumatics.

## 3 Additional information

- Contact the regional Festo contact if you have technical problems → [www.festo.com](http://www.festo.com).
- Accessories and spare parts → [www.festo.com/catalogue](http://www.festo.com/catalogue).

## 4 Product design

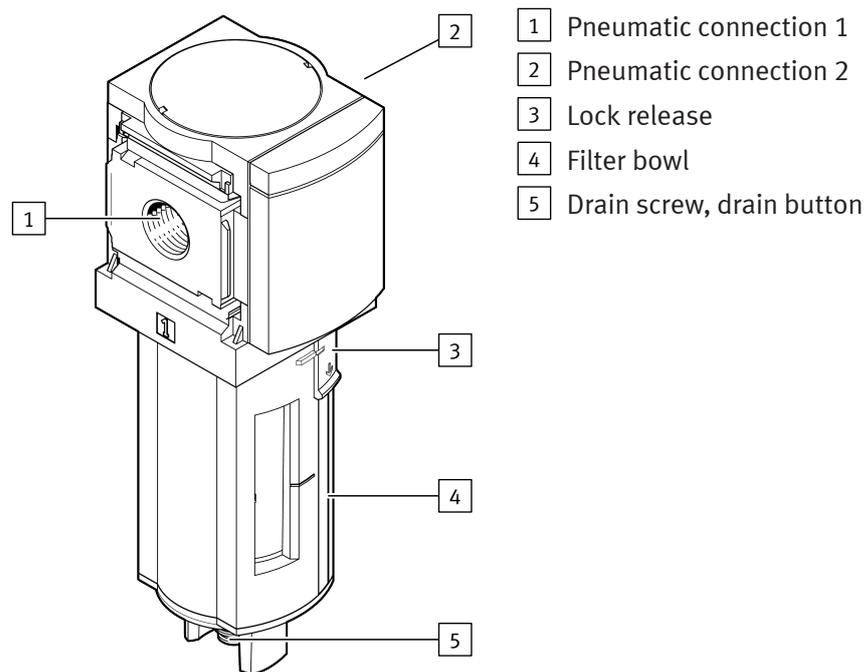


Fig. 1: Product design

## 5 Assembly

### Wall mounting

Requirements:

- Space required above the product:  $\geq 30$  mm
- Space required under the product:  $\geq 100$  mm
- Shut-off valves are installed in the compressed air supply line.

1. Align the product vertically in the flow direction from 1 to 2. The numbers on the housing are provided for orientation.
2. Mount the product on the mounting surface with the mounting accessories  
→ 3 Additional information.

## 6 Installation

1. Use fittings, seals and suitable tubing from the Festo catalogue → 3 Additional information.
2. Remove potential dirt particles in the supply lines by blowing out the pipes and hoses. This protects the product from premature failure or higher wear.
3. Screw the fittings into the pneumatic connections.
4. Insert suitable tubing into the fitting to the stop.
  - Position the tubing axial to the pneumatic connections.

## 7 Commissioning

- Slowly pressurise the system.
  - Observe the permissible pressure ranges → 10.2 Technical data, pneumatic. The input pressure  $p_1$  should always be at least 0.05 MPa (0.5 bar; 7.3 psi) higher than the set output pressure  $p_2$ .

## 8 Maintenance

### 8.1 Draining condensate

#### For MS6-LF-...-M

If the condensate reaches a level approx. 10 mm below the filter element:

1. Turn the drain screw anticlockwise as seen from below.  
⇒ The condensate is drained.
2. Turn the drain screw clockwise as seen from below.

#### For MS6-LF-...-H

Option 1:

- Briefly exhaust the product.  
⇒ The condensate drains automatically.

Option 2:

1. Turn the drain screw anticlockwise as seen from below.  
⇒ The condensate is drained.
2. Turn the drain screw clockwise as seen from below.

#### For MS6-LF-...-V/-VC

The product drains automatically.

The condensate can also be drained manually.

- Press the drain push button from bottom to top.  
⇒ The condensate is drained.

#### For MS6-LF-...-E...

The product drains automatically → Operating instructions for condensate drain PWEA-AC/-AP.

### 8.2 Changing filter



Replace the filter cartridge if the flow rate is reduced even though the pressure setting is unchanged.

1. Exhaust the product.
2. Pull down the lock release on the filter bowl.
3. Turn the filter bowl anticlockwise (as seen from below) until the stop can be felt.
4. Remove the filter bowl from the housing.
5. Unscrew the filter plate anticlockwise when viewed from below.
6. Remove the old filter.
7. Place the new filter on the filter plate and screw in the filter plate. Maximum tightening torque: 0.3 Nm
8. Mount the filter bowl:
  - Align the lock release of filter bowl with the cutout on the housing and insert it.
  - Turn the filter bowl clockwise until the lock audibly engages at the stop.

### 8.3 Cleaning

- Clean the outside of the product as required with a soft cloth.  
Permissible cleaning agents:
  - Soap solution, maximum +60 °C
  - Petroleum ether, free of aromatic compounds

## 9 Fault clearance

Malfunction	Cause	Remedy
Low flow rate. The operating pressure drops during air consumption.	The compressed air supply line is constricted.	– Check the compressed air supply line.
	The filter cartridge is dirty.	– Replace the filter cartridge.
Audible leakage at the condensate drain.	The condensate drain is leaking.	– Replace the product.

Tab. 1: Fault clearance

## 10 Technical data

### 10.1 Technical data, general

MS6-LF-...	-M	-H	-V/-VC	-E...
Certificates, declaration of conformity	→ <a href="http://www.festo.com/sp">www.festo.com/sp</a>			
Mounting position [°]	Vertical ± 5			
Condensate drain function	Manual rotating	Semi-automatic	Fully automatic, mechanical	Fully automatic, electric
Storage temperature [°C]	–10 ... +60			+1 ... +60
Temperature of medium <sup>1)</sup> [°C]	–10 ... +60			+1 ... +60
Ambient temperature [°C]	–10 ... +60			+1 ... +60
Pneumatic connection 1				
MS6-LF-1/4	G 1/4			
MS6-LF-3/8	G 3/8			
MS6-LF-1/2	G 1/2			
MS6-LF-AGB	G 1/4			
MS6-LF-AGC	G 3/8			
MS6-LF-AGD	G 1/2			
MS6-LF-AGE	G 3/4			
Pneumatic connection 2				
MS6-LF-1/4	G 1/4			
MS6-LF-3/8	G 3/8			
MS6-LF-1/2	G 1/2			
MS6-LF-AGB	G 1/4			
MS6-LF-AGC	G 3/8			
MS6-LF-AGD	G 1/2			
MS6-LF-AGE	G 3/4			

1) When using products with condensate drain, the operating medium must have a pressure dew point of  $\leq -10$  °C.

Tab. 2: Technical data, general

## 10.2 Technical data, pneumatic

MS6-LF-...		-M	-H	-V/-VC	-E...
Operating medium		Compressed air to ISO 8573-1:2010 [-:9:-]		Compressed air to ISO 8573-1:2010 [7:9:-]	Compressed air to ISO 8573-1:2010 [-:9:-]
		Inert gases			
Operating pressure	[MPa]	0 ... 2	0.15 ... 1.2	0.2 ... 1.2	0.08 ... 1.6
	[bar]	0 ... 20	1.5 ... 12	2 ... 12	0.8 ... 16
	[psi]	0 ... 290	21.75 ... 174	29 ... 174	11.6 ... 232

Tab. 3: Technical data, pneumatic

**Festo SE & Co. KG**

Ruiter Straße 82

73734 Esslingen

Germany

Phone: +49 711 347-0

[www.festo.com](http://www.festo.com)